RADIATION DETECTION



Table of contents

Area Monitors	. 11
SE International	. 11
AM-2×2 Radiation Area Monitor	. 13
AM-71313 Radiation Area Monitor	. 14
AM-7128 Radiation Area Monitor	. 15
AM-1X1 Radiation Area Monitor	. 16
Ludlum Measurements Inc	. 16
Model 375 Area Monitor Controller	. 19
Model 375/1 Digital Area Monitor	. 20
Model 375/2 Digital Area Monitor – Ludlum	. 21
Model 375/4 Gamma Area Monitor – Ludlum	. 22
Model 375-10 Digital Area Monitor – Ludlum	. 23
Model 375-9 Digital Area Monitor – Ludlum	. 24
Model 375-Dual Digital Area Monitor – Ludlum	. 25
Model 375-20 Monitoring System	. 26
Model 375-30	. 27
Model 375/31H	. 28
Model 3276 - Area Monitor Controller	. 29
Model 3277/1 Alpha-Beta Frisker	. 31
Model 375P-1000	. 32
Model 375P-2000	. 33
Model 375P-336 Series	. 34
Model 240 Series Alpha-Beta Floor and Wall Monitor	
Model 3002/FM Series Alpha-Beta Floor Monitor	
Model 239-1F Series Alpha-Beta Floor Contamination Monitor	
Model 375P-336 Surface Contamination Monitor – Ludlum	. 39
Handheld Monitors	40
Ludlum Measurements Inc	. 40
Model 26 – Frisker with Geiger Mueller Pancake	. 45
Model 26-1 Frisker with integrated GM Pancake – Ludlum	. 47
Model 26-3 – High Range Frisker	. 49
Model 26S – Integrated Scintillator Frisker	
Model 3000 Digital Survey Meter – Ludlum	
Model 3001 Multi-Detector Survey Meter - Ludlum	. 54
Model 3002 Alpha-Beta Digital Survey Meter	
Model 3003 Series Multi-Detector Ratemeter / SCA	
Model 3014 Dual-Detector Digital Survey Meter / SCA	
Model 9DP Pressurized Ion Chamber	
Model 9DP-1 Pressurized Ion Chamber	
Model 9DP* Ambient Dose Ion Chamber	
Model 9DP-1* Ambient Dose Ion Chamber	
Model 3-IS-1 Intrinsically Safe Gamma Ratemeter	. 67

Model 12-4 Neutron Dose Survey Meter Model 30-4 Digital Neutron Survey Meter Model 30-7 Series Neutron Dose Survey Meter With Optional Internal Gamma Detector Model 30-7 Series Neutron Dose Survey Meter With Optional Internal Gamma Detector Model 30-7 Series Lightweight Digital Neutron Survey Meter Model 12 General Purpose Survey Meter Model 14 General Purpose Survey Meter Model 16 General Purpose Survey Meter Model 18 General Purpose Survey Meter Model 3 General Purpose Survey Meter Model 3-97 Gamma Survey Meter with Alarm Model 3-97 Samma Survey Meter Model 195 with Model 43-132 High Range Alpha Ion Chamber Model 194 Dose Equivalent Rate Meter Model 2403 Pocket-Size Survey Meter with Alarm Model 3402 Pocket-Size Survey Meter with Alarm Model 35 Vehicle-Mounted Digital Survey Meter Model 30 Digital Survey Meter with Alarm Model 30 Digital Survey Meter with Alarm Model 30 Digital Survey Meter - Ludlum Model 3001-MERK response kit Model 3001-ERK mergency Response Kit Model 244-1 SARZ Emergency Response Kit Model 26-2 - Integrated Frisker with Timed Frisk Model 70 Series - Ludlum Model 133-6 GM Detector - Ludlum Model 133-6 GM Detector - Ludlum Model 133-6 GM Detector - Ludlum Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum Model 44-3 Rama Scintillator - Ludlum Model 44-9 Ambient Dose Equivalent Filter - Ludlum Model 44-9 Ambient Dose Equivalent Filter - Ludlum Model 44-9 Ambient Dose Equivalent Filter - Ludlum Model 43-5 Alpha Scintillator - Ludlum Model 44-9 Ambient Dose Equivalent Filter - Ludlum Model 45-5 Alpha Scintillator - Ludlum Model	Model 3-IS Intrinsically Safe Survey Meter	68
Model 30-4 Digital Neutron Survey Meter Model 3007 Series Neutron Dose Survey Meter With Optional Internal Gamma Detector Model 3007 Series Lightweight Digital Neutron Survey Meter Model 30-7 Series Lightweight Digital Neutron Survey Meter Model 12 General Purpose Survey Meter Model 14C General Purpose Survey Meter Model 16 General Purpose Survey Meter Model 18 General Purpose Survey Meter Model 3 General Purpose Survey Meter Model 3-97 Gamma Survey Meter Model 3-97 Gamma Survey Meter Model 3-98 Lizi & Alpha-Beta-Gamma Survey Meter Model 3-98 125 is Alpha-Beta-Gamma Survey Meter Model 3-98 125 is Alpha-Beta-Gamma Survey Meter Model 2403 Pocket-Size Survey Meter with Alarm Model 2403 Pocket-Size Survey Meter with Alarm Model 30 Digital Survey Meter - 88 Model 30 Digita	Model 12-4 Neutron Dose Survey Meter	69
Model 3007 Series Neutron Dose Survey Meter With Optional Internal Gamma Detector Model 30-7 Series Lightweight Digital Neutron Survey Meter 7 Model 12 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 3 General Purpose Survey Meter 8 Model 3 General Purpose Survey Meter 8 Model 3 General Purpose Survey Meter 9 Model 3 General Purpose Survey Meter 9 Model 3 General Purpose Survey Meter 9 Model 3-97 Gamma Survey Meter 9 Model 3-97 Gamma Survey Meter 9 Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 9 Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 9 Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 9 Model 2403 Pocket-Size Survey Meter 9 Model 2403 Pocket-Size Survey Meter 9 Model 2403 Pocket-Size Survey Meter 9 Model 35 Vehicle-Mounted Digital Survey Meter 9 Model 30 Digital Survey Meter - Ludlum 9 Model 30 Digital Survey Meter - Ludlum 9 Model 3001-JeKR Kenergency Response & NORM Kit 9 Model 3001-ZRK Emergency Response & NORM Kit 9 Model 3001-ZRK Emergency Response & NORM Kit 9 Model 70 Series - Ludlum 9 Model 70 Series - Ludlum 9 Model 33-6 GM Detector - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 44-3 RAL Gamma Scintillator - Ludlum 9 Model 44-3 Rhal Scintillator - Ludlum 9 Model 44-3 Rhal Scintillator - Ludlum 9 Model 44-3 Rhal Scintillator - Ludlum 9 M	·	
Model 3007 Series Neutron Dose Survey Meter With Optional Internal Gamma Detector Model 30-7 Series Lightweight Digital Neutron Survey Meter 7 Model 12 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 3 General Purpose Survey Meter 8 Model 3 General Purpose Survey Meter 8 Model 3 General Purpose Survey Meter 9 Model 3 General Purpose Survey Meter 9 Model 3 General Purpose Survey Meter 9 Model 3-97 Gamma Survey Meter 9 Model 3-97 Gamma Survey Meter 9 Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 9 Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 9 Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 9 Model 2403 Pocket-Size Survey Meter 9 Model 2403 Pocket-Size Survey Meter 9 Model 2403 Pocket-Size Survey Meter 9 Model 35 Vehicle-Mounted Digital Survey Meter 9 Model 30 Digital Survey Meter - Ludlum 9 Model 30 Digital Survey Meter - Ludlum 9 Model 3001-JeKR Kenergency Response & NORM Kit 9 Model 3001-ZRK Emergency Response & NORM Kit 9 Model 3001-ZRK Emergency Response & NORM Kit 9 Model 70 Series - Ludlum 9 Model 70 Series - Ludlum 9 Model 33-6 GM Detector - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 44-3 RAL Gamma Scintillator - Ludlum 9 Model 44-3 Rhal Scintillator - Ludlum 9 Model 44-3 Rhal Scintillator - Ludlum 9 Model 44-3 Rhal Scintillator - Ludlum 9 M	Model 12-4-7 Neutron Dose Survey Meter	71
Model 12 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 3 General Purpose Survey Meter 7 Model 3 General Purpose Survey Meter 7 Model 3 A General Purpose Survey Meter with Alarm 8 Model 3-97 Gamma Survey Meter 8 Model 195 with Model 43-132 High Range Alpha Ion Chamber 8 Model 194 Dose Equivalent Rate Meter 8 Model 2403 Pocket-Size Survey Meter 8 Model 2403 Pocket-Size Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-ERK Emergency Response kit 9 Model 2241-3RK2 Emergency Response Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 9 Mode	Model 3007 Series Neutron Dose Survey Meter With Optional Internal Gamma Detector	72
Model 12 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 16 General Purpose Survey Meter 7 Model 3 General Purpose Survey Meter 7 Model 3 General Purpose Survey Meter 7 Model 3 A General Purpose Survey Meter with Alarm 8 Model 3-97 Gamma Survey Meter 8 Model 195 with Model 43-132 High Range Alpha Ion Chamber 8 Model 194 Dose Equivalent Rate Meter 8 Model 2403 Pocket-Size Survey Meter 8 Model 2403 Pocket-Size Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-ERK Emergency Response kit 9 Model 2241-3RK2 Emergency Response Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 9 Mode	Model 30-7 Series Lightweight Digital Neutron Survey Meter	74
Model 14G General Purpose Survey Meter		
Model 18 General Purpose Survey Meter 77 Model 3 General Purpose Survey Meter 77 Model 3A General Purpose Survey Meter with Alarm 87 Model 3-97 Gamma Survey Meter 88 Model 3-97 Gamma Survey Meter 88 Model 195 with Model 43-132 High Range Alpha Ion Chamber 88 Model 195 with Model 43-132 High Range Alpha Ion Chamber 88 Model 194 Dose Equivalent Rate Meter 88 Model 2403 Pocket-Size Survey Meter with Alarm 88 Model 2402 Pocket-Size Survey Meter with Alarm 88 Model 30 Digital Survey Meter - Ludlum 89 Model 3001-MERK response kit 99 Model 3001-2RK Emergency Response & NORM Kit 99 Model 3001-2RK Emergency Response & NORM Kit 99 Model 26-2 - Integrated Frisker with Timed Frisk 99 Model 3019 Digital Background Survey Meter - Ludlum 99 Model 133-6 GM Detector - Ludlum 99 Model 133-6 GM Detector - Ludlum 99 Model 133-2 GM Detector - Ludlum 99 Model 133-2 GM Detector - Ludlum 99 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 99 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 100 Model 44-3 Ranger Scintillator - Ludlum 100 Model 44-3 Ranger Scintillator - Ludlum 100 Model 44-3 Ranger Scintillator - Ludlum 100 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 100 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 100 Model 43-92 Alpha Scintillator - Ludlum 100 Model 43-95 Alpha Scintillator - Ludlum 100 Model 43-96 Alpha Scintillator - Ludlum 100 Model 43-97 Alpha Scintillator - Ludlum 100 Model 43-96 Alpha Scinti		
Model 3 General Purpose Survey Meter 7 Model 3A General Purpose Survey Meter 8 Model 3-97 Gamma Survey Meter 8 Model 195 with Model 43-132 High Range Alpha Ion Chamber 8 Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 8 Model 194 Dose Equivalent Rate Meter 8 Model 2403 Pocket-Size Survey Meter 8 Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 30 Digital Survey Meter - Ludlum 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-MERK response kit 9 Model 3001-MERK response kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 302-Biglal Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 M	Model 16 General Purpose Survey Meter	77
Model 3A General Purpose Survey Meter with Alarm 8 Model 3-97 Gamma Survey Meter 8 Model 195 with Model 43-132 High Range Alpha Ion Chamber 8 Model 3-98 125 Is Alpha-Beta-Gamma Survey Meter 8 Model 194 Dose Equivalent Rate Meter 8 Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 201-2 Integrated Frisker with Timed Frisk 9 Model 202-1 Integrated Frisker with Timed Frisk 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 303-4 GM Detector - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-4 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-3 Beta Scintillator Eduilum	Model 18 General Purpose Survey Meter	78
Model 3A General Purpose Survey Meter with Alarm 8 Model 3-97 Gamma Survey Meter 8 Model 195 with Model 43-132 High Range Alpha Ion Chamber 8 Model 3-98 125 Is Alpha-Beta-Gamma Survey Meter 8 Model 194 Dose Equivalent Rate Meter 8 Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 201-2 Integrated Frisker with Timed Frisk 9 Model 202-1 Integrated Frisker with Timed Frisk 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 303-4 GM Detector - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-4 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-3 Beta Scintillator Eduilum	Model 3 General Purpose Survey Meter	79
Model 3-97 Gamma Survey Meter 8 Model 195 with Model 43-132 High Range Alpha Ion Chamber 8 Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 8 Model 194 Dose Equivalent Rate Meter 8 Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-BEKK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 2041-3RK2 Emergency Response & NORM Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 309 Digital Background Survey Meter - Ludlum 9 Model 309 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 9 Model 44-3 Back Scintillator - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 43-9 Alpha Scintillator - Ludlum		
Model 195 with Model 43-132 High Range Alpha Ion Chamber 8 Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 8 Model 1940 Dose Equivalent Rate Meter 8 Model 2403 Pocket-Size Survey Meter 8 Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-ERK Emergency Response & NORM Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 33-6 GM Detector - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 43-9 Alpha Scintillator - Ludlum 10 Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum 10 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 10 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 11 <td></td> <td></td>		
Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter 8 Model 194 Dose Equivalent Rate Meter 8 Model 2402 Pocket-Size Survey Meter 8 Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-MERK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 313-6 GM Detector - Ludlum 9 Model 133-4 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Apha Scintillator - Ludlum 10 Model 44-9 Alpha Beta Gamma Detector - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 43-7 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10	·	
Model 194 Dose Equivalent Rate Meter 8 Model 2403 Pocket-Size Survey Meter 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 2241-3RK2 Emergency Response & It 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-3 NAL Gamma Scintillator - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 43-92 Alpha Scintillator - Ludlum 10 Model 43-92 Alpha Scintillator - Ludlum 10 Model 43-90 Alpha Scintillator - Ludlum 10 Model 43-90 Alpha Scintillator - Ludlum 10 Model 43-95 Alpha Scintillator - Ludlum 10		
Model 2403 Pocket-Size Survey Meter 8 Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-ZRK Emergency Response & NORM Kit 9 Model 2241-3RK2 Emergency Response Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-4 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-2 Back Scintillator - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Apha Beta Gamma Detector - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10	·	
Model 2402 Pocket-Size Survey Meter with Alarm 8 Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 44-9 Pancake GM Detector - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 2241-3RK2 Emergency Response Kit 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 9 Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 43-92 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 9DP-1 Ion Chamber Survey Meter - Ludlum <t< td=""><td>•</td><td></td></t<>	•	
Model 35 Vehicle-Mounted Digital Survey Meter 8 Model 30 Digital Survey Meter - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 2241-3RK2 Emergency Response Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-1 Deta Scintillator - Ludlum 10 Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 43-92 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 49-92 Alpha Scintillator - Ludlum 10 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 11 <	·	
Model 30 Digital Survey Meter - Ludlum 8 Model 44-9 Pancake GM Detector - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 2241-3RK2 Emergency Response Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-4 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 43-92 Alpha Scintillator - Ludlum 10 Model 43-93 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum 10 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 11	•	
Model 44-9 Pancake GM Detector - Ludlum 8 Model 3001-MERK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 2241-3RK2 Emergency Response Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-1 Nat Gamma Scintillator - Ludlum 10 Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-3 Benergy Compensated GM Detector - Ludlum 10 Model 44-3 Benergy Compensated GM Detector - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Alpha Beta Gamma Detector - Ludlum 10 Model 43-9 Alpha Scintillator - Ludlum 10 Model 43-9 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum<		
Model 3001-MERK response kit 9 Model 3001-2RK Emergency Response & NORM Kit 9 Model 2241-3RK2 Emergency Response Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-3 Beta Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 43-92 Alpha Scintillator - Ludlum 10 Model 43-95 Alpha Beta Gamma Detector - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum 11 Model 9DP-1 Ion Chamber Survey Meter - Ludlum	-	
Model 3001-2RK Emergency Response & NORM Kit 9 Model 2241-3RK2 Emergency Response Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-4 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 43-9 Alpha Beta Gamma Detector - Ludlum 10 Model 43-9 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum 11 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 11 Tracerco 11 Contamination Monitor T401 - Tracerco 11		
Model 2241-3RK2 Emergency Response Kit 9 Model 26-2 - Integrated Frisker with Timed Frisk 9 Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-3 Energy Compensated GM Detector - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 44-7 Alpha Beta Gamma Detector - Ludlum 10 Model 43-9 Alpha Scintillator - Ludlum 10 Model 43-9 Alpha Scintillator - Ludlum 10 Model 43-9 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum 11 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 11 Tracerco 11 Contamination Monitor T401 - Tracerco 11 Contamination Monitor T403 - Tracerco 11 <td>·</td> <td></td>	·	
Model 26-2 - Integrated Frisker with Timed Frisk9Model 70 Series - Ludlum9Model 3019 Digital Background Survey Meter - Ludlum9Model 133-6 GM Detector - Ludlum9Model 133-4 GM Detector - Ludlum9Model 133-2 GM Detector - Ludlum9Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum10Model 44-2 NAL Gamma Scintillator - Ludlum10Model 44-1 Beta Scintillator - Ludlum10Model 44-9 Exposure Filter Kit - Ludlum10Model 44-9 Ambient Dose Equivalent Filter - Ludlum10Model 44-7 Alpha Beta Gamma Detector - Ludlum10Model 43-92 Alpha Scintillator - Ludlum10Model 43-95 Alpha Scintillator - Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum10Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Dose Rate Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS - Tracerco12		
Model 70 Series - Ludlum 9 Model 3019 Digital Background Survey Meter - Ludlum 9 Model 133-6 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-3 Energy Compensated GM Detector - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 43-92 Alpha Scintillator - Ludlum 10 Model 43-95 Alpha Scintillator - Ludlum 10 Model 43-5 Alpha Scintillator - Ludlum 10 Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum 11 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 11 Tracerco 11 Contamination Monitor T401 - Tracerco 11 Dose Rate Monitor T402 & T402HR - Tracerco 11 Contamination Monitor T403 - Tracerco 11 Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco 12 NORM Monitor-IS - Tracerco 12		
Model 3019 Digital Background Survey Meter - Ludlum9Model 133-6 GM Detector - Ludlum9Model 133-4 GM Detector - Ludlum9Model 133-2 GM Detector - Ludlum9Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum10Model 44-2 NAL Gamma Scintillator - Ludlum10Model 44-1 Beta Scintillator - Ludlum10Model 44-9 Ambient Dose Equivalent Filter - Ludlum10Model 44-9 Exposure Filter Kit - Ludlum10Model 44-7 Alpha Beta Gamma Detector - Ludlum10Model 43-92 Alpha Scintillator - Ludlum10Model 43-65 Alpha Scintillator - Ludlum10Model 43-65 Alpha Scintillator - Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum11Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Contamination Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS - Tracerco12	-	
Model 133-6 GM Detector - Ludlum 9 Model 133-4 GM Detector - Ludlum 9 Model 133-2 GM Detector - Ludlum 9 Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum 10 Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-3 Energy Compensated GM Detector - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 44-7 Alpha Beta Gamma Detector - Ludlum 10 Model 43-92 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum 11 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 11 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 11 Tracerco 11 Contamination Monitor T401 - Tracerco 11 Contamination Monitor T402 & T402HR - Tracerco 11 Contamination Monitor T403 - Tracerco 11 Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco [™] 11 NORM Monitor-IS - Tracerco		
Model 133-4 GM Detector - Ludlum9Model 133-2 GM Detector - Ludlum9Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum10Model 44-2 NAL Gamma Scintillator - Ludlum10Model 44-1 Beta Scintillator - Ludlum10Model 44-38 Energy Compensated GM Detector - Ludlum10Model 44-9 Ambient Dose Equivalent Filter - Ludlum10Model 44-9 Exposure Filter Kit - Ludlum10Model 44-7 Alpha Beta Gamma Detector - Ludlum10Model 43-92 Alpha Scintillator - Ludlum10Model 43-5 Alpha Scintillator - Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum11Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Contamination Monitor T403 - Tracerco11Contamination Monitor T403 - Tracerco11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco11NORM Monitor-IS - Tracerco12		
Model 133-2 GM Detector - Ludlum9Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum10Model 44-2 NAL Gamma Scintillator - Ludlum10Model 44-1 Beta Scintillator - Ludlum10Model 44-38 Energy Compensated GM Detector - Ludlum10Model 44-9 Ambient Dose Equivalent Filter - Ludlum10Model 44-9 Exposure Filter Kit - Ludlum10Model 44-7 Alpha Beta Gamma Detector - Ludlum10Model 43-92 Alpha Scintillator - Ludlum10Model 43-65 Alpha Scintillator - Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum11Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Contamination Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS - Tracerco12		
Model 44-3 NAL Low Energy Gamma Scintillator – Ludlum10Model 44-2 NAL Gamma Scintillator – Ludlum10Model 44-1 Beta Scintillator – Ludlum10Model 44-3 Energy Compensated GM Detector – Ludlum10Model 44-9 Ambient Dose Equivalent Filter – Ludlum10Model 44-9 Exposure Filter Kit – Ludlum10Model 44-7 Alpha Beta Gamma Detector – Ludlum10Model 43-92 Alpha Scintillator – Ludlum10Model 43-65 Alpha Scintillator – Ludlum10Model 43-5 Alpha Scintillator – Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter – Ludlum11Model 9DP-1 Ion Chamber Survey Meter – Ludlum11Tracerco11Contamination Monitor T401 – Tracerco11Dose Rate Monitor T402 & T402HR – Tracerco11Contamination Monitor T403 – Tracerco11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS – Tracerco12		
Model 44-2 NAL Gamma Scintillator - Ludlum 10 Model 44-1 Beta Scintillator - Ludlum 10 Model 44-38 Energy Compensated GM Detector - Ludlum 10 Model 44-9 Ambient Dose Equivalent Filter - Ludlum 10 Model 44-9 Exposure Filter Kit - Ludlum 10 Model 44-7 Alpha Beta Gamma Detector - Ludlum 10 Model 43-92 Alpha Scintillator - Ludlum 10 Model 43-65 Alpha Scintillator - Ludlum 10 Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum 11 Model 9DP-1 Ion Chamber Survey Meter - Ludlum 11 Tracerco 11 Contamination Monitor T401 - Tracerco 11 Contamination Monitor T403 - Tracerco 11 Contamination Monitor T403 - Tracerco 11 Tontamination Safe Radiation Dose Rate Monitor (T202) Tracerco™ 11 NORM Monitor-IS - Tracerco 12		
Model 44-1 Beta Scintillator - Ludlum10Model 44-38 Energy Compensated GM Detector - Ludlum10Model 44-9 Ambient Dose Equivalent Filter - Ludlum10Model 44-9 Exposure Filter Kit - Ludlum10Model 44-7 Alpha Beta Gamma Detector - Ludlum10Model 43-92 Alpha Scintillator - Ludlum10Model 43-65 Alpha Scintillator - Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum11Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Dose Rate Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco11NORM Monitor-IS - Tracerco12		
Model 44-38 Energy Compensated GM Detector - Ludlum10Model 44-9 Ambient Dose Equivalent Filter - Ludlum10Model 44-9 Exposure Filter Kit - Ludlum10Model 44-7 Alpha Beta Gamma Detector - Ludlum10Model 43-92 Alpha Scintillator - Ludlum10Model 43-65 Alpha Scintillator - Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum11Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Dose Rate Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS - Tracerco12		
Model 44-9 Ambient Dose Equivalent Filter - Ludlum10Model 44-9 Exposure Filter Kit - Ludlum10Model 44-7 Alpha Beta Gamma Detector - Ludlum10Model 43-92 Alpha Scintillator - Ludlum10Model 43-65 Alpha Scintillator - Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum11Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Dose Rate Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11T406 X-ray Monitor11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™12NORM Monitor-IS - Tracerco12		
Model 44-9 Exposure Filter Kit – Ludlum10Model 44-7 Alpha Beta Gamma Detector – Ludlum10Model 43-92 Alpha Scintillator – Ludlum10Model 43-65 Alpha Scintillator – Ludlum10Model 43-5 Alpha Scintillator – Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter – Ludlum11Model 9DP-1 Ion Chamber Survey Meter – Ludlum11Tracerco11Contamination Monitor T401 – Tracerco11Dose Rate Monitor T402 & T402HR – Tracerco11Contamination Monitor T403 – Tracerco11T406 X-ray Monitor11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS – Tracerco12		
Model 44-7 Alpha Beta Gamma Detector – Ludlum10Model 43-92 Alpha Scintillator – Ludlum10Model 43-65 Alpha Scintillator – Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter – Ludlum11Model 9DP-1 Ion Chamber Survey Meter – Ludlum11Tracerco11Contamination Monitor T401 – Tracerco11Dose Rate Monitor T402 & T402HR – Tracerco11Contamination Monitor T403 – Tracerco11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS – Tracerco12		
Model 43-92 Alpha Scintillator – Ludlum10Model 43-65 Alpha Scintillator – Ludlum10Model 43-5 Alpha Scintillator – Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter – Ludlum11Model 9DP-1 Ion Chamber Survey Meter – Ludlum11Tracerco11Contamination Monitor T401 – Tracerco11Dose Rate Monitor T402 & T402HR – Tracerco11Contamination Monitor T403 – Tracerco11T406 X-ray Monitor11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco12NORM Monitor-IS – Tracerco12		
Model 43-65 Alpha Scintillator - Ludlum10Model 43-5 Alpha Scintillator - Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum11Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Dose Rate Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11T406 X-ray Monitor11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco11NORM Monitor-IS - Tracerco12		
Model 43-5 Alpha Scintillator – Ludlum10Model 9DP Ambient Dose Ion Chamber Survey Meter – Ludlum11Model 9DP-1 Ion Chamber Survey Meter – Ludlum11Tracerco11Contamination Monitor T401 – Tracerco11Dose Rate Monitor T402 & T402HR – Tracerco11Contamination Monitor T403 – Tracerco11T406 X-ray Monitor11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS – Tracerco12	·	
Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum11Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Dose Rate Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11T406 X-ray Monitor11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS - Tracerco12	·	
Model 9DP-1 Ion Chamber Survey Meter - Ludlum11Tracerco11Contamination Monitor T401 - Tracerco11Dose Rate Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11T406 X-ray Monitor11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS - Tracerco12	·	
Tracerco11Contamination Monitor T401 - Tracerco11Dose Rate Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11T406 X-ray Monitor11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS - Tracerco12	·	
Contamination Monitor T401 - Tracerco11Dose Rate Monitor T402 & T402HR - Tracerco11Contamination Monitor T403 - Tracerco11T406 X-ray Monitor11Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™11NORM Monitor-IS - Tracerco12		
Dose Rate Monitor T402 & T402HR - Tracerco 11 Contamination Monitor T403 - Tracerco 11 T406 X-ray Monitor 11 Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™ 11 NORM Monitor-IS - Tracerco 12		
Contamination Monitor T403 - Tracerco		
T406 X-ray Monitor		
Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™		
NORM Monitor-IS – Tracerco	·	
	Polimaster	

	PM1401K-3M Multipurpose Hand-Held Radiation Monitor/Identifier	. 122
	PM1401K-3P Multipurpose Hand-Held Radiation Monitor/Identifier	. 123
	PoliPack® G-S Backpack Radiation Detector	124
	PoliPack® GN Backpack Radiation Detector	125
	PoliPack® G Backpack Radiation Detector	126
	PoliPack® GN-S Backpack Radiation Detector	. 127
	Bertin Instruments	127
	MINITRACE CSDF - Bertin Instruments	. 129
	MiniTRACE S5 - Saphymo	132
	MiniTRACE γ	. 133
	SaphyRAD S	134
	SaphyRAD C	. 135
	SaphyRAD E Multiprobe - Bertin Instruments	136
	AlphaE - Bertin Instruments	. 137
	SaphyRAD MS Dom-420 - Bertin Instruments	. 138
	SE International	138
	Radiation Alert Monitor 200	141
	Radiation Alert MC1K	142
	Radiation Alert Frisker	143
	Radiation Alert Ranger	. 144
	Radiation Alert Monitor 4EC	146
	Radiation Alert® Ranger EXP	. 147
	Radiation Alert Monitor 1000EC	149
	Radiation Alert® GammaView	151
	Radiation Alert Monitor 4	152
	GEORADIS s.r.o.	152
	RT-20 Compact handheld Radiation Detector – Georadis	154
	RT-21 Handheld Radiation Detector - Georadis	155
	RT-22 Handheld Radiation Detector with GeoView Software - Georadis	156
	RT-30 Mk II – Georadis	157
	Kromek	158
	D5 RIID	. 160
	D3S ID	. 161
	RayMon	162
	Radiation Solutions Inc.	162
	RS-230 BGO Handheld Spectrometer - Radiation Solutions	. 164
	RS-125 Handheld Spectrometer - Radiation Solutions	. 165
	RS-125 Handheld Spectrometer - Radiation Solutions	. 166
Dor	sonal Electronic Dosimeters	167
Pei		
	Tracerco	
	PED2 (Personal Electronic Dosimeter) - Tracerco	
	PED2 – ER (Personal Electronic Dosimeter) – Tracerco	
	PED2-IS (Personal Electronic Dosimeter) – Tracerco	
	PED-Blue (Personal Electronic Dosimeter) – Tracerco	
	PED+ (Personal Electronic Dosimeter) – Tracerco	
	PED-ER (Personal Electronic Dosimeter) – Tracerco	
	PED-ER+ (Personal Electronic Dosimeter) – Tracerco	
	Dosimeter software DoseVision™ and DoseVision™ Tracerco	
	Polimaster	180

	PM1703GNA-II MBT Personal Radiation Detector/Dosimeter	183
	PM1703GNA-II/BT Personal Radiation Detector	184
	PM1703MO-II BT Personal Radiation Detector/Dosimeter	185
	PM1703MA-II/BT Personal Radiation Detector	
	PM1610B X-Ray and Gamma Radiation Personal Dosimeter	187
	PM1610 X-Ray and Gamma Radiation Personal Dosimeter	188
	PM1605BT Personal Radiation Monitor/Dosimeter	189
	PoliSimeter™ ERB Electronic Personal Dosimeter	190
	PoliSimeter™ ER Electronic Personal Dosimeter	191
	PoliSimeter™ Electronic Personal Dosimeter	192
	RadFlash® Electronic Personal Dosimeter	193
	Bertin Instruments	193
	Saphydose gamma i	195
	SE International	195
	Radiation Alert® Sentry EC	197
	Rad-60 Alarming Dosimeter	198
	Ludlum Measurements Inc	198
	Model 23-1 Electronic Personal Dosimeter – Ludlum	200
~ 7	T & Gamma Cameras	201
LZ		
	3D Plus	
	Spid-X	
	Kromek	
	GR Series Gamma Spectrometers	205
	Quant GR1	
	TN15	208
	RayMon	
	Sigma 25/50	
	K102	211
Ρo	rtable Isotope Identifiers	212
	•	
	Kromek	
	GR Series Gamma Spectrometers	
	D5 RIID	
	D3S ID	
	RayMonAARM	
	Polimaster	
	PM1401K-3M Multipurpose Hand-Held Radiation Monitor/Identifier	
	PM1401K-3P Multipurpose Hand-Held Radiation Monitor/Identifier	
	GEORADIS s.r.o.	
	RT-30 Gamma-Ray Spectrometer with Nuclide ID Capability – Georadis	
	K1-30 Gamma-Kay Spectrometer with Nuclide 1D Capability - Georadis	224
En	vironmental Monitoring	225
	Bertin Instruments	225
	GammaTRACER Spider Autonomous Gamma Monitor for Emergencies – Saphymo	
	AlphaGUARD-Radon Monitor – Bertin Instruments	
	ShortLINK Short-Range Environmental Radiation Monitoring Network – Bertin/ Saphymo	
	GammaTRACER Autonomous Radiation Monitoring Probe – Saphymo	
	RAR F Air Monitoring Reacon	235

SkyLINK Wide-Range Environmental Radiation Monitoring Network - Bertin/ Saphymo	236
AlphaE - Bertin Instruments	
SpectroTRACER Environmental Radiation Monitor – Saphymo	
Skydose Dosimetry System – Bertin Instruments	
Coriolis RECON - Bertin Instruments	
Coriolis Micro – Bertin Instruments	
Ludlum Measurements Inc.	
Model 3101 Portable Tritium in Air Monitor	
Model 334AB-G Alpha-Beta Particulate Monitor	
Model 334A Alpha Air Monitor	
Model 3100 Portable Tritium in Air Monitor	
SDEC France	
AM 3000 N - Air Sampler for Asbestos Diagnosis in Nuclear Environments - NF43-050 version	
NF X43-269, NF EN ISO 13137	
AM 3000 – Air Sampler for Asbestos Diagnosis – NF43-050 version 2021, NF X43-269, NF EN	
13137	
Battery Operated Field Electric Vacuum Pump PAV 2000 : For soil sampling	
AS 5000 Aerosol & Iodine Sampler - SDEC	
AS 3000 AEROSOL & IODINE SAMPLER - SDEC	
GEORADIS s.r.o.	
GT-40 Gamma Ray Spectrometer	257
Centronic Nuclear	258
Alpha, Beta & Gamma Detectors – Centronic	260
Beta & Gamma Detectors - Centronic	261
Ultra Electronics	261
CMS Gamma – Lab Impex	263
Portable HPGE	264
PHDS	264
GeGI: Imaging HPGe Detector	
NP Radiochemistry Imager	
Fulcrum: HPGe Detector	
Fulcrum-40h: 40% HPGe Detector	
LoPro HPGe Detector	
Laboratory Equipment	
Ludlum Measurements Inc.	271
Model 3030E Alpha-Beta Scaler	273
Model 2000 General Purpose Scaler	274
Model 2100-1 Sample Counter	275
Model 2200 Scaler-Ratemeter	276
Model 2100 Conveyorized Sample Counter	277
Model 3030E with 43-10-1 Alpha-Beta Sample Counter	278
Model 3030-2 Simultaneous Alpha-Beta Sample Counter	
Model 3030 Alpha-Beta Sample Counter	
Model 3030P Alpha-Beta Sample Counter	
Probes (Ludlum)	
SDEC France	
EDP 9002 - Double Mast Electrodeposition Equipment	
PRC 14: Maintenance Pump – For Cleaning Pipes for HAGUE 7000 CARBON 14 Bubbler	

	MARC 7000 – Tritium Bubbler: Atmospheric Monitoring System with 4 Pots (With Oven)	
	Aerosol and lodine Sampling Heads	
	AS 5000 Portable Aerosol & Iodine Sampler DPRC Type for Air Flow Regulation – Maintenance	
	Design EDP 7000 – Electrodeposition Equipment – Monostation	
	· · ·	
	DPM 7001 Liquid Scintillation Counter - SDEC	
	Single Mast Electrodeposition Equipment - EDP 7000 - SDEC	
	Tritium sampler 4 vials MARC 7000 - SDEC	
	Spectrum Techniques	
	Advanced Spectroscopy System	
	SCINTILLATION WELL COUNTING SYSTEM	
	Intermediate Nuclear Labororatory System	
	GEORADIS s.r.o.	
	RT-50 Laboratory Gamma-Ray Spectrometer – Georadis	
	Kromek	
	Quant GR1	
	Ultra Electronics	
	CMS Iodine Monitor – Lab Impex Systems	304
Γra	aining Simulators	305
	Argon Electronics	305
	RADSIM 44-9-SIM Radiation Safety Training Probe Simulator	
	PlumeSIM®	
	PlumeSIM-SMART	
	RS340 Back Pack	
	UDR-13 & UDR-14 SIM	
	Radsim DS3 Mini 900	
	Nuvia CoMo 170 Contamination Training Simulator	
	AN/PDR 77 APLHA & BETA SIM PROBES	
	GMP-11 Radiation Safety Training Simulator Probe	
	M4A1 JCAD Chemical Hazard Detection Simulator	
	6150AD-K Contamination Simulator	
	RADSIM GS4	
	MultiGAS SIM	
	RDS Beta Photon Probe Simulator	
	Ludlum 133-6 and 44-2 Radiation Simulation Probes	
	RDS-100 / PDR-77 / CDV 718 SIM Probes	
	AN/VDR 2 DT616-SIM Radiation Safety Training Simulator	
	ADM300A-SIM Radiation Training Simulator	
	GID-3 Chemical Warfare Detection Simulator	
	MCAD-SIM Chemical Warfare Detection Simulator	
	CAMSIM Chemical Hazard Detection Simulator	
	AccuRad PRD Simulator	
	Nuvia DolMo Radiation Hazard Detection Simulator	
	HRM Radiation Hazard Simulator	
	SP4E Chemical Hazard Detection Simulator	
	AP4C-SIM Chemical Detector Simulator	
	D-tect SYSTEMS RDS Radiation Training Simulator	
	SVG-2 Radiation Hazard Detection Simulator	

	RadEye GF-10 SIM	337
	RADSIM-SS3	338
	LCD3.3-SIM Chemical Hazard Detection Simulator	339
	FH 40 GSIM Survey Meter Simulator	340
	Raid-100M Training Simulator	
	Dräger X-am Series Simulator	342
	Tracerco PED+ Simulator	343
Ro	dy Monitors	346
D 0.		
	Ludlum Measurements Inc.	
	Model 215 Alpha Frisker Station	
	Model 177HFM Low Cost Hand & Foot Monitor	
	Model HFC-8 Hand, Foot, and Clothing Monitor	
	Model 4906P Alpha-Beta-Gamma Hand & Foot Monitor	
	Model 4906AB Alpha-Beta Hand & Foot Monitor	
	Model 4906A Alpha Hand & Foot Monitor	
	Model 4901P Beta-Gamma Hand & Foot Monitor	
	Model 3276HFM Low Cost Hand & Foot Monitor	
	Model 3277HFM Compact Alpha-Beta Hand & Foot Monitor	
	Model 53 Gamma Portal Monitor	
	Model 52-1, 52-5 & 52-6 Series Portable Portal Monitors	
	Model 52 Portable Portal Monitor	
	Model HBP-22 Body Contamination Monitor	
	Model HBP-29 Body Contamination Monitor	
	Model 375P-1000 Outdoor Radiation Contamination Monitor - Ludlum	366
	Helgeson Scientific Services (HSS)	366
	HS-BEXA – Alpha Beta hand feet monitor	368
	HS-BEX - Beta gamma hand feet monitor	369
	DIYS - Bed type whole body counter for internal dosimetry	370
	HS-ABOMO - Alpha beta gamma portal for personnel monitoring	371
	HS-BOMO - Beta gamma portal for personnel monitoring	372
	HS-RAM – Gamma portal for personnel monitoring	373
	QUICKY - Whole body counter for internal dosimetry	374
Doi	rtal Monitors	275
FUI		
	Polimaster	
	Poligate Light G1 RPM	
	PoliGate™ Vehicle G4 RPM	
	PoliGate™ Pedestrian G1 RPM	
	PoliGate™ Pedestrian GN2 RPM	
	Poligate Light G2 RPM	
	Poligate Light G4 RPM	
	Poligate Pedestrian GN1 RPM	
	Poligate Deployable RPM	
	Poligate Pedestrian G2 RPM	
	Poligate Vehicle G4N4 RPM	
	Poligate Vehicle G2 RPM	388
	Radiation Solutions Inc.	
	RS-200 / 3000 Radiation Portal Monitoring Systems (Radiation Solutions)	390
	RS-200 / 6000 Radiation Portal Monitoring Systems (Radiation Solutions)	301

RS-200 / 10000 Radiation Portal Monitoring Systems (Radiation Solutions)	392
RS-300 Radiation Portal Monitoring Systems (Radiation Solutions)	393
RS-400 Radiation Portal Monitoring Systems (Radiation Solutions)	394
Ludlum Measurements Inc	395
Model 4525 Series Radiation Portal Monitor	397
Model 4525-5000 Radiation Portal Monitor – Ludlum	399
Model 4525-7000 Radiation Portal Monitor – Ludlum	400
Model 4530 Series Radiation Portal Monitor	401
Model 375P-3500 Conveyor Monitor - Ludlum	403
Model 52-8 Series Outdoor Portal Monitor	404
Helgeson Scientific Services (HSS)	404
HS-VGAM – Portal vehicle for scrap yards	406
HS-PORT – Portable Gamma Portal monitor for personnel and vehicles	407
HS-PoNal	408
Radiation Mobile Detection Systems	409
Polimaster	
PoliGate™ Mobile MDS	
PoliPack® G-S Backpack Radiation Detector	
PoliPack® GN Backpack Radiation Detector	
PoliPack® G Backpack Radiation Detector	
PoliPack® GN-S Backpack Radiation Detector	
Radiation Protection Gear	416
RADsafe	
Comfortwear Aprons	
Urology Aprons	
Surgical Drop-Away Aprons	
Maternity Aprons	
RadShield – Apex Series	
RadShield - Zenith Series	
RadShield - Zenith - X Base	
RadShield - Zenith - H Base	
Sources	
Spectrum Techniques	
RSS3 Source Set – Spectrum Techniques	
RSS-5 Source Set – Spectrum Techniques	
RSS-8 Source Set – Spectrum Techniques	
Laminated Sources - Spectrum Techniques	
Disc Sources – Spectrum Techniques	
Isotope Generator - Spectrum Techniques	
Tube Sources - Spectrum Techniques	
Needle Sources - Spectrum Techniques	436
Waste & Recycling Management	437
Ludlum Measurements Inc.	437
HLM-6GP Laundry Monitor	439
Model 375-600 Digital Area Monitor for Small Areas	440
Model 2100-1 Sample Counter	441

Model 329-32 Laundry Contamination Monitor	442
Model 2100 Conveyorized Sample Counter	443
Model 375P-3500 Conveyor Monitor	444
Model 375P-1000 Outdoor Monitoring System	445
Model 375P-2000 Outdoor Monitoring System	446
HLM-22, HLM-3G Laundry Monitor	447
Helgeson Scientific Services (HSS)	447
HS-DRUM - Waste characterization system for drums	449
HS-FRM - Free release monitor for drums, containers and big bags	450
HS-OTM - Object and tool monitors for objects monitoring	451
Complete storage and treatment plant for NORM wastes	452
Descaling system for NORM waste	453
Soil segregation unit	454
SDEC France	
Isokinetic Sampling Probes – SDEC	456
Carbon 14 Sampler with 2 Vials - SDEC	
Carbon 14 Sampler with 4 Vials - SDEC	458
Tritium Sampler with 2 Vials - SDEC	459
Bertin Instruments	
Coriolis Consumables - Bertin Instruments	461

AREA MONITORS





Partner SE International





S.E. International, Inc. is a trusted U.S.-based manufacturer of radiation detection instruments under the Radiation Alert® brand. Their product range includes area monitors, handheld survey meters, and personal electronic dosimeters—each designed to deliver accurate, real-time radiation monitoring across a wide range of applications.

Product offering










PEO Detection Page 12 of 461

AM-2×2 Radiation Area Monitor



The Radiation Alert® AM-2X2 is a state-of-the-art area monitor designed for ease of use and dependable performance. Featuring a smart touch interface, LED display, and external scintillation detector, it's ideal for room, portal, and source monitoring in medical, research, and industrial environments. With built-in alerts, remote monitoring software, and rugged housing options, the AM-2X2 is your all-in-one solution for radiation safety.



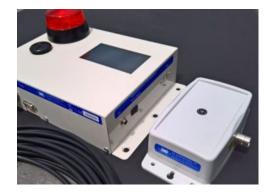

Overview:

The Radiation Alert® Area Monitor is one of the most user friendly, all inclusive, state of the art radiation area monitors available. The easy to use interface is an intelligent resistive touch screen display featuring a large five digit LED readout.

Features:

The AM-2X2 comes with an external Sodium Iodide Scintillation Detector. Cesium Iodide probes available. Rugged, wall mount enclosure options are available for high traffic area. Monitor every Radiation Alert® Area Monitor on your network with the <u>free software</u>. Includes user selectable warning indicators for low and high radiation alarm levels, and detector failure. Setup email and text alerts to receive alarms while on the go. All the settings are stored internally, even when power is disconnected. All units come with a Certificate of Conformance. NIST Source calibrations available upon request.

Applications & Uses:

Room monitoring for Hospitals, X-Ray machines, Accelerators, Laboratories, etc. Portal monitoring, such as doors and walkways, Source monitoring, Alarms in the presence of radiation or the absence of sources


PEO Detection Page 13 of 461

AM-71313 Radiation Area Monitor



A cutting-edge, user-friendly radiation area monitor featuring a smart touch screen with large LED readout. Choose between internal or external detectors, and monitor your entire network with free included software. Set custom alarms, receive mobile alerts, and rely on secure internal settings storage. Ideal for hospitals, labs, accelerators, and controlled access points. Includes Certificate of Conformance; NIST calibration available on request.



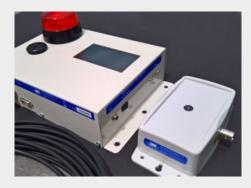

Overview:

The Radiation Alert® Area Monitor is one of the most user friendly, all inclusive, state of the art radiation area monitors available. The easy to use interface is an intelligent resistive touch screen display featuring a large five digit LED readout.

Features:

It comes with either an internal or external detector and <u>free software</u> for monitoring every Radiation Alert® Area Monitor on your network. Includes user selectable warning indicators for low and high radiation alarm levels, and detector failure. Setup email and text alerts to receive alarms while on the go. All the settings are stored internally, even when power is disconnected. All units come with a Certificate of Conformance. NIST Source calibrations available upon request.

Internal or External Probe Options Available.

Applications & Uses:

Room monitoring for Hospitals, X-Ray machines, Accelerators, Laboratories, etc. Portal monitoring, such as doors and walkways


PEO Detection Page 14 of 461

AM-7128 Radiation Area Monitor



The Radiation Alert® Area Monitor is one of the most user friendly, all inclusive, state of the art radiation area monitors available. The easy to use interface is an intelligent resistive touch screen display featuring a large five digit LED readout.



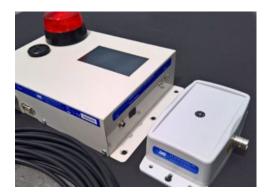

Features:

The product comes with either an internal or external detector and free software for monitoring every Radiation Alert® Area Monitor on your network. Includes user selectable warning indicators for low and high radiation alarm levels, and detector failure. Setup email and text alerts to receive alarms while on the go. All the settings are stored internally, even when power is disconnected. All units come with a Certificate of Conformance. NIST Source calibrations available upon request.

Internal or External Probe Options Available

Applications & Uses:

Room monitoring for Hospitals, X-Ray machines, Accelerators, Laboratories, etc. Portal monitoring, such as doors and walkways

PEO Detection Page 15 of 461

AM-1X1 Radiation Area Monitor



The Radiation Alert® Area Monitor is one of the most user friendly, all inclusive, state of the art radiation area monitors available. The easy to use interface is an intelligent resistive touch screen display featuring a large five digit LED readout.





Features:

The AM1X1 comes with either an internal or external Sodium Iodide Scintillation Detector. Cesium Iodide probes available. Rugged, wall mount enclosure options are available for high traffic areas. Monitor every Radiation Alert® Area Monitor on your network with the free software. Includes user selectable warning indicators for low and high radiation alarm levels, and detector failure. Setup email and text alerts to receive alarms while on the go. All the settings are stored internally, even when power is disconnected. All units come with a Certificate of Conformance. NIST Source calibrations available upon request.

Internal or External Probe Options Available.

Applications & Uses:

Room monitoring for Hospitals, X-Ray machines, Accelerators, Laboratories, etc. Portal monitoring, such as doors and walkways, Source monitoring, Alarms in the presence of radiation or the absence of sources

PEO Detection Page 16 of 461

Partner Ludlum Measurements Inc.





LUDLUM Ludlum Measurements, Inc. is a trusted global provider of radiation detection and monitoring instruments, offering rugged, accurate solutions for personnel safety, environmental protection, and security screening. Since 1962, their

equipment has been used worldwide in applications ranging from nuclear power and emergency response to border protection and critical infrastructure monitoring.

Product offering

























PEO Detection Page 17 of 461














Model 239-1F Series



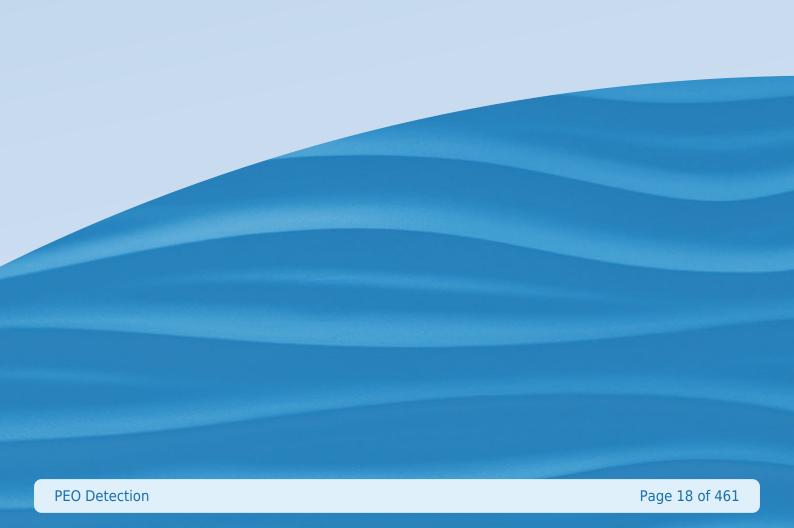

Model 375 Area Monitor Controller



The Model 375 is a versatile, compact, and very affordable digital electronic controller designed for monitoring radiation in areas. Its simple design accommodates many different detectors suiting a wide variety of applications, and is equipped with a local readout and alarms. These versatile units may also be connected to an optional auxiliary indicator/annunciators for alerting personnel at remote locations.





Features:

- Affordable Digital Controller
- Adapts to a Wide Variety of Detectors
- Programmable Alarms and Units of Measure
- Networkable (Requires Ethernet or Webpage Interface Option)
- Battery Backup

Overview:

The Model 375 is a digital area monitor controller for radiation measurement or detection. Its simple design accommodates many different detectors, suiting a wide variety of applications, and is equipped with a large digital LED display and alarms. This versatile instrument may also be connected to optional auxiliary indicators/annunciators for alerting personnel at remote locations. The user-friendly, digital design enhances setup and operation. This unit may also be networked to a central PC-based station where data are logged and alarms posted.

Applications & Uses:

This affordable and flexible system can be used in many different applications, and over the years Ludlum Measurements has developed a wide array of detectors, accessories, and options that can be included in a Model 375 system configuration. These include remote indicator alarms, printers, relay outputs, weather-proof enclosures, Ethernet networking software, industrial cameras, and more. See the link in the "Options" tab for more information about the options that are available.

PEO Detection Page 19 of 461

Model 375/1 Digital Area Monitor



The model 375/1 digital area monitor is designed for visibility and ease of use. The monitor has an internally housed 18 mm CsI scintillator with a sensitivity of approximately 120 cpm/R/hr.

The monitor has a wall-mount chassis and a four-digit LED display that you can read from 9 meters (20 feet) away.

The indicators warns with an alarm when it detects low radiation (with yellow), high radiation (with red), instrument failure (also red) or when it has a low battery (with yellow).





Features:

- Affordable Area Monitor
- Range: 0.1 to 9999 μR/hr
- Compact, Integrated Design
- Low Background Sensitivity
- Audio & Visual Alarms
- Networkable (Requires Ethernet or Webpage Interface Option)

Overview:

The Model 375/1 Digital Wall-Mount Area Monitor is designed for visibility and ease of use. This monitor incorporates an internally housed 18 mm CsI scintillator with a sensitivity of approximately 120 cpm per μ R/hr. It features a wall-mount chassis and a four-digit LED display that is readable from 9 meters (30 feet) away. Backlit indicators warn of low radiation (yellow), high radiation (red), instrument failure (red), and low battery (yellow), along with an alarm. A green status light indicates the instrument is functioning properly.

Parameters are protected under a calibration cover that provide access to adjusting the calibration constant, dead time correction, and alarm point parameters. Parameters are stored in non-volatile memory (retained even with power disconnected). A five-decade logarithmic analogue output is provided.

PEO Detection Page 20 of 461

Model 375/2 Digital Area Monitor - Ludlum



The Model 375/2 Digital Wall-Mount Area Monitor is designed for visibility and ease of use. This monitor incorporates an internally-housed energy compensated GM detector with a range from 1 μ Sv/h to 10 mSv/h (0.1 mR/hr to 1 R/hr). It features a wall-mount chassis and a four-digit LED display that is readable from 9 meters (30 feet) away. Backlit indicators warn of low radiation (yellow), high radiation (red), instrument failure (red), and low battery (yellow), along with an alarm. A green status light indicates the instrument is functioning properly.





Features

- Affordable Area Monitor
- 1µSv/h to 10 mSv/h (0.1 mR/hr to 1 R/hr)
- Integrated Design
- Battery Backup
- Networkable (Requires Ethernet or Webpage Interface Option)
- Audio & Visual Alarms

Overview:

The Model 375/2 Digital Wall-Mount Area Monitor is designed for visibility and ease of use. This monitor incorporates an internally-housed energy compensated GM detector with a range from 1 μ Sv/h to 10 mSv/h (0.1 mR/hr to 1 R/hr). It features a wall-mount chassis and a four-digit LED display that is readable from 9 meters (30 feet) away. Backlit indicators warn of low radiation (yellow), high radiation (red), instrument failure (red), and low battery (yellow), along with an alarm. A green status light indicates the instrument is functioning properly.

Parameters are protected under a calibration cover. Calibration is easily accomplished by moving the cal dipswitch to the right, and using the pushbuttons to increment or decrement the calibration constant, dead time correction, and alarm point parameters. Parameters are stored in non-volatile memory (retained even with power disconnected). A five-decade logarithmic analog output is provided. A battery backup provides 48 hours of additional use after the primary power is removed.

PEO Detection Page 21 of 461

Model 375/4 Gamma Area Monitor - Ludlum



The Model 375/4 Digital Wall-Mount Area Monitor is designed for visibility and ease of use. This monitor incorporates an internally housed energy compensated GM detector with a range from 0.01 mSv/h to 100 mSv/h (1.0 mR/hr to 10 R/hr). It features a wall-mount chassis and a four-digit LED display that is readable from 9 meters (30 feet) away. Backlit indicators warn of low radiation (yellow), high radiation (red), instrument failure (red), and low battery (yellow), along with an audible alarm. A green status light indicates the instrument is functioning properly.





Features:

- Affordable Area Monitor
- 0.01 mSv/h to 100 mSv/h (1.0 mR/hr to 10 R/hr)
- Integrated Design
- Battery Backup
- Networkable (Requires Ethernet or Webpage Interface Option)
- Audio & Visual Alarms

Overview:

The Model 375/4 Digital Wall-Mount Area Monitor is designed for visibility and ease of use. This monitor incorporates an internally housed energy compensated GM detector with a range from 0.01 mSv/h to 100 mSv/h (1.0 mR/hr to 10 R/hr). It features a wall-mount chassis and a four-digit LED display that is readable from 9 meters (30 feet) away. Backlit indicators warn of low radiation (yellow), high radiation (red), instrument failure (red), and low battery (yellow), along with an audible alarm. A green status light indicates the instrument is functioning properly.

Parameters are protected under a calibration cover. Calibration is easily accomplished by moving the "cal" dipswitch to the right, and using the pushbuttons to increment or decrement the calibration constant, dead time correction, and alarm point parameters.

Parameters are stored in non-volatile memory (retained even with power disconnected). A five-decade logarithmic analog output is provided. A battery backup provides 48 hours of additional use after the primary power is removed.

PEO Detection Page 22 of 461

Model 375-10 Digital Area Monitor - Ludlum



This wall-mounted area monitor with an internal Nal scintillation detector is simple to set up, use, and calibrate. The four-digit LED display is readable from 9 meters (30 feet) away. User-configurable alarm setpoints are easy to configure. Parameters are protected under a calibration cover, and further protected by an eight-hour battery backup. They are also stored in non-volatile memory that retains the information even if primary power is disconnected. The controller supplies local alarms but can be connected to external alarms, strobes, camera, or other recording and monitoring devices, or put onto an Ethernet network, if desired.





Features:

- Range: 0.1 to 20 μSv/hr (1 to 2000 μR/hr)
- Encased Shielded Sodium Iodide (NaI) Detector
- User-Programmable Alarms
- Networkable (Requires Ethernet or Webpage Interface Option)
- 8-Hour Battery Backup

Overview:

This wall-mounted area monitor with an internal Nal scintillation detector is simple to set up, use, and calibrate. The four-digit LED display is readable from 9 meters (30 feet) away. User-configurable alarm setpoints are easy to configure. Parameters are protected under a calibration cover, and further protected by an eight-hour battery backup. They are also stored in non-volatile memory that retains the information even if primary power is disconnected. The controller supplies local alarms but can be connected to external alarms, strobes, camera, or other recording and monitoring devices, or put onto an Ethernet network, if desired. The Model 375-10 includes the Model 375 Ethernet hardware option. It is also preprogrammed to use the Model 375 Webpage & Service Software that is available separately (Part Number 1370-077).

An optional lead shield can be included with the detector for applications that need to prevent alarms from low-energy sources. (**Note:** The lead shield option should not be used in applications that need to monitor low-energy sources, such as medical isotopes.)

PEO Detection Page 23 of 461

Model 375-9 Digital Area Monitor - Ludlum



The Model 375-9 Digital Wall-Mount Area Monitor is designed for visibility and ease of use. This monitor provides a fast response to pulsed fields by utilizing an external ion chamber covering any four consecutive decades between 1 μ Sv/h and 1000 mSv/h (0.1 mR/hr and 100 R/hr). It features a wall-mount chassis and a four-digit LED display that is readable from 9 meters (30 feet) away. Backlit indicators warn of low radiation (yellow), high radiation (red), instrument failure (red), and low battery (yellow), along with an audible alarm. A green status light indicates the instrument is functioning properly.





Features:

- Integrated Measurement System
- External Ion Chamber Detector
- User-Programmable Alarm Settings
- Audible & Visual Alarms
- Networkable (Requires Ethernet or Webpage Interface Option)

Overview:

The Model 375-9 Digital Wall-Mount Area Monitor is designed for visibility and ease of use. This monitor provides a fast response to pulsed fields by utilizing an external ion chamber covering any four consecutive decades between 1 μ Sv/h and 1000 mSv/h (0.1 mR/hr and 100 R/hr). It features a wall-mount chassis and a four-digit LED display that is readable from 9 meters (30 feet) away. Backlit indicators warn of low radiation (yellow), high radiation (red), instrument failure (red), and low battery (yellow), along with an audible alarm. A green status light indicates the instrument is functioning properly.

Parameters are protected under a calibration cover. Calibration is easily accomplished by moving the cal dipswitch to the right, and using the pushbuttons to increment or decrement the calibration constant and alarm point parameters. Parameters are stored in non-volatile memory (retained even with power disconnected). A five-decade logarithmic analog output is provided. A battery backup provides 48 hours of additional use after the primary power is removed.

PEO Detection Page 24 of 461

Model 375-Dual Digital Area Monitor - Ludlum



The Model 375-Dual is a dual-channel digital area monitor controller based on the legacy version of the Model 375. It consists of two Model 375 controllers in one wall-mount chassis, each with its own detector connection. A common application is gamma and neutron monitoring: one controller monitors gamma radiation and the other monitors neutron radiation. This instrument may also be used to monitor radiation in two separate locations when used in conjunction with appropriate external detectors.





Features:

- Dual LED Digital Display
- Low and High Alarm Indicators
- Programmable Alarm Indicators
- Optional Remote
- · Detector Fail Indicators
- Battery Backup
- Data Output/RS-232

Overview:

The Model 375-Dual is a dual-channel digital area monitor controller based on the legacy version of the Model 375. It consists of two Model 375 controllers in one wall-mount chassis, each with its own detector connection. A common application is gamma and neutron monitoring: one controller monitors gamma radiation and the other monitors neutron radiation. This instrument may also be used to monitor radiation in two separate locations when used in conjunction with appropriate external detectors.

Each controller features a four-digit LED display that is readable from 9 meters (30 feet) away. Backlit indicators on each instrument warn of low radiation alarm (yellow), high radiation alarm (red), instrument failure (red), and low battery (yellow). A green status light indicates the instrument is functioning properly. Calibration parameters are stored in non-volatile memory and protected under calibration covers on each controller.

PEO Detection Page 25 of 461

Model 375-20 Monitoring System



Features:

- Affordable Digital Controller
- Weatherproof Encased-Shielded NaI Detectors
- Programmable Alarms
- Networkable (Requires Ethernet or Webpage Interface Option)
- Battery Backup





The Model 375-20 is a Digital Model 375 Controller coupled to two shielded 5.1 cm (2 in.) diameter by 5.1 cm (2 in.) thick NaI(TI) scintillation detectors. The detectors are encased in weathertight enclosures suitable for the outdoor environment, but the Model 375 Controller is normally mounted to a wall indoors near an operator. This is a simple, cost-effective system, easy to operate and maintain. The controller supplies local alarms but can also be connected to external alarms or put onto an Ethernet network if desired. Additionally, it has a 48-hour battery backup to keep the system operational in the event power is lost.

Options:

This device can be complemented with a variety of optional features to suit different operational needs. Available options include enclosures for added protection, remote displays for convenient monitoring, and alarm annunciators to enhance safety and response time. Additionally, signal outputs can be integrated for connection with external systems, while software and networking options allow for advanced data management and remote access capabilities.



PEO Detection Page 26 of 461

Model 375-30



The Model 375-30 pairs a digital controller with two rugged, weatherproof NaI(TI) detectors for reliable outdoor gamma detection. Simple, cost-effective, and easy to maintain, it features local and remote alarm options, Ethernet connectivity, and 48-hour battery backup for continuous operation.





Features:

- Affordable Digital Controller
- Weatherproof Encased-Shielded NaI Detectors
- Programmable Alarms
- Networkable (Requires Ethernet or Webpage Interface Option)
- Battery Backup

Overview:

The Model 375-30 is a digital Model 375 Controller coupled to two shielded 7.6 cm (3 in.) diameter by 2.5 cm (1 in.) thick Nal(Tl) scintillation detectors. The detectors are encased in NEMA 4X rated weathertight enclosures suitable for the outdoor environment, but the 375 Controller is normally mounted to a wall indoors near an operator. This cost-effective system is simple, making it easy to operate and maintain. The controller supplies local alarms but can also be connected to external alarms or put onto an Ethernet network if desired. It additionally has a 48-hour battery backup to keep the system operational in the event power is lost.

PEO Detection Page 27 of 461

Model 375/31H



The Model 375 is a compact, digital controller designed for flexible radiation monitoring across diverse environments. Paired with a high-performance neutron detector, it offers accurate thermal and fast neutron detection with excellent gamma rejection. With local and remote alarms, Ethernet connectivity, and optional real-time data logging and imaging, the Model 375 is an ideal solution for centralized, networked radiation safety.





Features:

- Perfect for Temporary Jobsites
- Easy Setup and Use
- Versatile Controller with Highly Visible Display
- User-Programmable Alarms
- Network and Relay Options
- 48-Hour Battery Backup
- CE Certified

Overview:

The Model 375 is a versatile, compact, and easy-to-use digital electronic controller designed for monitoring radiation in areas. Its simple design accommodates many different detectors to suit a wide variety of applications, and it is equipped with a local readout and alarms. These versatile units may also be connected to an optional auxiliary indicator/annunciator to alert personnel at remote locations. The user-friendly, digital design enhances setup and operation. The Model 375 units may also be networked to a central PC-based station where data are logged and alarms posted.

Applications & Uses:

This affordable and very flexible system has found its way into many applications resulting in a full complement of detectors, accessories, and options that include remote indicator alarms, printers, relay outputs, weather-proof enclosures, Ethernet networking software, industrial cameras, and more.

Sites requiring centralization of their data can link multiple 375 systems together via Ethernet and view them using a common web browser with the purchase of Ludlum's Webpage & Service Software. This program collects all data in real time, logs data, and annunciates any alarms. The system can also send intelligent email alerts to responsible personnel and capture a picture of whatever triggered an alarm if optional Ethernet cameras are employed.

PEO Detection Page 28 of 461

Model 3276 - Area Monitor Controller



The Model 3276 is a lightweight, versatile radiation detection unit designed for both area monitoring and frisking applications. Compatible with alpha, beta, and gamma detectors, it features a large backlit display, audible alarms, and intuitive controls. Ideal for indoor use, the Model 3276 supports multiple measurement modes and units, offering precision and flexibility in a compact, rugged design.





Features:

- Uses Either an Internal or External Detector to Measure Alpha, Beta, or Gamma Radiation
- Versatile Can Operate as an Area Monitor or a Frisker
- Simple Setup and Use
- User-Adjustable Alarms
- User-Programmable Units of Measurement, Either U.S. or SI Units
- Power: Standard Alkaline (4) "AA" Batteries or 9 Vdc Wall Mount Transformer

Overview:

The Model 3276 is a versatile instrument that can be used for multiple radiation detection or measurement purposes. It is used with either an internal or an external radiation detector to detect alpha, beta, or gamma radiation in applications such as frisking or area monitoring.

It features a large, backlit, easy-to-read LCD screen and audible alarms and is controlled using a simple four-button interface. The unit body is made of lightweight, rugged aluminum. It is not intended for outdoor use and should be protected from splashing water. The attached metal handle facilitates transportation between sites. The instrument can be wall-mounted for area monitoring applications or mounted to a stand for desktop applications such as frisking.

Applications & Uses:

The Model 3276 can measure radiation in count rate, exposure rate, exposure rate/dose, activity rate, integrated exposure/dose, time-averaged rates, and scaler counts. When used as a frisker, three modes of operation are available – RATE, MAX, and COUNT – which can be selected by pressing the MODE button. When used as an area monitor, only RATE mode is available by default. Measurements can be collected in two sets of units (primary and secondary) for RATE and MAX modes in cps, cpm, Bq, dpm, R/hr, or Sv/h units. The user can switch between the two sets of units by pressing the UNITS button. When used as a frisker with a scintillation detector, a sigma audio

PEO Detection Page 29 of 461

mode can be enabled that allows the user to find small increases above the background radiation level.

Instrument setup can be done either through the front-panel controls or via the Lumic Calibration Kit (PN: 4498-1018). Power is supplied by either four alkaline "AA" batteries or a 9 Vdc wall mount transformer. The Model 3276 is shipped ready to use with batteries, a wall transformer, and a calibration certificate.

PEO Detection Page 30 of 461

Model 3277/1 Alpha-Beta Frisker





Features:

- 7-inch Colour Touch-Screen Display Shows All Readings Simultaneously in a Large, Simple Layout
- Simple Setup and Use
- Can Be Used with Various Scintillation or Proportional Detectors
- Either Imperial or SI Units
- Rechargeable Backup Battery
- Automatic Background Subtraction During Measurements

Overview:

The Model 3277/1 is a wall-mount or desktop instrument that can be used for frisking personnel or objects for alpha and beta contamination. A large, colour touch-screen displays alpha and beta readings simultaneously, and dual tone click-audio enables the user to easily distinguish between alpha and beta contamination. Power is supplied by either an internal, rechargeable battery or a 100 – 240 Vdc wall transformer. Battery life is approximately 8 hours under normal usage.

PEO Detection Page 31 of 461

Model 375P-1000





Features:

- Checks for Surface Contamination Entering/Exiting Facilities
- Affordable Digital Controller
- Weatherproof Encased-Shielded Plastic Scintillator Detectors
- Programmable Alarms
- Networkable (Requires Ethernet or Webpage Interface Option)
- Battery Backup

Overview:

The Model 375P-1000 is a digital Model 375 Controller coupled to two shielded 7866 cm³ (480 in³) plastic scintillator detectors. The detectors are encased in weathertight enclosures suitable for the outdoor environment. The Model 375 Controller is not weatherproof and must be mounted either indoors or within an environmental enclosure (available separately, see Options). This cost-effective solution offers a simple system that is easy to operate and maintain.

The system continuously monitors background levels and will alert the user when the infrared sensors detect a contaminated object. Once the object is removed, the system will return to normal (background) monitoring.

The controller supplies local alarms, but can also be connected to external alarms or even put onto an Ethernet network if desired. In addition, a 24-hour battery backup keeps the system operational in the event power is lost.

PEO Detection Page 32 of 461

Model 375P-2000



The Model 375P-2000 features a digital controller with four large, lead-shielded plastic scintillator detectors in rugged, weatherproof housings—ideal for monitoring objects entering or exiting facilities. With infrared-triggered detection, programmable alarms, network capability, and 24-hour battery backup, it delivers dependable, automated contamination control in a user-friendly, cost-effective system.





Features:

- Checks for Surface Contamination Entering/Exiting Facilities
- Affordable Digital Controller
- Weatherproof Encased-Shielded Plastic Scintillator Detectors
- Programmable Alarms
- Networkable (Requires Ethernet or Webpage Interface Option)
- Battery Backup

Overview:

The Model 375P-2000 is a digital Model 375 Controller coupled to four lead-shielded 7866 cm3 (480 in3) plastic scintillator detectors. The detectors are encased in weather-tight enclosures suitable for the outdoor environment. The Model 375P Controller is not weatherproof and must be mounted either indoors or within an environmental enclosure. This cost-effective solution offers a simple system that is easy to operate and maintain.

The system continuously monitors background levels and will alert the user when the infrared sensors detect a contaminated object. Once the object is removed, the system will return to normal (background) monitoring.


The controller supplies local alarms, but can also be connected to external alarms or put onto an Ethernet network if desired. In addition, a 24-hour battery backup keeps the system operational in the event power is lost.

PEO Detection Page 33 of 461

Model 375P-336 Series



The Model 375P-336 Series combines a digital controller with two lead-shielded plastic scintillation detectors for reliable surface contamination monitoring. Available in both indoor (375P-336) and outdoor (375P-336-1L) configurations, these user-friendly, cost-effective systems offer local and remote alarms, Ethernet connectivity, and 24-hour battery backup for uninterrupted operation.

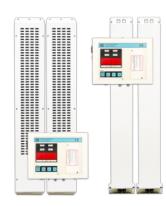



Features:

- Excellent Surface Contamination Screening Tool for Small Articles, Baggage, Packages, and Medical Waste
- Affordable Digital Controller
- 2 Large Plastic Scintillator Detectors
- Programmable Alarms
- Networkable (Requires Ethernet or Webpage Interface Option)
- Includes Check Source for Calibration
- 24-Hour Battery Backup

Overview:

The Model 375P-336 Series are monitoring systems that consist of a Model 375P digital controller coupled with two lead shielded 2753 cm³ (168 in³) plastic scintillation detectors. The Model 375P-336 is designed for indoor applications, while the Model 375P-336-1L has detectors housed in waterproof enclosures that can be mounted outdoors. The Model 375P controller is not weatherproof and must be mounted either indoors or within an environmental enclosure.

These simple and cost-effective solutions offer a system that is easy to operate and maintain. The controller supplies local alarms but can also be connected to external alarms or put onto an Ethernet network if desired. Each system has a 24-hour battery backup to keep it operational in the event power is lost.

PEO Detection Page 34 of 461

Model 240 Series Alpha-Beta Floor and Wall Monitor



The Model 240 is a portable, high-efficiency alpha-beta contamination monitor designed for fast, accurate scanning of floors and walls. Featuring an array of low-background detectors, real-time alarms, and USB connectivity for streamlined data logging and reporting, it delivers precise, user-friendly performance—ideal for labs, cleanrooms, and decontamination zones.





Features:

- Quickly Surveys and Datalogs Large Areas with 173 cm (68 in.) Wide Path
- Hinged Array Can Be Folded for Easy Transportation
- 12 Alpha-Beta Detector Capability
- Can Use Either Gas Proportional or Scintillation Detectors
- Measures and Warns Operator About Excessive Speed

Overview:

The Model 240 Alpha-Beta Floor and Wall Monitor allows a user to quickly survey large areas for alpha-beta contamination. Compatible with either gas-proportional or scintillation detectors, the Model 240 cart comes in a floor-style only version, or a version that supports both floor and wall monitoring. Detector-to-surface spacing is adjustable and detectors are positioned for no "dead" zones when scanning. Gas proportional models come with a gas regulator, flowmeters, and gas lines, but a P-10 gas bottle is not included. The cart also provides two holders for spare detectors, to provide for replacement if a detector becomes damaged.

Utilizing an array of detectors instead of a single detector provides several advantages: 1) smaller detectors have lower backgrounds and thus lower minimum detectable activity (MDA); 2) smaller detectors allow the user to pinpoint the contamination; and 3) smaller detectors make it easier to maintain and replace fragile metallized polyester windows necessary for alpha detection.

The array of detectors is connected to an electronics box, which has a

PEO Detection Page 35 of 461

USB connection to a laptop. The electronics has 12 separate detector boards, each with its own settable high voltage, lower and upper thresholds, and alpha-beta count channels. The laptop display makes it easy to view all 12 detectors simultaneously, and provides setup wizards to help with establishing operating points for the detectors.

The system initially measures radiation background from the detector array, allowing the operator to see net counts during scanning. While scanning, a rolling average is checked on all 24 channels (12 each, alpha and beta) every half-second, and a momentary audible and visual alarm activates if any alarm points are exceeded. Measurements are also automatically logged to a file for subsequent reports.

PEO Detection Page 36 of 461

Radiation Detection > Area Monitors

Model 3002/FM Series Alpha-Beta Floor Monitor



The Model 3002/FM Series Alpha-Beta Floor Monitors allow a user to quickly survey large areas for alpha-beta contamination. They combine the dependable <u>Model 3002</u> Alpha-Beta Survey Meter with two alpha-beta scintillation detectors in configurations ideal for floor monitoring. The use of scintillation detectors creates an instrument that requires much less maintenance than traditional gas flow proportional detectors.





Features:

- Large Backlit and Auto-Ranging LCD
- Simultaneous Alpha-Beta Counting
- Gasless Uses Scintillators and PMTs
- Dual-Tone Audio: Low-Pitch Beta Clicks and High-Pitch Alpha Beeps
- 4-Button Interface for Easy Operation
- Height Above Floor Easily Adjusted
- Rate, Max, and Count Modes

PEO Detection Page 37 of 461

Model 239-1F Series Alpha-Beta Floor Contamination Monitor





Features:

- 594 cm² or 821 cm² Active Area Gas Proportional Detector
- Adjustable Detector Height
- Compatible with Multiple Survey Meters

Overview:

The Model 239-1F Floor Monitor is a gas proportional floor monitor detector mounted on a roll-around cart. The instrument features a flow system, quick-connects, a gas bottle mount, and a means to adjust the height of the detector from the floor for optimum performance. A nuclear counting gas bottle, gas regulator, and a survey instrument are required for the operation of the floor monitor.

PEO Detection Page 38 of 461

Model 375P-336 Surface Contamination Monitor - Ludlum





Features:

- Excellent Surface Contamination Screening Tool for Small Articles, Baggage, Packages, and Medical Waste
- Affordable Digital Controller
- 2 Large Plastic Scintillator Detectors
- Programmable Alarms
- Networkable (Requires Ethernet or Webpage Interface Option)
- Includes Check Source for Calibration
- 24-Hour Battery Backup

Overview:

The Model 375P-336 Series are monitoring systems that consist of a Model 375P digital controller coupled with two lead shielded 2753 cm³ (168 in³) plastic scintillation detectors. The Model 375P-336 is designed for indoor applications, while the Model 375P-336-1L has detectors housed in waterproof enclosures that can be mounted outdoors. The Model 375P controller is not weatherproof and must be mounted either indoors or within an environmental enclosure (available separately).

These simple and cost-effective solutions offer a system that is easy to operate and maintain. The controller supplies local alarms but can also be connected to external alarms or put onto an Ethernet network if desired. Each system has a 24-hour battery backup to keep it operational in the event power is lost.

PEO Detection Page 39 of 461

HANDHELD MONITORS





Partner Ludlum Measurements Inc.





LUDLUM Ludlum Measurements, Inc. is a trusted global provider of radiation detection and monitoring instruments, offering rugged, accurate solutions for personnel safety, environmental protection, and security screening. Since 1962, their

equipment has been used worldwide in applications ranging from nuclear power and emergency response to border protection and critical infrastructure monitoring.

Product offering

Model 26 - Frisker with Geiger Mueller Pancake



Model 26-1 Frisker with integrated GM Pancake - Ludlum



Model 26-3 - High **Range Frisker**



Model 26S -**Integrated Scintillator** Frisker



Model 3000 Digital Survey Meter -Ludlum



Model 3001 Multi-**Detector Survey Meter - Ludlum**



Model 3002 Alpha-**Beta Digital Survey** Meter



Model 3003 Series **Multi-Detector** Ratemeter / SCA



Model 3014 Dual-**Detector Digital Survey Meter / SCA**



Model 9DP Pressurized Ion Chamber



Model 9DP-1 **Pressurized Ion** Chamber



Model 9DP* Ambient **Dose Ion Chamber**



PEO Detection Page 41 of 461

Model 9DP-1*
Ambient Dose Ion
Chamber



Model 3-IS-1 Intrinsically Safe Gamma Ratemeter



Model 3-IS Intrinsically Safe Survey Meter



Model 12-4 Neutron
Dose Survey Meter



Model 30-4 Digital Neutron Survey Meter



Model 12-4-7 Neutron
Dose Survey Meter



Model 3007 Series Neutron Dose Survey Meter With Optional Internal Gamma Detector



Model 30-7 Series Lightweight Digital Neutron Survey Meter



Model 12 General Purpose Survey Meter



Model 14C General Purpose Survey Meter



Model 16 General Purpose Survey Meter



Model 18 General Purpose Survey Meter



Model 3 General Purpose Survey Meter



Model 3A General Purpose Survey Meter with Alarm



Model 3-97 Gamma Survey Meter



Model 195 with Model 43-132 High Range Alpha Ion Chamber



PEO Detection Page 42 of 461

Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter



Model 194 Dose Equivalent Rate Meter



Model 2403 Pocket-Size Survey Meter



Model 2402 Pocket-Size Survey Meter with Alarm



Model 35 Vehicle-Mounted Digital Survey Meter



Model 30 Digital Survey Meter -Ludlum



Model 44-9 Pancake GM Detector - Ludlum



Model 3001-MERK response kit



Model 3001-2RK Emergency Response & NORM Kit



Model 2241-3RK2 Emergency Response Kit



Model 26-2 -Integrated Frisker with Timed Frisk



Model 70 Series -Ludlum



Model 3019 Digital Background Survey Meter - Ludlum



Model 133-6 GM Detector - Ludium



Model 133-4 GM Detector - Ludium



Model 133-2 GM Detector - Ludlum



PEO Detection Page 43 of 461

Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum



Model 44-2 NAL Gamma Scintillator -Ludlum



Model 44-1 Beta Scintillator - Ludlum



Model 44-38 Energy Compensated GM Detector - Ludlum



Model 44-9 Ambient Dose Equivalent Filter - Ludlum



Model 44-9 Exposure Filter Kit - Ludlum



Model 44-7 Alpha Beta Gamma Detector - Ludlum



Model 43-92 Alpha Scintillator - Ludlum



Model 43-65 Alpha Scintillator - Ludlum



Model 43-5 Alpha Scintillator - Ludlum



Model 9DP Ambient Dose Ion Chamber Survey Meter -Ludlum



Model 9DP-1 Ion Chamber Survey Meter - Ludium



PEO Detection Page 44 of 461


Model 26 - Frisker with Geiger Mueller Pancake



This Frisker with Geiger Mueller (GM) 26 is the simpler version of Ludlum's model 26-1.

Ludlum designed this device especially for frisking people and objects for alpha, beta and gamma contamination. This cableless device consolidates the electronics and the detector into one ergonomic device. The frisker has a standard 15,51 cm² GM pancake detector and a large LCD display.



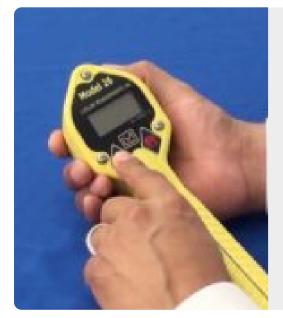

Features:

- Integrated, Lightweight Design Simplifies Frisking
- Protective Rubber Covering Enhances Ruggedness, Water Resistance, and Non-Slip Comfort
- Employs Standard 15.51 cm² GM Pancake Detector
- Ratemeter, MAX Hold, and Scaler Operating Modes
- Simple Two-Button Operation
- Count Rate and Scaler Alarms
- Automatic LCD Backlight Activation
- Wrist Cuff and Lanyard Included

PEO Detection Page 45 of 461

Additional Services

To support optimal performance and compliance with regulatory standards, PEO offers the following services for this device:

Service
Periodic inspections
carried out by qualified
technicians to assess
functionality, identify
wear, and detect
potential issues early.

Maintenance
Preventive measures,
part replacements, and
performance checks
designed to extend the
device's operational
lifespan and maintain
consistent reliability.

Calibration
Calibration services,
performed by qualified
technicians. Each unit
receives a Calibration
Certificate confirming
accuracy and
conformity.

Leakage Tests
Radiation leakage
testing to confirm
detector safety and
compliance with
applicable health and
safety requirements.

These services are available through PEO.

For service appointments or contract options, please contact your PEO representative.

Purchase Product

Request Service

Request Service

PEO Detection Page 46 of 461

Model 26-1 Frisker with integrated GM Pancake - Ludlum





Overview:

The **Model 26-1 Integrated Frisker** offers fast, one-handed contamination screening with the convenience of an all-in-one design. Equipped with a GM pancake detector, intuitive controls, and a backlit LCD, it delivers reliable radiation measurements in multiple units and modes. Rugged, lightweight, and water-resistant

Ideal for both indoor and outdoor use.

Features:

- Integrated, Lightweight Ergonomic Design
- High-Impact Plastic with Water-Resistant Rubber Seals
- Employs Standard 15.51 cm² GM Pancake Detector
- Displays in mR/hr, μSv/h, dpm, Bq, cpm, or cps
- Dead-Time Correction (DTC) Allows Gamma Measurements Up to 500 mR/hr or Up to 1999 $\mu Sv/h$
- Simple Three-Button Operation
- Count Rate, Exposure, Dose, and Counting Alarms
- Automatic Display Backlight
- Bright Red, Flashing Alarm LED
- Includes Wrist Strap, Detector Cover & Lanyard



PEO Detection Page 47 of 461

Additional Services

To support optimal performance and compliance with regulatory standards, PEO offers the following services for this device:

Service
Periodic inspections
carried out by qualified
technicians to assess
functionality, identify
wear, and detect
potential issues early.

Maintenance
Preventive measures,
part replacements, and
performance checks
designed to extend the
device's operational
lifespan and maintain
consistent reliability.

Calibration
Calibration services,
performed by qualified
technicians. Each unit
receives a Calibration
Certificate confirming
accuracy and
conformity.

Leakage Tests
Radiation leakage
testing to confirm
detector safety and
compliance with
applicable health and
safety requirements.

These services are available through PEO.

For service appointments or contract options, please contact your PEO representative.

Purchase Product

Request Service

Request Service

PEO Detection Page 48 of 461

Model 26-3 - High Range Frisker



The Ludlum Model 26-3 is a rugged, cable-free radiation detector combining a high-sensitivity GM pancake with a large auto-ranging LCD and intuitive one-handed operation. Ideal for detecting alpha/beta contamination and measuring gamma fields, it offers flexible units, three operating modes, and long battery life in a compact, water-resistant design





Features

- Integrated, Lightweight Ergonomic Design
- High-Impact Plastic with Water-Resistant Rubber Seals
- Employs Standard 15.51 cm² GM Pancake Detector
- Displays in mR/hr, μSv/h, dpm, Bq, cpm, or cps
- Dead-Time Correction (DTC) Allows Gamma Measurements Up to 1999 μSv/h (1000 mR/hr)
- Simple Three-Button Operation
- Count Rate, Dose/Exposure Rate, and Counting Alarms
- Automatic Display Backlight
- Bright Red Flashing ALARM LED
- Includes Wrist Strap, Clear Pancake Cover & Lanyard

Compact, Powerful, and Cable-Free

The Ludlum Model 26-3 delivers fast, reliable radiation detection in a rugged, water-resistant, and cable-free design—ideal for frisking people and inspecting objects with ease.

High-Performance Detection, Clear Readout

Equipped with a 15.51 cm² GM pancake, loud audible clicks, and a large auto-ranging LCD with backlight, it provides instant feedback. Switch between mR/hr, μ Sv/h, dpm, and Bq at the touch of a button.

Simple, One-Handed Use

Three intuitive modes—RATE, MAX, and COUNT—offer precise control for real-time monitoring, peak value capture, and timed surveys. All in one durable, ergonomic tool.



PEO Detection Page 49 of 461



Versatile Measurement Options

Display readings in counts, activity, averaged rates, or accumulated dose—tailored to your needs. Add the optional Ambient Dose Filter for improved energy response in dose measurements.

Long Battery Life, Smart Configuration

Powered by just two AA batteries, the Model 26-3 runs for hundreds of hours. Settings can be locked or adjusted based on user or calibrator preference.

User-Friendly Features

A responsive backlight activates in low light, and the audible click can be muted for discreet use—perfect for both routine and sensitive surveys.

Additional Services

To support optimal performance and compliance with regulatory standards, PEO offers the following services for this device:

Service
Periodic inspections
carried out by qualified
technicians to assess
functionality, identify
wear, and detect
potential issues early.

Maintenance
Preventive measures,
part replacements, and
performance checks
designed to extend the
device's operational
lifespan and maintain

consistent reliability.

Calibration
Calibration services,
performed by qualified
technicians. Each unit
receives a Calibration
Certificate confirming
accuracy and
conformity.

Leakage Tests
Radiation leakage
testing to confirm
detector safety and
compliance with
applicable health and
safety requirements.

These services are available through PEO.

For service appointments or contract options, please contact your PEO representative.

Purchase Product

Request Service

Request Service

PEO Detection Page 50 of 461

Model 26S - Integrated Scintillator Frisker



- Lightweight Design Only 0.35 kg (0.75 lb)
- Employs 1 x 1 Equivalent Scintillator Detector
- Sigma Audio (or Click Audio Possible) & Alarm Beep
- $\bullet\,$ Displays in mR/hr, $\mu Sv/h,$ dpm, Bq, cpm, or cps
- Simple Three-Button Operation
- Count Rate, Exposure, Dose, and Counting Alarms
- Automatic Display Backlight
- Bright Red Flashing ALARM LED



PEO Detection Page 51 of 461

Model 3000 Digital Survey Meter - Ludlum



Overview:

The Ludlum Model 3000 is a lightweight, durable radiation survey meter designed for alpha, beta, and gamma detection using external probes. It features a large LCD, audible alarms, and three operating modes (RATE, MAX, COUNT), with dual-unit readout capability. Built for field use with a splash-resistant, high-impact plastic housing, it supports data logging (up to 1000 points) and calibration via front panel or optional Lumic kits. Supplied ready-to-use with batteries and calibration certificate.





Features:

- Large, Backlit, Easy-To-Read LCD Screen
- Auto-Ranging
- RATE, MAX, and COUNT Modes of Operation
- Splash-Resistant Construction for Outdoor Use
- All-Digital Calibration
- USB Port
- Lightweight Yet Ruggedly Built
- Simple 5-Button Interface

Options:

- Calibration & Configuration Kits Software packages for setup, calibration, and detector optimization, each with required USB cables
- **Data Logging Solutions** Includes data logger kit and retrofit handle for enabling or upgrading internal data logging
- Wireless & Serial Connectivity Bluetooth® linker for mobile devices; RS-232 and TTL serial port options for external interfacing
- Audio Kit Headphone jack with adjustable stereo/mono headset for audible alerts
- Carrying Solutions Rugged transport case and adjustable shoulder strap (case modification required)



PEO Detection Page 52 of 461













Additional Services

To support optimal performance and compliance with regulatory standards, PEO offers the following services for this device:

Service

Periodic inspections carried out by qualified technicians to assess functionality, identify wear, and detect potential issues early.

Maintenance

Preventive measures, part replacements, and performance checks designed to extend the device's operational lifespan and maintain consistent reliability.

Calibration

Calibration services, performed by qualified technicians. Each unit receives a Calibration Certificate confirming accuracy and conformity.

Leakage Tests Radiation leakage

testing to confirm detector safety and compliance with applicable health and safety requirements.

These services are available through PEO.

For service appointments or contract options, please contact your PEO representative.

Purchase Product

Request Service

Ask a question

Find more products

PEO Detection Page 53 of 461

Model 3001 Multi-Detector Survey Meter - Ludlum



The Model 3001 Multi-Detector Survey Meter (Ludlum) is an ergonomically-designed, versatile, lightweight instrument which can support up to 4 external detectors. Each detector with its own user parameters and set of calibration.



Choose from a wide range of probes for any application: <u>Ludlum probes</u>

Model 3001 Multi-Detector Survey Meter features:

- max, rate and count modes of operation
- · datalogging and headphone options
- large backlit LCD for ease of reading
- USB port
- ruggedly built and lighter weight
- splash-resistant construction for outdoor use
- Geiger-Mueller (GM), scintillator or proportional detector

Read more about the Model 3001 Multi-Detector Survey Meter on the <u>Ludlum website</u>

PEO Detection Page 54 of 461

Model 3002 Alpha-Beta Digital Survey Meter



The Model 3002 is a durable, lightweight instrument designed for alpha and beta radiation survey with an external detector. It features a large, easy-to-read LCD screen and audible alarms and is controlled using a simple five-button interface. The unit body is made of high-impact plastic and splash resistant construction allows the instrument to be used outdoors.

Three modes of operation are available – RATE, MAX, and COUNT – which can be selected by pressing the MODE button. Measurements can be collected in cps, cpm, Bq, or dpm units. Pressing the $\alpha\text{-}\beta$ button switches between alpha, beta, or alpha+beta measurements. When enabled with the optional Lumic Data Logger Kit (see Options), data can be logged in any of the operational modes using the LOG button on the handle. Up to 1000 data points can be stored internally.

Instrument setup can be done either through the front-panel controls or via the Lumic Calibration Kit (see Options). The Model 3002 is shipped ready to use with batteries and calibration certificate.

Features

- Large Backlit LCD for Ease of Reading
- Auto Ranging, Dual Tone Audio Clicks
- All-Digital Calibration
- Alpha, Beta, or Alpha + Beta Measurements
- Rate, Max, and Count Modes of Operation
- 4-Button Intuitive Interface for Easy Operation
- Lighter Weight Yet Ruggedly Built
- Splash-Resistant Construction for Outdoor Use



PEO Detection Page 55 of 461

Model 3003 Series Multi-Detector Ratemeter / SCA



The Model 3003 is a durable, lightweight instrument designed for alpha, beta, gamma, or neutron radiation survey. It can support up to four external detectors, each with its own set of calibration and user parameters. The Model 3003i is a version that includes an internal GM or scintillation detector. The instrument features a large, easy-to-read LCD screen and audible alarms and is controlled using a simple seven-button interface. The unit body is made of high-impact plastic and splash resistant construction allows the instrument to be used outdoors.

Four modes of operation are available - RATE, MAX, INTG, and COUNT - which can be selected by pressing the MODE button. Measurements can be collected in two sets of units (primary and secondary) for RATE, MAX, and DOSE modes, unless alpha-beta detection is selected. The user can switch between the two sets of units by pressing the UNITS button. The DETECTOR button is used to switch between the active detector settings, indicated by the colored LEDs above the control buttons. When enabled with the Lumic Data Logger Kit (see Options), data can be logged in any of the operational modes using the LOG button on the handle. Up to 1000 data points can be stored internally. The SCA ability allows a scintillator or proportional detector to be set up with an upper window, giving it higher sensitivity to a specific isotope or region. This instrument can be used with external alpha-beta detectors to display alpha, beta, or alpha+beta counts.

Instrument setup can be done either through the front-panel controls or via the Lumic Calibration Kit (see Options). The Model 3003 is shipped ready to use with batteries and calibration certificate.

Features

- 4 Selectable & Configurable Detector Settings
- Single Channel Analyzer (SCA)
- Alpha, Beta, or Alpha+Beta Measurements
- 3003i: Internal Detector Option for Dose Measurements
- Rate, Max, Integrated Dose, and Count Modes
- 4-Button Intuitive Interface for Easy Operation
- 3-Button Handle Interface for One Handed Control
- Digital Calibration, Datalogging, Auto-Ranging, USB
- Bluetooth[®], True RS-232, and Headphone Options
- Lightweight and Ruggedly Built
- Large Backlit LCD for Ease of Reading

E S S S

PEO Detection Page 56 of 461

• Alternative to Ludlum Models 18 and 2221

PEO Detection Page 57 of 461

Model 3014 Dual-Detector Digital Survey Meter / SCA



The Ludlum Model 3014 is a durable, lightweight instrument with both an internal energy-compensated gamma detector and a connection for an external detector. It features a large, easy-to-read LCD screen and audible alarms and is controlled using a simple five-button interface. The unit body is made of high-impact plastic and splash-resistant construction allows the instrument to be used outdoors.

Four modes of operation are available – RATE, MAX, INTG, and COUNT – which can be selected by pressing the MODE button. Measurements can be collected in two sets of units (primary and secondary) for RATE and MAX modes. The user can switch between the two sets of units by pressing the UNITS button. Pressing the DETECTOR button toggles the display between the internal and external detector readings. When enabled with the Lumic Data Logger Kit (see Options), data can be logged in any of the operational modes using the LOG button on the handle. Up to 1000 data points can be stored internally. The SCA ability allows a scintillator or proportional detector to be set up with an upper window, giving it higher sensitivity to a specific isotope or region. This instrument can be used with external alpha-beta detectors to display alpha, beta, or alpha+beta counts.

Instrument setup can be done either through the front-panel controls or via the Lumic Calibration Kit (see Options). The Model 3014 is shipped ready to use with batteries and calibration certificate.

Features

- Internal Gamma Detector for Survey / Accumulated Dose
- Can Be Used with a Variety of External Detectors
- General Purpose Survey Meter
- Rate, Max, Integrated Dose, and Count Modes
- Alpha, Beta, or Alpha+Beta Capable
- Single Channel Analyzer (SCA) Capable
- Large Backlit LCD for Ease of Reading
- 4-Button Intuitive Interface for Easy Operation
- 1-Button Handle Interface for Data Logging
- Digital Calibration, Data Logging, Auto-Ranging, USB
- Bluetooth, True RS-232, and Headphone Options
- Alternative to Ludlum Models 14C and 2221



PEO Detection Page 58 of 461

Model 9DP Pressurized Ion Chamber



Overview:

The Ludlum Model 9DP is a compact, hand-held instrument engineered for reliable radiation monitoring in field environments. Designed for professionals across medical, industrial, and emergency response sectors, it ensures accurate assessment of radiological conditions with minimal operational complexity.





Features:

- Measurement Range: Background to 50 mSv/h (5 R/hr)
- **Display Modes:** Real-time Exposure Rate & user-selectable Integrated or Peak Exposure Rate
- Display: Sunlight-readable color screen
- **Detection Performance:** Auto-zeroing and auto-ranging functionality
- Power Supply: Rechargeable battery pack for extended field operations
- Alarms: Integrated audio and visual alarms for threshold breaches
- **Quality-of-Life:** Data logging, USB connectivity, and free firmware updates via the manufacturer's website

Optional additions:

- Software and USB cable for Dimension instrument setup.
- Log real-time data to Excel; available with or without USB cable.
- Adds headphone jack to the instrument.
- Adjustable stereo/mono headphones.
- Rechargeable AA battery pack (8x NiMH).
- Alkaline AA battery pack (8x standard).
- 10 μCi Cs-137 plastic check source.
- Rugged, waterproof medium transport case.
- 1.8 m nylon shoulder strap (case modification required).
- Mini USB keyboard for instrument setup.



PEO Detection Page 59 of 461













Additional Services

To support optimal performance and compliance with regulatory standards, PEO offers the following services for this device:

Service

Periodic inspections carried out by qualified technicians to assess functionality, identify wear, and detect potential issues early.

Maintenance

Preventive measures, part replacements, and performance checks designed to extend the device's operational lifespan and maintain consistent reliability.

Calibration

Calibration services, performed by qualified technicians. Each unit receives a Calibration Certificate confirming accuracy and conformity.

Leakage Tests Radiation leakage

testing to confirm detector safety and compliance with applicable health and safety requirements.

These services are available through PEO.

For service appointments or contract options, please contact your PEO representative.

Purchase Product

Request Service

Ask a question


Find more products

PEO Detection Page 60 of 461

Model 9DP-1 Pressurized Ion Chamber



The Model 9DP-1 is a digital, hand-held pressurized ion chamber that provides highly sensitive exposure measurements of gamma and x-ray radiation at energies above 25 keV and beta radiation at energies above 1 MeV. This meter is specially designed for radiography work where pulsed fields are being measured. It correctly integrates 50 ns pulses (and wider) that other systems typically miss or measure inaccurately. Another feature of this instrument is that the detector chamber is only pressurized to 2.5 atm (22 psig), thus avoiding all (USA) HAZMAT concerns for shipping and handling. However, this reduced pressure also reduces sensitivity, so the minimum "good" measurement point is 2 $\mu Sv/h$ (200 $\mu R/hr$).

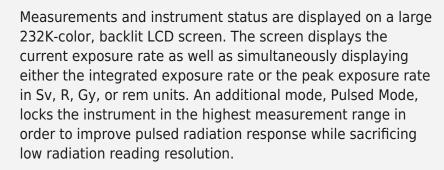

The instrument is operated using the four push-buttons below the screen (ON/OFF, FUNCTION, AUDIO, ACK/RESET). In addition to the visual display, click audio proportional to the current exposure rate audibly indicates the exposure rate level. Two alarm levels can be set to alert the user whenever the pre-programmed level has been exceeded. Alarms are indicated on the display and by an audio tone. The instrument can also be configured for data logging. Logged data can either be stored in CSV format and written to a standard USB drive inserted in the instrument's USB port, or written directly to a Microsoft Excel spreadsheet by connecting the instrument to a computer running Ludlum's Model 9DP Logging Spreadsheet Software.

The Model 9DP parameter settings can be edited by connecting the instrument to a basic USB keyboard. Instrument setup and calibration can also be configured using the Ludlum Dimension Interface Kit, which includes the Dimension Configuration Manager Software and the required USB cable.

Features

• Range: 2 μSv/h to 500 mSv/h (200 μR/hr to 50 R/hr)



PEO Detection Page 61 of 461

- Special Design for Measuring Pulsed Fields
- Low Pressure Chamber is Non-Hazmat
- Shows Exposure Rate & Either Integrated Exposure or Peak Exposure Rate
- Pulsed Mode for Measuring Pulsed Radiation
- Sunlight Readable Color Display
- Auto-Zeroing & -Ranging
- Rechargeable Batteries
- Audio & Visual Alarms
- Data Logging
- USB Connectivity
- Free Firmware Updates Through Website

PEO Detection Page 62 of 461

Model 9DP* Ambient Dose Ion Chamber



Overview:

The Model 9DP* is a digital, hand-held ion chamber for measuring ambient dose equivalent from gamma, x-ray, and high-energy beta radiation. It features ICRU-compliant dose readings, a color LCD display, audio-visual alarms, and supports data logging via USB or Excel. Settings and calibration are configurable via USB keyboard or software.





Features:

- Provides ICRU-Based Ambient Dose Equivalent Measurements
- Range: Background to 50 mSv/h (5 rem/h)
- Shows Dose Rate & Either Integrated Dose or Peak Dose Rate
- Ambient Equivalent Dose or Dose Rate is Flat within 20% from 40 keV to 1.3 MeV
- Sunlight Readable Color Display
- Auto-Zeroing & -Ranging
- Rechargeable Batteries
- Audio & Visual Alarms
- Data Logging
- USB Connectivity
- Free Firmware Updates Through Website

Optional additions:

- Calibration and setup kit with software and USB cable
- Real-time data logging to Excel
- Headphone jack add-on
- Stereo/mono headphones
- Rechargeable battery pack (8x AA NiMH)
- Alkaline battery pack (8x AA)
- 10 μCi Cs-137 check source
- Rugged, waterproof transport case
- Adjustable shoulder strap (requires case modification)
- USB keyboard for configuration



PEO Detection Page 63 of 461













Additional Services

To support optimal performance and compliance with regulatory standards, PEO offers the following services for this device:

Service

Periodic inspections carried out by qualified technicians to assess functionality, identify wear, and detect potential issues early.

Maintenance

Preventive measures, part replacements, and performance checks designed to extend the device's operational lifespan and maintain consistent reliability.

Calibration

Calibration services, performed by qualified technicians. Each unit receives a Calibration Certificate confirming accuracy and conformity.

Leakage Tests Radiation leakage

testing to confirm
detector safety and
compliance with
applicable health and
safety requirements.

These services are available through PEO.

For service appointments or contract options, please contact your PEO representative.

Purchase Product

Request Service

Ask a question


Find more products

PEO Detection Page 64 of 461

Model 9DP-1* Ambient Dose Ion Chamber



The Model 9DP-1* is a digital, hand-held pressurized ion chamber that provides highly sensitive ambient dose equivalent measurements of gamma and x-ray radiation at energies above 25 keV and beta radiation at energies above 1 MeV. Ambient dose equivalent is defined as the dose equivalent readout that would be measured at a (human) tissue depth of 10 mm. The Model 9DP-1* measures and displays the ambient dose equivalent in accordance with the ICRU (International Commission on Radiation Units) 30 cm tissue equivalent sphere. This requires a special ion chamber that can provide a conversion of the (air kerma) exposure rate to provide the ambient dose and dose rate.

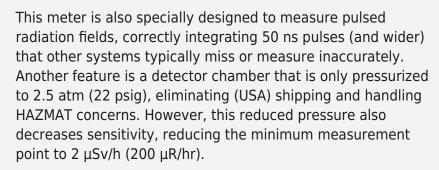

Measurements and instrument status are displayed on a large 232K-color, backlit LCD screen. The screen displays the current dose rate as well as simultaneously displaying either the integrated dose rate or the peak dose rate in Sv, R, Gy, or rem units. An additional mode, Pulsed Mode, locks the instrument in the highest measurement range in order to improve pulsed radiation response while sacrificing low radiation reading resolution.

The instrument is operated using the four push-buttons below the screen (ON/OFF, FUNCTION, AUDIO, ACK/RESET). In addition to the visual display, click audio proportional to the current dose rate audibly indicates the dose rate level. Two alarm levels can be set to alert the user whenever the preprogrammed level has been exceeded. Alarms are indicated on the display and by an audio tone. The instrument can also be configured for data logging. Logged data can either be stored in CSV format and written to a standard USB drive inserted in the instrument's USB port, or written directly to a Microsoft Excel spreadsheet by connecting the instrument to a computer running Ludlum's Model 9DP Logging Spreadsheet Software.

The Model 9DP parameter settings can be edited by



PEO Detection Page 65 of 461

connecting the instrument to a basic USB keyboard. Instrument setup and calibration can also be configured using the Ludlum Dimension Interface Kit, which includes the Dimension Configuration Manager Software and the required USB cable.

Features

- Provides ICRU-Based Ambient Dose Measurements
- Range: 2 μ Sv/h to 500 mSv/h (200 μ R/hr to 50 R/hr)
- Special Design for Measuring Pulsed Fields
- Low Pressure Chamber is Non-Hazmat
- Shows Dose Rate & Either Integrated Dose or Peak Dose Rate
- Ambient Equivalent Dose or Dose Rate Is Flat Within 30% from 60 keV to 1.3 MeV
- Sunlight Readable Color Display
- Auto-Zeroing & -Ranging
- Rechargeable Batteries
- Audio & Visual Alarms
- Data Logging
- USB Connectivity
- Free Firmware Updates Through Website

PEO Detection Page 66 of 461

Model 3-IS-1 Intrinsically Safe GammaRatemeter



This intrinsically safe general purpose ratemeter is patterned after Ludlum's best-selling Model 3. It was designed and tested to USA standards for intrinsic safety, permitting it to be used in potentially explosive atmospheres.

This instrument includes an internally housed, energy compensated GM detector with a gamma detection range of 0.1 mR/hr to 1.0 R/hr. The Model 3 type instruments are well known for their accuracy and long-lasting dependability. The cast aluminum instrument housing, with its separate battery compartment and accompanying metal handle, offer an industrial robustness and quality that promote long-lasting protection and instrument life. The front panel controls include a rotary switch for selecting the four-decade range, instrument shut-off, and battery test, an audio on/off switch, a fast/slow response switch, and a count reset button.



- Intrinsically Safe Gamma Survey Meter
- Rugged
- 4-Range Analog Ratemeter
- Built-in Energy Compensated GM Detector
- 0.1 mR/hr to 1.0 R/hr Detector Range



PEO Detection Page 67 of 461

Model 3-IS Intrinsically Safe Survey Meter



This intrinsically safe general purpose ratemeter is patterned after Ludlum's best-selling Model 3. It was designed and tested to USA standards for intrinsic safety, permitting it to be used in potentially explosive atmospheres. The Model 3-IS can only be used with select detectors to sustain the intrinsic safety rating. Click the tab below to view compatible detectors.

Like the Model 3 before it, the 3-IS retains the well-deserved reputation for accuracy and long-lasting dependability. The cast aluminum instrument housing, with its separate battery compartment and accompanying metal handle, offer an industrial robustness and quality that promote long-lasting protection and instrument life. The front-panel controls include a rotary switch for selecting the four-decade range, instrument shut-off, and battery test, an audio on/off switch, a fast/slow response switch, and a count reset button. The analog meter comes in a variety of measurement ranges and units to support the external radiation detector selected.

A one meter (39 in.) straight type detector cable equipped with special connectors designed to prevent quick or accidental disconnection in the field is included in the price of the instrument.

Features

- Intrinsically Safe
- Rugged
- 4-Range Analog Ratemeter
- Supports GM & Scintillation Type Detectors



PEO Detection Page 68 of 461

Model 12-4 Neutron Dose Survey Meter



The Model 12-4 is an industry standard neutron dose rate instrument that conforms to the RPG curve with a measuring range of 0 to 100 mSv/h (0 to 10,000 mrem/hr) from thermal to 12 MeV.

The detector is a 22.9 cm (9 in.) moderated ³He tube with a gamma background rejection up to 100 mSv/h (10 R/hr). The ratemeter is a four-decade analog meter, designed with a cast aluminum instrument housing incorporating a separate battery compartment, and accompanying metal handle. This design delivers industrial robustness and quality, promoting long-lasting protection and instrument life.

The front-panel controls include a rotary switch for selecting the four-decade range, instrument shut-off, and battery test; an audio on/off switch; a fast/slow response switch; a count reset; and high-voltage test push-button. The Model 12-4 is a complete turn-key system and includes two "D" cell batteries.

Features

- Moderated Neutron Detector
- Range: 0 to 100 mSv/h (0 to 10,000 mrem/hr)
- Gamma Rejection up to 0.1 Sv/h (10 R/hr)
- Rugged
- 4-Range Analog Meter




PEO Detection Page 69 of 461

Model 30-4 Digital Neutron Survey Meter



The Ludlum Model 30-4 joins the Model 30 digital display unit with a 22.9 cm (9 in.) REM ball containing a ³He detector, thereby providing a significant weight reduction and more compact, maneuverable instrument for determining neutron dose rates. Three modes of operation – RATE, MAX, and COUNT – are available for the user. Measurements can be collected in two sets of units (primary and secondary) for RATE and MAX modes in cps, cpm, rem/hr, or Sv/h units. An internal switch is used to enable or disable the front-panel setup feature to protect desired settings from inadvertent modification. Setup is also available via software from Ludlum Measurements.

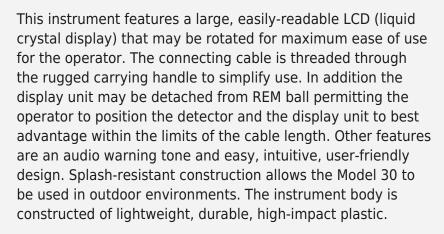

Features

- Multi-Function Digital Display Unit
- Low-Weight Device Substitutes for Ratemeter
- Simple Switching Between Two Sets of Measurement Units
- Moderated Neutron Detector
- Range: 0 to 99.9 mSv/h (0 to 9.99 rem/hr)
- Display Unit Detaches for Greater Versatility



PEO Detection Page 70 of 461

Model 12-4-7 Neutron Dose Survey Meter



The Model 12-4-7 is a neutron dose rate instrument that conforms to the RPG curve with a measuring range of 0 to 100 mSv/h (0 to 10,000 mrem/hr) from thermal to 12 MeV neutrons.

The detector is a 19.5 cm (7.7 in.), moderated ³He tube with a gamma background rejection up to 100 mSv/h (10 R/hr). The ratemeter is a four-decade analog meter, designed with a cast aluminum instrument housing incorporating a separate battery compartment, and accompanying metal handle. This design delivers industrial robustness and quality, promoting long-lasting protection and instrument life.

The front-panel controls include a rotary switch for selecting the four-decade range, instrument shut-off, and battery test; an audio on/off switch; a fast/slow response switch; a count reset; and high-voltage test push-button. The Model 12-4-7 is a complete turn-key system and includes two "D" cell batteries.

Features

- Smaller, Lighter 7-inch Polyethylene Ball
- Moderated Neutron Detector
- Range: 0 to 100 mSv/h (0 to 10,000 mrem/hr)
- Gamma Rejection up to 0.1 Sv/h (10 R/hr)
- Rugged
- 4-Range Analog Meter
- Complete Turn-Key System



PEO Detection Page 71 of 461

Model 3007 Series Neutron Dose Survey Meter With Optional Internal Gamma Detector



The Model 3007 Series of neutron dose survey meters combines a handheld digital meter with a 19.5 cm (7.7 in.) diameter REM ball containing a ³He detector to measure and monitor neutron radiation. Several versions of these instruments are available. The Model 3007 and Model 3007B use similar detectors that only differ by the boron concentration in the internal borated layer. The Model 3007 has a lower boron concentration and offers a typical sensitivity of 10 cpm per µSv/h (100 cpm per mrem/hr), but tends to overrespond in the 5 keV range. The Model 3007B has a higher boron concentration and a lower sensitivity, typically 4.5 cpm per μSv/h (45 cpm per mrem/hr), but does not have the same overresponse issue. The Model 3007-1 has a higher pressure detector that offers greater sensitivity, typically 17 cpm per µSv/h (170 cpm per mrem/hr), but falls under shipping regulations due to the pressure. "i" versions include an internal gamma detector in the meter for exposure or dose measurements.

Each instrument features a large, easy-to-read LCD screen and is controlled using a simple five-button interface. The meter body is made of high-impact plastic, and splash resistant construction allows the instruments to be used outdoors.

Four modes of operation are available – RATE, MAX, COUNT, and DOSE – which can be selected by pressing the MODE button. Measurements can be collected in two sets of units (primary and secondary) for RATE and MAX modes in cps, cpm, Bq, dpm, mR/hr, mrem/hr, or μ Sv/h units. The user can switch between two sets of units by pressing the UNITS button. Audible alarms can be set in all modes of operation. When enabled with the optional Lumic Data Logger Kit, data can be logged in any of the operational modes using the LOG button on the handle. Up to 1000 data points can be stored internally.

Instrument setup can be done either through the front-panel controls or via the Lumic Calibration Kit. The Model 3007 is shipped ready to use with batteries and a calibration certificate.

Features

- Small & Light 19.5 cm (7.7 in.) REM Ball
- Moderated Neutron Detector



PEO Detection Page 72 of 461

- Range: 0 100 mSv/h (0 10,000 mrem/hr)
- Gamma Rejection up to 0.1 Sv/h (10 R/hr)
- "i" Versions: Internal Gamma Detector Option for Exposure/Dose Measurements
- Rate, Max, Integrated Dose & Count Modes
- Digital Calibration, Data Logging, Auto-Ranging, USB
- Large, Backlit, Easy-to-Read LCD Screen
- Simple 5-Button Interface

PEO Detection Page 73 of 461

Model 30-7 Series Lightweight Digital Neutron Survey Meter



The Model 30-7 Series are handheld, lightweight neutron dose detectors that join the Model 30 digital meter with a 19.5 cm (7.7 in) diameter REM ball containing a 3 He detector. The instruments use similar detectors that only differ by the boron concentration in the internal borated layer. The Model 30-7 detector has a lower boron concentration and offers a greater sensitivity, typically 10 cpm per μ Sv/h (100 cpm per mrem/hr), but tends to overrespond in the 5 keV range. The Model 30-7B detector has a higher boron concentration and a lower sensitivity, typically 4.5 cpm per μ Sv/h (45 cpm per mrem/hr), but does not have the same overresponse issue as the Model 30-7.

Three modes of operation – RATE, MAX, and COUNT – are available for the user. Measurements can be collected in two sets of units (primary and secondary) for RATE and MAX modes in cps, cpm, rem/hr, or Sv/h units. An internal switch is used to enable or disable the front-panel setup feature to protect desired settings from inadvertent modification. Setup is also available via the Lumic calibration software (see Options tab).

Each instrument features a large, easily-readable LCD (liquid crystal display) that may be rotated for maximum ease of use by the operator. The connecting cable is threaded through the rugged carrying handle to simplify use. In addition, the display unit may be detached from REM ball, permitting the operator to position the detector and the display unit to best advantage within the limits of the cable length. Other features are an audio warning tone and easy, intuitive, user-friendly design. Splash-resistant construction allows the Model 30-7 Series to be used in outdoor environments. The display body is constructed of lightweight, durable, high-impact plastic.

Features

- Small & Light 19.5 cm (7.7 in.) REM Ball
- Moderated Neutron Detector
- Digital Display with Adjustable Viewing Angle
- Range: 0 to 99.9 mSv/h (0 to 9.99 rem/hr)
- Low-Weight Unit Provides Same Readings as Standard REMball from Bare AmBe and Lower Energies
- Includes Adjustable Shoulder Strap



PEO Detection Page 74 of 461

Model 12 General Purpose Survey Meter



This general purpose, handheld analog ratemeter supports GM, proportional, and scintillation type detectors. The analog meter face comes in a variety of options to support the measurement units and ranges for the optional external detector selected.

The cast aluminum instrument housing with its separate battery compartment and accompanying metal handle offer an industrial robustness and quality that promote long lasting protection and instrument life. The front panel controls include a rotary switch for selecting the four-decade range, instrument shut-off and battery test, an audio on/off switch, a fast/slow response switch, a high voltage display button, and a count reset button.

A one-meter (39 in.) straight type detector cable with "C" style connector and batteries are included in the price of the instrument.

Features

- Low Price
- Rugged
- 4-Range Analog Ratemeter
- Supports GM, Proportional, and Scintillation Type Detectors
- Greater Than 2000 Hour Battery Life



PEO Detection Page 75 of 461

Model 14C General Purpose Survey Meter



This general purpose, handheld analog ratemeter supports operating two separate radiation detectors. A switch allows the user to select between the internally mounted GM detector with an exposure range of 0 – 20 mSv/h (0 – 2000 mR/hr) or an external GM or scintillator detector of choice (see table below).

The cast aluminum instrument housing, with its separate battery compartment and accompanying metal handle, offer an industrial robustness and quality that promote long-lasting protection and instrument life. The front-panel controls include a rotary switch for selecting the five-decade range and instrument shut-off, an audio on/off switch, a fast/slow response switch, a high voltage display button, and a battery test button.

The analog meter face comes in a variety of options to support the measurement units and ranges for the additional external detector selected. A one meter (39 in.) straight type detector cable with "C" style connector is included in the price of the instrument.

Features

- Low Price
- Rugged
- 5-Range Analog Ratemeter
- Operates Two Detectors
 - Built-in Internal GM Detector (0 to 2000 mR/hr)
 - External GM or Scintillation Detector



PEO Detection Page 76 of 461

Model 16 General Purpose Survey Meter



This general purpose, handheld analog ratemeter supports GM, proportional, and scintillation type detectors. The cast aluminum instrument housing, with its separate battery compartment and accompanying metal handle, offers an industrial robustness and quality that promotes long-lasting protection and instrument life.

The front-panel controls include a rotary switch for selecting the four-decade range, instrument shut-off, and battery test, an audio on/off switch, a fast/slow response switch, a high-voltage display button, a count reset button, and a window in/out switch. The analog meter face comes in a variety of options to support the measurement units and ranges for the additional external detector selected.

A one-meter (39 in.) long straight type detector cable with "C" style connector is included in the price of the instrument.

Features

- Low Price
- Rugged
- 4-Range Analog Ratemeter
- Supports GM, Proportional, & Scintillation Type Detectors
- Adjustable Window



PEO Detection Page 77 of 461

Model 18 General Purpose Survey Meter



This general purpose, handheld analog ratemeter supports GM, proportional, and scintillation type detectors. The analog meter face comes in a variety of options to support the measurement units and ranges for the optional external detector(s) selected.

The unique capability this instrument offers is its ability to select between three different detector setups. This feature facilitates switching detectors in the field without requiring calibration adjustments. In addition to the three-position detector selector switch, the front panel also provides the user with the capability to switch the operating window between an open (gross) channel and a pre-selected narrower setting when targeting specific energies. Other front-panel controls include a rotary switch for selecting the four-decade range, instrument shut-off and battery test, an audio on/off switch, a fast/slow response switch, a high-voltage display button, and a count reset button.

The cast aluminum instrument housing with its separate battery compartment and accompanying metal handle offer an industrial robustness and quality that promote long-lasting protection and instrument life. A one meter (39 in.) straight type detector cable with "C" style connector is included in the price of the instrument.

Features

- Low Price
- Rugged
- 4-Range Analog Ratemeter
- Supports GM, Proportional & Scintillation Type Detectors
- Adjustable Window
- 3-Detector, High-Voltage Setups



PEO Detection Page 78 of 461

Model 3 General Purpose Survey Meter



The Model 3 is Ludlum's best selling, general purpose, handheld, analog ratemeter known for accuracy and long-lasting dependability. It comes in a variety of measurement ranges and units to support the external radiation detector selected.

The cast aluminum instrument housing with a separate battery compartment and metal handle offer an industrial robustness and quality that promote long-lasting protection and instrument life. The front-panel controls include a rotary switch for selecting the four-decade range, instrument shut-off, and battery test, an audio on/off switch, a fast/slow response switch, and a count reset button.

A one meter (39 in.) straight type detector cable with "C" style connector is included in the price of the instrument.

Features

- Low price
- Rugged
- 4-Range Analog Ratemeter
- Supports GM & Scintillation Type Detectors
- Greater than 2000 Hour Battery Life



PEO Detection Page 79 of 461

Model 3A General Purpose Survey Meter with Alarm



The Model 3A is identical to Ludlum's best selling, general purpose, Model 3 handheld analog ratemeter with the addition of an audible alarm. It is likewise known for its accuracy and long-lasting dependability. The cast aluminum instrument housing with its separate battery compartment and accompanying metal handle offer an industrial robustness and quality that promote long-lasting protection and instrument life.

The front-panel controls include a rotary switch for selecting the four-decade range, instrument shut-off, and battery test, an audio on/off switch, a fast/slow response switch, and a count reset button. The analog meter comes in a variety of measurement ranges and units to support the external radiation detector selected.

A one meter (39 in.) long straight type detector cable with "C" style connector is included in the price of the instrument..

Features

- Low Price
- Rugged
- 4-Range Analog Ratemeter
- Alarms
- Supports GM & Scintillation Type Detectors



PEO Detection Page 80 of 461

Model 3-97 Gamma Survey Meter



The Model 3-97 provides a great solution for locating potential contamination and then accurately measuring the exposure rate, or for simply measuring the ambient exposure levels over a wide range. The instrument is equipped with an internal 2.5 x 2.5 cm (1 x 1 in.) Nal detector that is highly sensitive to gamma, with readings in the μR range between 0 to 3000 μ R/hr (0 to 3 mR/hr). The instrument is additionally equipped with an external Model 44-38 energy-compensated GM to extend the detection range up to 200 mR/hr. The ratemeter is Ludlum's venerable Model 3-series, which employs a robust cast aluminum instrument housing with a separate battery compartment for long-lasting protection and instrument life. The front-panel controls include a rotary switch for selecting the 4-decade range, instrument shut-off and battery test, audio on/off switch, fast/slow response switch, count reset button, and internal/external detector switch. The Model 3-97 is a complete turn-key system with the detector cable and two "D" cell batteries.



Features

- Wide Range from μR/hr to 200 mR/hr
- High-Sensitivity Gamma
- Rugged
- 4-Range Analog Ratemeter

PEO Detection Page 81 of 461

Model 195 with Model 43-132 High Range Alpha Ion Chamber



The high-range alpha ion chamber system uses the Model 43-132 Ion Chamber and the Model 195 readout unit. The Model 43-132 is designed to enhance alpha detection, although it is also sensitive to beta-gamma radiation. The Model 195 has a rugged cast aluminum instrument housing with sealed battery compartment that offer an industrial robustness and quality that promote long-lasting protection and instrument life.




PEO Detection Page 82 of 461

Model 3-98 1251 & Alpha-Beta-Gamma Survey Meter



Ludlum's Model 3-98 is uniquely configured to optimize measurements for ¹²⁵I and any alpha, beta, or gamma contamination. The dual detector design allows the user to select the detector for the task at hand. The internally-housed GM pancake detector can be used to measure gamma. This detector's face can be exposed via a slide located along the bottom of the instrument, thus making it sensitive to alpha and beta as well. The external NaI detector, Ludlum Model 44-3, is optimized for low-energy gamma from ¹²⁵I.

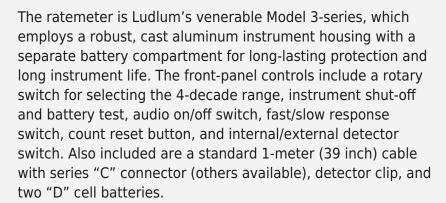

Features

- Dual Purpose Detection
- ¹²⁵I & Alpha-Beta-Gamma Contamination
- 4-Range Analog Ratemeter
- Rugged Construction
- 0 to 500 kcpm
- User-Selectable Internal and External Detectors



PEO Detection Page 83 of 461

Model 194 Dose Equivalent Rate Meter



Features

- Accurate (Energy-Flat) Ambient Dose Equivalent Rate Measurements
- Eliminates High False Readings of Typical microR Meters
- Rugged Scintillator, Will Not Leak
- Low Range: Background to 19.99 μSv/h (1999 μrem/hr)
- High Range: 1 to 1999 μ Sv/h (0.1 to 199.9 mrem/hr)
- Improved Replacement for Bicron Microrem
- "/E" Extended Version Has Low-Energy, 3.2 mg/cm² Window for Operation Below 50 keV



PEO Detection Page 84 of 461

Model 2403 Pocket-Size Survey Meter



The Model 2403 is a pocket-size ratemeter with an analog display that may be connected to a number of detectors. This unit supports mR/hr exposure and cpm count-rate measurements. The metallic case and convenient size make this a nice tool to for a wide variety of applications.

Features

- Pocket-Size Ratemeter
- Accommodates a Variety of Detectors
- Metallic Case
- Easy to Use



PEO Detection Page 85 of 461

Model 2402 Pocket-Size Survey Meter with Alarm



The Model 2402 is a pocket-sized ratemeter with an analog display that may be connected to a number of available detectors. This unit supports mR/hr exposure and cpm countrate measurements. It also has a built-in audio and visual alarm. The metallic case and convenient size make this a nice tool to for a wide variety of applications.

Features

- Pocket-Size Ratemeter
- Accommodates a Variety of Detectors
- Audio & Visual Alarm
- Metallic Case
- Easy to Use



PEO Detection Page 86 of 461

Model 35 Vehicle-Mounted Digital Survey Meter



The Ludlum Model 35 is a versatile, lightweight, vehicle mounted instrument with an external detector used for alpha, beta, or gamma radiation survey. It remains unobtrusive until an alarm is reached. At that point the monitor can be quickly removed from the mount for closer inspection. Three modes of operation – RATE, MAX, and COUNT – are available for the user. Measurements can be collected in two sets of units (primary and secondary) for RATE and MAX modes in cps, cpm, Bq, dpm, R/hr, rem, or Sv/h units. The user can switch between two sets of chosen units by simply pressing the Units button.



An internal switch is used to enable or disable the front-panel setup feature to protect desired settings from inadvertent modification. Setup is also available via software available from Ludlum Measurements.

This instrument features a large, easily-readable LCD (liquid crystal display), an audio warning tone, and easy, intuitive, user-friendly design. Splash-resistant construction allows the Model 35 to be used outdoors. The instrument body is made of lightweight, durable, high-impact plastic. The Model 35 is shipped ready to use with batteries and calibration certificate.

Features

- Includes Rotatable Ball-Mount Stand
- Optional Windshield and Under-Dash Mounts Available
- Powered by Connected Vehicle or Internal Batteries
- Large Backlit Auto Ranging LCD with Adjustable Viewing Angle
- Simple Green, Yellow, and Red Status Lights
- 3-Button Intuitive Interface for Easy Operation
- USB Port and All-Digital Calibration

PEO Detection Page 87 of 461

Model 30 Digital Survey Meter - Ludlum



The Ludlum Model 30 is a versatile, lightweight, instrument used with an external detector for alpha, beta, or gamma radiation survey. Three modes of operation – RATE, MAX, and COUNT – are available for the user. Measurements can be collected in two sets of units (primary and secondary) for RATE and MAX modes in cps, cpm, Bq, dpm, R/hr, rem, or Sv/h units.



The user can switch between two sets of chosen units by simply pressing the Units button. An internal switch is used to enable or disable the front-panel setup feature to protect desired settings from inadvertent modification. Setup is also available via software available from Ludlum Measurements.

This instrument features a large, easily-readable LCD (liquid crystal display), a piercing audio warning tone, and easy, intuitive, user-friendly design. Splash-resistant construction allows the Model 30 to be used outdoors. The unit body is made of lightweight, durable, high-impact plastic. The Model 30 is shipped ready to use with batteries and calibration certificate.

Model 30 Digital Survey Meter features

- attaches to detector allowing one-handed operation
- large backlit auto-ranging LCD with adjustable viewing angle
- simple green, yellow, and red status indicators
- 3-button intuitive interface for easy operation
- USB port and all-digital calibration
- available in stretch scope configuration

View compatible probes <u>here</u>

Download the datasheets below or contact our product specialist.

PEO Detection Page 88 of 461

Model 44-9 Pancake GM Detector - Ludlum



The Model 44-9 Pancake GM Detector (Ludlum) is proven to be the most popular radiation detector used throughout the world. This detector is sensitive to alpha, beta and gamma radiation. The Model 44-9 Pancake GM Detector is enclosed within a rough metal cage but sized and shaped very convenient. It is ideal for checking contamination on people and objects.



Model 44-9 Pancake GM Detector features:

- window area: 15.51 cm² (2.4 in²) active, 12.26 cm² (1.9 in²) open
- pancake-type, halogen-quenched GM detector
- efficiency (4π): 5% for 14C; 22% for 90Sr/90Y; 19% for 99Tc; 32% for 32P; 15% for 239Pu, ≤ 1% for 99mTc: 0.2% for 125I
- sensitivity (137Cs gamma): 3300 cpm/mR/hr
- weight: 0,5 kg

Read more about the Model 44-9 Pancake GM Detector on the <u>Ludlum website</u>

PEO Detection Page 89 of 461

Model 3001-MERK response kit



Medical Environment Response Kit

This response kit is an ideal tool for any nuclear medicine department or emergency department. It offers a detector complement optimized for medical isotopes and includes personal radiation monitoring. The kit fits securely in a foampadded, padlockable, rugged storage and transport case, and will easily meet the radiation requirements of the emergency response plan.



The Model 3001-MERK Medical Environment Response Kit includes:

- Model 3001 Multi-Detector Digital Survey Meter
- Model 44-9, Alpha-Beta-Gamma Detector
- Model 44-2, Gamma Scintillator Detector
- Model 44-142, Beta Scintillator Detector
- Model 25 or Model 25-1 Personal Radiation Monitor
- 1 μCi (¹³⁷Cs) check source
- 1 m (39 in.) long detector cable
- Carrying case for easy transportation of the kit to the affected site

Ludlum offers several versions of pre-packaged response kits suitable for a wide variety of applications. If you desire more or different detectors, or other changes to our standard kits, please contact us regarding a customized kit.

PEO Detection Page 90 of 461

Model 3001-2RK Emergency Response & NORM Kit



The Model 3001-2RK is composed of two dependable, highquality detectors matched with the versatile Model 3001 survey meter and packaged in a rugged transport and storage case.

The Model 3001 can be configured with up to four detector setups, enabling the user to quickly exchange detectors in the field. Once the detector system is configured, a user can select a detector's parameters with a press of a button and choose the desired measurement units and operation mode.

The kit includes the Model 44-9 alpha-beta-gamma detector for general survey measurements and the Model 44-2 high-sensitivity gamma detector for locating the source of high readings. The case is cushioned with dense foam padding, and has a large, comfortable grip, a manual pressure relief valve, and padlockable hasps. The kit also includes a 1 μ Ci (137 Cs) check source, check source holder, cable, and batteries, making this kit ready-to-go for emergency response or NORM applications.

Ludlum offers several versions of pre-packaged response kits suitable for a wide variety of applications. If you desire more or different detectors, or other changes to our standard kits, please contact us regarding a customized kit.

Features

- Ready-to-Go Kit in Rugged Case
- Ergonomic Survey Meter with 4 Selectable and Configurable Detector Settings
- Measures Alpha, Beta, and Gamma Contamination
- Convenient In-Field Detector Switching
- For Emergency Response or NORM Applications
- Includes:
 - Model 3001 Multi-Detector Survey Meter
 - Model 44-9 Alpha-Beta-Gamma Detector
 - Model 44-2 High Energy Gamma Detector
 - Check Source, Cable, Batteries
 - Transport & Storage Case with dense foam padding



PEO Detection Page 91 of 461

Model 2241-3RK2 Emergency Response Kit



All of the basic radiation measurement tools likely required to rapidly react to a radiological emergency are conveniently assembled in the Model 2241-3RK2 Response Kit. The digital, auto-ranging Model 2241-3 scaler-ratemeter stores 4 parameter setups to allow for quick detector changes in the field.

The Model 2241-3 has a backlit LCD and user-adjustable alert and alarm for both scaler and ratemeter modes. The rugged transport and storage case is foam-padded with custom cutouts for the instruments and gives air- and watertight, corrosion-proof, and padlockable protection. A check source with mountable holder is included to ensure instruments are functioning properly.

Ludlum offers several versions of pre-packaged response kits suitable for a wide variety of applications. If you desire more or different detectors, or other changes to our standard kits, please contact us regarding a customized kit.

Features

- Ready-to-Go Response Kit in Rugged Case
- Digital Scaler-Ratemeter with User-Adjustable Audible & Visual Alarms
- Includes Check Source and Cable
- Measures Alpha, Beta, and Gamma Contamination
- Convenient In-Field Detector Switching



PEO Detection Page 92 of 461

Model 26-2 - Integrated Frisker with Timed Frisk



- Integrated, Lightweight Design
- High-Impact Plastic with Water-Resistant Rubber Seals
- GM Pancake Detector
- Ratemeter, Peak, and Timed Frisk Operating Modes
- Simple Two-Button Operation
- Automatic LCD Backlight
- Comfortable Non-Slip Grip, Includes Lanyard & Adjustable Wrist Strap
- Daylight-Visible Green & Red Status LEDs



PEO Detection Page 93 of 461

Model 70 Series - Ludlum



Spectroscopic Personal Radiation Detector

The Ludlum Model 70 Series are high resolution CZT-type detectors that deliver unparalleled performance in express radionuclide identification and radiation dose assessment from low to moderate-high levels.

Each instrument is accompanied by GalaxRayWiz software, a powerful tool which communicates with the device, analyzes gamma-spectra and dose-rate time profiles accumulation of 14 hours. Collected data can be easily transferred via USB or Wi-Fi.

Continuous dose rate monitoring and recording enables the user to be instantly informed about radiation exposure and to carefully analyze radiation dose risks by exploring the dose rate recorded charts.



Features

- Handheld Gamma Spectrometer
- Mobile Phone Sized
- Three Button Operation
- Radiation Dose Assessment
- Dose Rate Time Profile Recording
- Express Nuclide Identification
- One Thousand Gamma-Spectra Storage
- Temperature Stabilized
- Complies with ANSI 42.48-2018

1	Detector Dimes
	CZT detector: 5 x 10
on detector	CZT detector: 5 x 10 Neutron detector: 15 x 40 mm (LHe)
М	CZT detector: 16 x 1
ron detector	CZT detector: 16 x 1 Neutron detector: 15 x 40 mm (Li-6)

PEO Detection Page 94 of 461





https://youtu.be/ ZSXcECQeho





Energy Range: 0.03 to 3.0 MeV, 1024 Ch

Energy Resolution: 1.8 to 2.5% at 662 keV

Gamma Dose Rate: within 30% accuracy per ANSI N42-48 from 0.5 μSv/h to 3 mSv/h (5 μR/hr to 300 mR/hr)

Gamma Efficiency: 70/1, 70/2: 0.06 cps per μ R/hr 70/3, 70/4: 0.18 cps per μ R/hr

Neutron Sensitivity: ≈ 2.4 cps/nv

Nuclide ID Over-Range Dose Rate: 0.5 mSv/hr

Preset Time: 86,400 s

Display: LCD 7.1 cm (2.8 in.), 240 x 320 pixels, backlight

Alarms: Audio (~85 dB), audio jack, vibrator, LED operations, 3-button keyboard

Data Storage: Up to 1000 spectra and up to 24 hours of dose rate time records

Data Transfer: via USB and Wi-Fi

Data Throughput: ≈ 70,000 cps

Power: Lithium-ion rechargeable battery, 3.7 V 5200 mAh

Battery Life: With Wi-Fi on and back-light on: Up to 14 hours with Wi-Fi off and back-light on: Up to 26 hours

Charge Time: 4 – 5 hours, with battery indicator on display

Temperature Range: -10 to 50 °C (-4 to 122 °F). Relative humidity \leq 95%.

Environmental Rating: IP63 with rubber sleeve

Dimensions: (L x W x H) 100 x 75 x 48 mm (4 x 3 x 1.9 in.)

Weight: 220 g (0.5 lb) with battery

PEO Detection Page 95 of 461

Model 3019 Digital Background Survey Meter - Ludlum



The Model 3019 Digital Background Survey Meter (Ludlum) is a device with an internal scintillation detector used for gamma radiation survey for background to 500 μ Sv/hr.



Model 3019 Digital Background Survey Meter features:

- internal CsI, scintillator with 175 cpm/μR/hr sensitivity detector
- count, rate and max
- 4-button intuitive interface for easy operation
- ruggedly built and light weight
- splash-resistant construction
- bright LED and sigma audio simplifies searching
- large backlit LCD for ease of reading
- USB port
- autoranging

Read more about the Model 3019 Digital Background Survey Meter on the <u>Ludlum website</u>

PEO Detection Page 96 of 461

Model 133-6 GM Detector - Ludlum



The Model 133-6 GM Detector (Ludlum) is a gamma survey detector (GM) that can be used with any scaler instrument, ratemeter or area monitor that delivers the appropriate amount of voltage (see datasheet below) with an input sensitivity of 30 ± 10 mV.



Model 133-6 GM Detector features:

- waterproof (optional)
- halogen quenched
- stainless steel tube
- range: 40 μSv/h to 10 Sv/h
- energy compensated GM

Read more about the Model 133-6 GM Detector on the <u>Ludlum Website</u>

PEO Detection Page 97 of 461

Model 133-4 GM Detector - Ludlum



The Model 133-4 GM Detector (Ludlum) is a gamma survey detector (GM) that can be used with any scaler instrument, portable ratemeter or area monitor that delivers the appropriate amount of voltage (see datasheet below) with an input sensitivity of 30 ± 10 mV.



Model 133-4 GM Detector features:

- waterproof (optional)
- halogen quenched
- stainless steel tube
- range: 0.01 mSv/h to 100 mSv/h
- energy compensated GM

Read more about the Model 133-4 GM Detector on the Ludlum Website

PEO Detection Page 98 of 461

Model 133-2 GM Detector - Ludlum



The Model 133-2 GM Detector (Ludlum) is a gamma survey detector (GM) that can be used with any scaler instrument, portable ratemeter or area monitor that delivers the appropriate amount of voltage (see datasheet below) with an input sensitivity of 30 ± 10 mV.



Model 133-2 GM Detector features:

- stainless steel tube
- energy compensated GM
- waterproof (optional)
- halogen quenched
- range: 1 µSv/h-10 mSv/h

Read more about the Model 133-2 GM Detector on the Ludlum Website

PEO Detection Page 99 of 461

Model 44-3 NAL Low Energy Gamma Scintillator - Ludlum



The Model 44-3 NAL Low Energy Gamma Scintillator (Ludlum) is a detector for 125I and low energy gamma radiation survey.



Model 44-3 NAL Low Energy Gamma Scintillator features:

• entry window: 18.4 mg/cm²

• weight: 0.5 kg

sensitivity: 675 cpm/μR/hr (125I)
window area: 5 cm² open and avtive

efficiency (4π): 33.5%–125I (based on 129I efficiency of 18%)
detector: scintillator, 2.5 cm diameter x 1 mm thick NaI(TI) crystal

• photomultiplier tube: 3.8 cm diameter

Read more about the Model 44-3 NAL Low Energy Gamma Scintillator on the <u>Ludlum website</u>

PEO Detection Page 100 of 461

Model 44-2 NAL Gamma Scintillator - Ludlum



The Model 44-2 NAL Gamma Scintillator (Ludlum) is a detector for low-level, wide-energy gamma radiation survey.



Model 44-2 NAL Gamma Scintillator features:

- detector: scintillator, 2.5 x 2.5 cm (1 x 1 in.) (Dia x L) thick Nal
- efficiency: 125I for 7%; 57Co for 10%; 137Cs for 3%; 60Co for 3%
- sensitivity: 175 cpm/µR/hr (137Cs gamma)
- background: 1800 cpm
- photomultiplier tube: 2.86 cm (1.125 in.) diameter, magnetically shielded

Read more about the Model 44-2 NAL Gamma Scintillator on the Ludlum website

PEO Detection Page 101 of 461

Model 44-1 Beta Scintillator - Ludlum



The Model 44-1 Beta Scintillator (Ludlum) is a detector for beta radiation survey.



Model 44-1 Beta Scintillator features:

• window area: 9.7 cm² active and open

efficientcy (4π): 7% for 14C
background (10 μR/hr): 100 cpm

• weight: 0.3 kg

• detector type: 4.3 x 0.03 cm (1.7 x 0.01 in.) (Dia x L) plastic scintillator

Read more about the Model 44-1 Beta Scintillator on the <u>Ludlum website</u>

PEO Detection Page 102 of 461

Model 44-38 Energy Compensated GM Detector - Ludlum



The Model 44-38 Energy Compensated GM Detector (Ludlum) is a device for beta and gamma radiation survey.



Model 44-38 Energy Compensated GM Detector features:

- weight: 0.5 kg
- detector: 30-45 mg/cm2 stainless steel wall halogen guenched GM
- sensitivity: 1200 cpm per mR/hr (137Cs gamma) with window closed
- range: ± 10% up to 50 mR/hr without DTC and up to 500 mR/hr with DTC
- background: 25 cpm open, 20 cpm closed
- gamma energy response (window closed): within 20% of 137Cs (662 keV) from 60 keV to 1.3 MeV

Read more about the Model 44-38 Energy Compensated GM Detector on the <u>Ludlum website</u>

PEO Detection Page 103 of 461

Model 44-9 Ambient Dose Equivalent Filter - Ludlum



The Model 44-9 Ambient Dose Equivalent Filter (Ludlum) is an expansion on the Model 44-9 Pancake GM Detector. It is an energy compensation filter that flattens the energy response to facilitate measuring Ambient Equivalent Dose.



Model 44-9 Ambient Dose Equivalent Filter features:

- can be purchased separately or together with a Model 44-9 Pancake GM Detector
- flattens the response to within ± 20% referenced to 137Cs (662 keV) over an energy range of 20 keV to 1.2 MeV
- easy to mount and remove

Dose Equivalent Filter Response (green line):

Read more about the Model 44-9 Ambient Dose Equivalent Filter on the Ludlum website

PEO Detection Page 104 of 461

Model 44-9 Exposure Filter Kit - Ludlum



The Model 44-9 Exposure Filter Kit (Ludlum) is an expansion on the Model 44-9 Pancake GM Detector. It is an energy compensation filter that flattens the energy response to facilitate measuring exposure.



Model 44-9 Exposure Filter Kit features:

- flattens the response to within $\pm 20\%$ referenced to 137 Cs (662 keV) over an energy range of 33 keV to 1.2 MeV
- easy to mount and remove
- filter can be purchased separately or together with a Model 44-9 Pancake GM Detector

Exposure Filter Response (blue line):

Read more about the Model 44-9 Exposure Filter Kit on the <u>Ludlum website</u>

PEO Detection Page 105 of 461

Model 44-7 Alpha Beta Gamma Detector - Ludlum



The Model 44-7 Alpha Beta Gamma Detector (Ludlum) is a device for alpha, beta and gamma survey (sample counting).



Model 44-7 Alpha Beta Gamma Detector features:

- end window, halogen-quenched GM detector
- 6 cm² (0.93 in²) active; 5 cm² (0.78 in²) open window area
- $1.7 \pm 0.3 \text{ mg/cm}^2 \text{ mica window}$
- 2% for 14C; 10% for 90Sr/90Y; 7% for 99Tc; 7% for 239Pu; 0.1% for 125I efficiency (4π)
- 2100 cpm/mR/hr sensitivity (137Cs gamma)
- anodized aluminum housing
- 0.5 kg weight

Read more about the Model 44-7 Alpha Beta Gamma Detector on the <u>Ludlum website</u>

PEO Detection Page 106 of 461

Model 43-92 Alpha Scintillator - Ludlum



The Model 43-92 Alpha Scintillator (Ludlum) is a device for alpha contamination survey.



Model 43-92 Alpha Scintillator features:

- window area: active: 100 cm² (15.5 in²) open: 88 cm² (13.6 in²)
- weight: 0.5 kg
- window: 0.8 mg/cm² metalized polyester (1.2 mg/cm² recommended for outdoor use)
- scintillator: ZnS(Ag)
- efficiency (4π): typically 20% for ²³⁹Pu
- removable protective screen
- background radiation: 3 cpm or less
- photomultiplier tube: 2.9 cm (1.13 in.) diameter

Read more about the Model 43-92 Alpha Scintillator on the <u>Ludlum website</u>

PEO Detection Page 107 of 461

Model 43-65 Alpha Scintillator - Ludlum



The Model 43-65 Alpha Scintillator (Ludlum) is a detector designed for alpha radiation survey when used in combination with a general purpose survey meter, ratemeter or scaler instrument.



Model 43-65 Alpha Scintillator features:

- 63 cm² active; 50 cm² open (window area)
- ZnS(Ag) scintillator
- 0.8 mg/cm² metalized polyester window
- 3.8 cm (1.5 in.) diameter photomultiplier tube
- efficiency (4π): 17% for ²³⁹Pu; 17% for ²³⁰Th

Read more about the Model 43-65 Alpha Scintillator on the <u>Ludlum website</u>

PEO Detection Page 108 of 461

Model 43-5 Alpha Scintillator - Ludlum



The Model 43-5 Alpha Scintillator (Ludlum) is a detector developed for alpha radiation survey when used with a common purpose survey meter, ratemeter or scaler instrument. The detector housing is assembled of aluminum alloy with beige powder coat for easy maintenance and durability.



Model 43-5 Alpha Scintillator features:

• efficiency (4π): 13% for 239Pu

• scintillator: ZnS(Ag)

• 0.8 mg/cm² metalized polyester window

• background: 3 cpm or less

• weight: 0.9 kg

• window area: 76 cm² (11.9 in²) active, 50 cm² (7.8 in²) open

Read more about the Model 43-5 Alpha Scintillator on the <u>Ludlum website</u>

PEO Detection Page 109 of 461

Model 9DP Ambient Dose Ion Chamber Survey Meter - Ludlum



The Model 9DP Ion Chamber Survey Meter is a highly sensitive pressurised ion chamber meter. It doesn't only provide a measurement of exposure, but also of exposure rate. The meter measures and displays data conform the ICRU (International Commission on Radiation Units) tissue equivalent.

AMBIENT DOSE EQUIVALENT

Ambient dose equivalent, is the dose equivalent readout that would be measured at a tissue depth of 10 mm. To measure this, the device requires a special ion chamber to provide a conversion of the exposure rate.

This model can simultaneously display the rate, integrated value and highest rate seen by the instrument. If desired, the user can reset the integrated value.



FEATURES

This chamber survey meter has a nice 256K colour, bit-mapped display, which provides an optimised presentation of the data. The screen is also accompanied with icons that inform the user of the active functions and instrument status. The device can write all logged data in csv format.

When the device's alarms go off, the display will flash colours and, if the user wants, it can also make an acknowledgeable sound.

If you want more information about this Ion chamber survey meter, go to our partner's website!

BENEFITS

- Provides ICRU-Based ambient dose measures
- The colour display is also readable in sunlight
- Auto zeroing and ranging
- · Rechargeable batteries
- Alarm function
- USB Connectivity
- Data logging
- Chamber volume of 230 cc volume pressurised to 8 atmospheres (117 psi)
- 4-button control

PEO Detection Page 110 of 461



Model 9DP Overview https://youtu.be/UYPJQNVeC_I



Model 9DP* overview

9DP Control Panel Overview https://youtu.be/HusnR4e90yA



Model 9DP Control Panel Overview





If you want to know more about this model...

Read our article! Or contact PEO!

PEO Detection Page 111 of 461

Model 9DP-1 Ion Chamber Survey Meter - Ludlum



Ludlum designed the Model 9DP-1 Ion Chamber Survey Meter for radiography work where pulsed fields are being measured. This instrument correctly integrates 50 nanosecond pulses (and wider) that other systems typically miss or measure incorrectly.

The detector chamber is only pressurised to 1,36 atm (20 psi). The device has a nice 256-colour, bit mapped display, which provides an optimised presentation of the data. The instrument also has with icons that inform the user of the active functions and instrument status and which make it simple to use.



FEATURES

This chamber survey meter has an alarm that uses colour changes in the screen and an acknowledgeable audio output. It also has a rechargeable battery that delivers up to 30 hours of operation between charges.

The instrument writes the data in csv format for convenient retrieval.

The device measures both exposure and exposure rate, and can simultaneously display the exposure rate, integrated value and highest rate seen by the instrument.

BENEFITS

- Special design for measuring pulsed fields
- Low pressure chamber is non-hazmat
- Range from 0-500 mGy/h
- Sunlight readable colour display
- Auto zeroing & rangin
- Rechargeable batteries
- Alarming capability
- Data logging

If you want to know more, read <u>our article</u>, or take a look at <u>our partner's website!</u>



Model 9DP Overview https://youtu.be/UYPJQNVeC I

PEO Detection Page 112 of 461



9DP instrument overview

9DP Control Panel Overview https://youtu.be/HusnR4e90yA



9DP control panel overview

How To Decompress the Model 9DP https://youtu.be/JzbUaH9kfjU



Decompressing the Ion Chamber







PEO Detection Page 113 of 461

Partner Tracerco





Tracerco is a global leader in radiation detection and measurement, offering a comprehensive range of handheld monitors and personal electronic dosimeters. Their instruments are designed to provide accurate, real-time monitoring of radiation levels, ensuring safety and compliance in various industries.

Product offering





Dose Rate Monitor T402 & T402HR -Tracerco



Contamination Monitor T403 -Tracerco



T406 X-ray Monitor



Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™



NORM Monitor-IS -Tracerco



PEO Detection Page 114 of 461

Contamination Monitor T401 - Tracerco



The Tracerco™ T401 contamination monitors are suitable for those working in oil and gas, medical and life sciences, nuclear, CBRNe and emergency services, NDT, manufacturing, and environmental and waste management industries.

These monitor benefit from high-level functionality with added environmental tolerance, and they are a highly cost-effective monitor where intrinsic safety is not a concern.

Tracerco™ T401 contamination monitor is particularly suited to the detection of radioactive contamination, and this typically arises where man-made or naturally occurring isotopes are processed. This includes nuclear power, land remediation, research and development and medicine applications.

They also offer a number of additional key features, such as operational reliability, a direct surface ability mode and peak reading to make life easier for the worker.

The Tracerco™ T401 provides excellent sensitivity for the detection of alpha and beta radiation.

Other benefits include:

- Dual bar graph meter display: 0-1000cps
- Digital numeric display provides automatic direct translation to Bq/cm2 for 14+ pre-programmed nuclides, natural and man-made
- Detachable radiation probe with up to 1.5 metres of extendable cable
- Optional extension arm for surveying contaminated pipework, drains, laboratory floors and so on
- Probe stepwise rotatable through 90° for internal surface measurements
- Backlight facility
- Audible response with adjustable alarm thresholds
- Ruggedised nylon 6/6 construction and modular integrated electronics provide an all-weather instrument



PEO Detection Page 115 of 461

Dose Rate Monitor T402 & T402HR - Tracerco



The non-intrinsically safe radiation (contamination) Dose Rate Monitors T402 & T402HR offers an alternative to the Tracerco $^{\text{TM}}$ T202 Dose Rate Monitor. The instrument is designed for use in a wide range of industrial applications are radioactive substances are present.





Specifications Dose Rate Monitor T402 & T402HR Tracerco

Contamination Dose Rate Monitor T402 & T402HR

PEO Detection Page 116 of 461

Contamination Monitor T403 - Tracerco



The Tracerco™ T403 Radiation Contamination Monitor is designed to meet the challenge of combining the operational reliability under adverse conditions with excellent sensitivity and robust construction.



Specifications Contamination Monitor T403 from Tracerco

Contamination Monitor T403 - Tracerco

PEO Detection Page 117 of 461

T406 X-ray Monitor



The Tracerco[™] T406 X-ray radiation monitor is an advanced radiation monitoring device designed for professionals in oil and gas, medical and life sciences, nuclear, CBRNe and emergency services, NDT, manufacturing and industrial, and/collections/monitors/products/tracerco-t406-x-ray-monitor environmental and waste management industries.

Unlike other radiation survey meters on the market, the Tracerco $^{\text{TM}}$ T406 enables rapid radiation level detection, helping users identify peak radiation measurements and minimise exposure to potential radiation leaks during operations.

Benefits of the Tracerco[™] T406 X-ray monitor:

- Hygienic design smooth lines and an easy-to-clean finish make it ideal for environments with a risk of disease transmission through hand contact, such as food processing, airport security, and hospital settings.
- Easy and safe to use designed to be lightweight and easy to carry, with the ability to be operated remotely in demanding environments.
- Audible response with alarm set thresholds for enhanced radiation safety.



PEO Detection Page 118 of 461

Intrinsically Safe Radiation Dose Rate Monitor (T202) Tracerco™



The Tracerco T202 dose rate monitor provides key operational features like peak dose rate memory and personal dose integration. Tracerco designed the monitor specifically to combine intrinsic safety with robust and reliable characteristics.

The monitor is suitable for all kinds of markets like:

- Oil and gas
- First responders
- Military
- Life sciences
- Mining
- Nuclear
- Medical
- Environmental agencies



TRACERCO DOSE RATE MONITOR BENEFITS

- Intrinsically safe, so no need for a hot work permit
- Reads and records peak measurements so you can measure radiation levels remotely
- It can be used in every weather
- Adjustable alarm thresholds
- Lightweight
- Digital bar graph display and dose rate integration
- Easy to decontamination

If you want to know more about Tracerco Dose rate monitors, take a look at our partner's site!



Need advice or do you have a question?

Contact PEO!

PEO Detection Page 119 of 461

NORM Monitor-IS - Tracerco



Overview:

The Tracerco™ NORM Monitor-IS is a groundbreaking, ATEX-approved radiation monitoring device with dual probe capabilities. Using either a Geiger Muller (GM) detector or a scintillator probe, it enables users to monitor naturally occurring radioactive material (NORM) in all conditions for the first time.

It is lightweight and easy to use, yet also robust and reliable. It comes complete with a practical and secure carrying holster for ease of use.

The Tracerco[™] NORM Monitor-IS is available with different combinations of handset and probes depending on your requirements.

Benefits of the Scintillation Probe:

- Robust and suitable for use in challenging conditions
- Enables radiation surveys of external walls for internal NORM deposits
- 360° detection capability for comprehensive radiation monitoring
- μR/h option available for USA

Benefits of the GM Probe:

- Detects alpha and beta radiation
- High sensitivity to lead-210 NORM
- Provides Bg/cm² output for typical NORM isotopes
- Measurement modes: CPS, μSv/h (Scintillator), CPS, Bq/cm² (GM)
- All modes have background subtraction option CPM

Additional Key Features:

- One-touch integrate function for detecting very low radiation levels with increased accuracy.
- Live background subtraction and multiple measurement modes, including counts per second (CPS), counts per minute (CPM), dose rate, and surface activity.
- Easy recalibration recalibration can be performed without the handset (spare probes can be supplied to eliminate downtime).
- Adjustable alarm thresholds for enhanced radiation safety.
- Easy to clean and decontaminate Scintillator: IP67, GM: IP34, Handset: IP65.
- Large, easy-to-read LCD screen with bar graph and backlight for improved usability in low-light environments.

PEO Detection Page 120 of 461

Partner Polimaster





Polimaster is a global leader in radiation detection and monitoring solutions, offering a comprehensive suite of instruments designed to detect, identify, and measure ionizing radiation across various environments. Their product range includes handheld monitors, personal electronic dosimeters, portable isotope identifiers, portal monitors, and mobile detection systems, all engineered to meet the rigorous demands of security, emergency response, and industrial

applications.

Product offering

PM1401K-3M Multipurpose Hand-Held Radiation Monitor/Identifier



PM1401K-3P Multipurpose Hand-Held Radiation Monitor/Identifier



PoliPack® G-S Backpack Radiation Detector



PoliPack® GN
Backpack Radiation
Detector



PoliPack® G
Backpack Radiation
Detector



PoliPack® GN-S Backpack Radiation Detector



PEO Detection Page 121 of 461

PM1401K-3M Multipurpose Hand-Held Radiation Monitor/Identifier



PM1401K-3M model is a gamma-only radiation monitor without a neutron detector which is designed for quick and reliable measurement of gamma dose rate, detection of alpha, beta, and gamma sources, measurement of alpha and beta radiation flux density, acquisition of gamma spectra, identification of radioisotopes, and measurement of food/soil contamination with 137Cs

Features

- Storage of up to 10000 events and 1000 spectra
- Audible, visual and external vibration alarm
- Categorization of identified radionuclides
- · Shock and water resistant IP65 case
- Adjustable radionuclide libraries
- USB communication with PC
- · Built-in GPS module

Applications

- · Customs and border control
- HAZMAT and CBRNe teams
- Emergency services
- Police and security
- Industrial facilities
- First responders



PEO Detection Page 122 of 461

PM1401K-3P Multipurpose Hand-Held Radiation Monitor/Identifier



Gamma-neutron model suitable for various radiation control tasks.

The **PM1401K-3 series** of radiation monitors compromises a wide range of all-in-one devices for radiation detection, dose rate, contamination measurements, spectrometry, and radionuclide identification.

The **PM1401K-3P model** is the **gamma-neutron model** suitable for various radiation control tasks, including measurement of ambient dose equivalent rate, detection of alpha, beta, gamma, and neutron sources, measurement of alpha and beta radiation flux density, acquisition of gamma spectra, identification of radioisotopes, and measurement of food/soil contamination with ¹³⁷Cs.

Features

- Storage of up to 10000 events and 1000 spectra
- Audible, visual, and external vibration alarm
- Categorization of identified radionuclides
- Shock and water-resistant IP65 case
- Adjustable radionuclide libraries
- USB communication with PC
- Built-in GPS module

Operation principle

The PM1401K-3P continuously measures ambient dose equivalent rate $\dot{H}^*(10)$ of photon radiation in the wide energy range, detects alpha, beta, gamma, and neutron radiation, measures alpha and beta radiation flux density, operates as a gamma radiation spectrometer and radioisotope identifier, and measures food/soil contamination with 137Cs radionuclide.



PEO Detection Page 123 of 461

PoliPack® G-S Backpack Radiation Detector



Spectroscopic Gamma-only Backpack Radiation Detector.

The **PoliPack® G-S** is a **gamma-only** Backpack-Based Radiation Detection System (BRD) equipped with spectroscopic gamma detectors for identifying radionuclides. It is carried in a compact backpack and controlled remotely via the wired control unit or a smartphone with the free Polismart® iOS and Android App.

The **PoliPack® BRDs** are rugged, lightweight, and fast-deploying devices that provide prompt and reliable detection, location, and identification of multiple and masked isotopes. The device is ideal for undercover radiation surveys in crowded areas, addressing the problems of orphaned and maliciously introduced sources and ensuring security before and during mass events. Radionuclides libraries are uploaded in the BRD and can be customized by users.



PEO Detection Page 124 of 461

PoliPack® GN Backpack Radiation Detector



Gamma-Neutron Backpack Radiation Detector.

The **PoliPack® GN** is a **gamma-neutron** Backpack-Based Radiation Detection System (BRD) equipped with a highly sensitive portable radiation monitor carried in a compact backpack and controlled remotely via the wired control unit or a smartphone with the free Polismart® iOS and Android App.

The **PoliPack® BRDs** are rugged, lightweight, and fast deployable devices that provide prompt and reliable detection, location, and identification of multiple and masked isotopes. The device is ideal for undercover radiation surveys in crowded areas, addressing the problems of orphaned and maliciously introduced sources and ensuring security before and during mass events.



PEO Detection Page 125 of 461

PoliPack® G Backpack Radiation Detector



Gamma-only Backpack Radiation Detector.

The **PoliPack® G** is a **gamma-only** Backpack-Based Radiation Detection System (BRD) equipped with a highly sensitive portable radiation monitor carried in a compact backpack and controlled remotely via the wired control unit or a smartphone with the free Polismart® iOS and Android App.

The **PoliPack**® **BRDs** are rugged, lightweight, and fast-deploying devices that provide prompt and reliable detection, location, and identification of multiple and masked isotopes. The device is ideal for undercover radiation surveys in crowded areas, addressing the problems of orphaned and maliciously introduced sources and ensuring security before and during mass events.



PEO Detection Page 126 of 461

PoliPack® GN-S Backpack Radiation Detector



Spectroscopic Gamma-Neutron Backpack Radiation Detector.

The **PoliPack® GN-S** is a **gamma-neutron** Backpack-Based Radiation Detection System (BRD) equipped with **spectroscopic** gamma detectors for identifying radionuclides. It is carried in a compact backpack and controlled remotely via the wired control unit or a smartphone with the free Polismart® iOS and Android App.

The **PoliPack® BRDs** are rugged, lightweight, and fast deployable devices that provide prompt and reliable detection, location, and identification of multiple and masked isotopes. The device is ideal for undercover radiation surveys in crowded areas, addressing the problems of orphaned and maliciously introduced sources and ensuring security before and during mass events. Radionuclides libraries are uploaded in the BRD and can be customized by users.



PEO Detection Page 127 of 461

Partner Bertin Instruments





Bertin Instruments is a global provider of advanced radiation detection and environmental monitoring solutions, specializing in handheld monitors, personal electronic dosimeters, environmental monitoring systems, and waste &

recycling management technologies. Their instruments are designed to meet the rigorous demands of nuclear facilities, emergency response teams, and environmental agencies.

Product offering





MiniTRACE S5 -Saphymo



MiniTRACE y



SaphyRAD S



SaphyRAD C



SaphyRAD E
Multiprobe - Bertin
Instruments



AlphaE - Bertin Instruments



SaphyRAD MS Dom-420 - Bertin Instruments



PEO Detection Page 128 of 461

MINITRACE CSDF - Bertin Instruments



MiniTRACE CSDF is a unique multipurpose meter for contamination control, survey, dose rate and XRays radiation measurement.

The MiniTRACE CSDF is a multipurpose instrument fulfilling the functions of a contamination, survey and dose rate meter. It is designed to improve the detection and the quantification of radiation contamination, making this a frontline tool in the protection against uncontrolled distribution of radioactive material. MiniTRACE CSDF provides several functions and measurement modes such as the dose rate, the activity or the count rate.

With the activity and surface contamination modes, different nuclides can be selected from the inbuilt library. The surface contamination mode is calibrated according to ISO 7503-1. Combined with the right accessories, wipe tests (surface contamination) and food tests (food contamination) can be performed. A mean value mode and a count up mode are provided to increase instrument accuracy.



Datasheet

Radiation type

· Alpha, beta and gamma

Detector type

• Geiger-Mueller pancake, active counter area 15.5 cm², active diameter 44.5 mm, window 2.0 mg/cm², energy compensated

Display unit

• μSv/h, cps, Bq, Bq/cm² and Bq/L

Measurement range

- Dose rate: up to 5,000 μ Sv/h (100 mR/h)
- Pulses: up to 10,000 cps (300,000 cpm)
- Activity (depends on the radionuclide): up to 100 000 Bq (999,000 dpm)
- Surface contamination (depends on the radionuclide): up to 5,000 Bg/cm2 (30,000 dm/cm2)
- Food: up to 100,000 Bq/l (1,000,000 pCi/l)

Gamma sensitivity

• 4.3 cps/µSv/h

Energy Range

PEO Detection Page 129 of 461

• 26 keV to 1.25 MeV, lid has to be closed

Sensitivity

• Co60: 0.41 cps/Bq/cm²; C14: 1.65 cps/Bq/ cm²; Sr90+: 10.65 cps/Bq/ cm²; Am-14:4.19 cps/Bq/ cm²; Cl36: 9.57 cps/Bq/ cm²; Cs137: 11.15 cps/Bq/ cm²; U238: 4.19 cps/Bq/ cm²; I131: 9.71 cps/Bq/ cm²

Display

• 6-digit LCD display, plus 5-digit alpha numeric display for alarm- and status messages

Grid

• 0.8 stainless steel, 80% transparency, easily removable

Integration time

• Automatic, with count up mode adjustable

Energy supply


• 2 Mignon batteries (type: LR6, AA, MN 1500) 1.5V

Battery autonomy

• Up to 2,000 h

Built-in sensors

• IR-interface for software communication

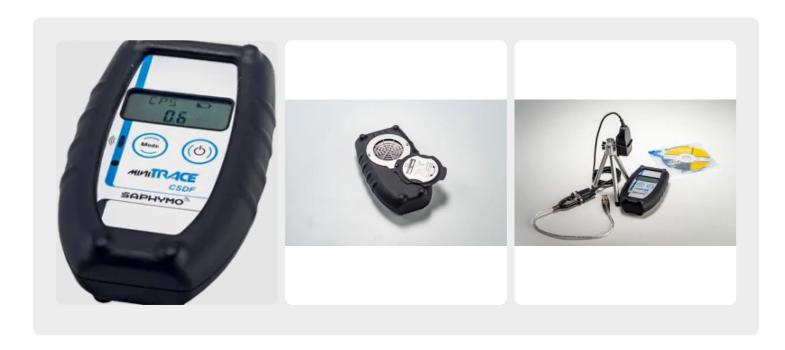

Benefits

Easy and fast monitoring

• MiniTRACE CSDF is easy to use (2 buttons interface) and provides a very fast response time (1sec.). It can also be set up with the optional DataVIEW software.

All-in-one survey meter

• MiniTRACE CSDF allows multipurpose measurements for dose rate $H^*(10)$ (μ Sv/h), count rate (cps), activity (Bq), surface contamination (Bq/cm²) and food contamination (Bq/L). Radionuclide can also be selected.

Designed for harsh environments

PEO Detection Page 130 of 461

• MiniTRACE CSDF is compact and robust with its strong housing protected with a rubber boot. It is suitable for long time operations (battery lifetime: 2,000 h).

Technologies

MiniTRACE CSDF is a unique multipurpose meter for contamination, survey, dose rate, XRays, food and wipe test measurements. It is equipped with a 15.55 cm² Geiger-Mueller pancake detector and a 0.8 mm stainless steel grid. In addition to the verification of contamination, it is ideally suited to measuring the environmental dose rate equivalent (H*(10)).

MiniTRACE CSDF displays values in cps, μ Sv/h, Bq, Bq/cm² and Bq/L. For the Bq and Bq/cm² modes, the user can select different nuclides with built in nuclide specific calibration library (Cs137, Am241, I131, Sr90, U238, C14, Cl36, Co60).

The Bq/cm² mode (for surface contamination) is calibrated according to ISO 7503-1. MiniTRACE CSDF offers a special mode for food measurement: it measures the activity level found in the liquid or smashed food, with a state-of-the-art food measuring kit.

Accessories

- Protective rubber cover (included)
- Communication kit (incl. DataVIEW software and IR transceiver)
- Transparent plastic protection
- Belt pouch
- Suitcase (Pelicase)
- Wipe test kit
- · Food measuring kit
- Emergency case
- Pressure-tight container for air transport

PEO Detection Page 131 of 461

MiniTRACE S5 - Saphymo



The MiniTRACE S5 is a contamination meter designed to improve the safety of workers in all different kinds of fields. It's very sensitive and responds within a second.

Because the device is very user-friendly, it's very easy to detect possible spots of contamination in the controlling areas. The 6-digit display shows the activity value with a fixed decimal point.

The MiniTRACE has four pre-programmed alarm tresholds, but users can also adjust these to their personal needs.



This contamination meter is not only easy to use, but it's also very fast. If the device detects something, it will respond within a second. The device is applicable to many fields, like nuclear power plants, research centers, hospitals, police, fire brigades and the army.

BENEFITS OF THE MINITRACE S5

- High sensitivity
- Fast response time
- Compact and robust
- Ergonomic design
- Easy two-button operation
- 4 alarm tresholds
- Visual and audible alarm output
- Infrared interface
- X-ray sensitivity of >5 keV

If you want to read more about dose rate meters from Bertin, visit their website!

If you are in doubt about what MiniTRACE suits you best...

Read this!

PEO Detection Page 132 of 461

MiniTRACE γ



Light & sturdy, the MiniTRACE γ survey meter measures personal exposure, along with X & Gamma radiations, to improve workers' safety in hazardous environments. The MiniTRACE γ is available in 2 versions – S10S & S100S – each with its own energy & measurement range.

In accordance with the ALARA principle (As Low As Reasonably Achievable), the MiniTRACE γ allows for the assessment of personal exposure hazard faced by workers in controlled zones of nuclear power plants, reprocessing facilities, treatment centers & hospitals, etc. to help them better adapt their daily work according to the risk.

Ergonomic & easy to use, it also meets the operational needs of public service's units, such as firefighters, first responders, HAZardous MATerial teams, early warning & rapid response cells, radiation protection specialists (PCR), etc. Fitted with fast response time (≈ 1 second), the MiniTRACE γ survey meter measures instantaneously the ambient dose equivalent rate H*(10) or the gamma radiation exposure levels, with a high level of autonomy (approximately 2,000 hours).

The MiniTRACE γ is also equipped with a built-in memory able to save up to 650 measured values of instant & accumulated radiation dose.

Both MiniTRACE γ S10S & S100S are available in radio version (S10R & S100R), allowing for survey meters to be integrated into a ShortLINK/SkyLINK communication network, with a maximum reach of 20 kilometers.



PEO Detection Page 133 of 461

SaphyRAD S



The SaphyRAD S is a multiprobe survey meter developed to cover the needs of the nuclear and security market. This rugged, sensitive, and functional survey meter includes a wide and bright LCD display monitors and measures dose and Gamma dose rates in harsh environments even by non-specialists. Equipped with a full range of external probes, this versatile survey meter can discriminate Alpha/Beta radiation, monitor surface contamination, with reliability and accuracy, it can also measure dose rate in hard-to-reach areas and be used to research radioactive sources. In addition, the SaphyRAD S has an integrated simulator that is perfectly suited for training purposes. By utilizing a simulation probe, the user can recreate an Alpha/Beta contamination, enabling training in authentic conditions without the need for radioactive sources.



Benefits

- Robust: designed for use in harsh environments
- Large, high-resolution colour display
- Integrated simulation mode for training
- Designed for use with CBRN personal protective clothing
- Integrated GPS
- Specific algorithm for fast and reactive detection
- Large dose rate range: from 0.05 μSv/h to 10 Sv/h
- Complete range of external probes for source tracking and measuring multiple contamination, specially designed for use by non-radiation specialists.


PEO Detection Page 134 of 461

SaphyRAD C



The SaphyRAD C is a versatile multiprobe contamination meter used for monitoring Alpha and Beta contamination in harsh environments. It has been developed to meet all needs of contamination control for multiple markets such as the nuclear and NORM industries, medical structures & first responders, thanks to its integrated nuclide library.

It is equipped with a powerful algorithm to allow very fast and reliable detection of ionising radiation in a variety of civil applications. The SaphyRAD C has been designed ergonomically to be held with gloves on. Its large colour display makes the results perfectly easy to read. The SaphyRAD C possesses a wide range of contamination probe and it is compatible with all analogue probes on the market.



The SaphyRAD C has a robust housing with 6 large buttons designed for use with gloves. This device is adapted to meet the needs of the Nuclear industry, but also of the NORM industry, first responders & medical structures.

Versatility

SaphyRAD C is designed for the detection & measurement of Alpha and/or Beta radiation sources with the use of external connected measuring probes. It has a wide dose rate range from 0.05 μ Gy/h to 10Gy/h.

It is also compatible with external analog probes of other systems.

Ease of use

SaphyRAD C is an ergonomic handheld device with a high image quality color screen. Some probes also include an embedded alarm & a distance control indicator.

Efficiency

SaphyRAD C works with a specific algorithm which was developed for a very fast and reactive detection of radiation sources.



PEO Detection Page 135 of 461

SaphyRAD E Multiprobe - Bertin Instruments



SaphyRAD multiprobe alpha & beta contamination meter has been developed to meet all needs of contamination control for multiple markets such as the nuclear and NORM industries, medical structures & first responders, thanks to its integrated nuclide library. Its ergonomic interface and design have been especially conceived for use even by non-specialists.



SaphyRAD's wide range of contamination probes combined with its specific algorithm allow for a very fast and reactive detection. Depending on the probe, the operator can either assess small or large areas to detect alpha, beta/gamma or alpha & beta/gamma radioactive contamination. All data can be stored on an SD card for measurement recordings.

SaphyRAD E advantages

- user friendly embedded alarm & distance control indicator
- wide range of compatible probes
- adaptative nuclide library
- versatile for contamination & measurement operations
- ruggedized for harsh environment

SaphyRAD E

PEO Detection Page 136 of 461

Radiation Detection > Environmental Monitoring

AlphaE - Bertin Instruments



AlphaE is an electronic handheld device for fast and timeresolved radon monitoring in buildings, outdoors and mines. Typically, 80 % of the final result is achieved after 2 hours (faster response for higher values). Due to its ultra-lightweight design and sophisticated features, AlphaE is highly suitable also for surveying the personal radon exposure and dose at workplaces.



The AlphaE's favourable price-performance ratio makes it also interesting for service companies engaged in radon assessment and mitigation as well as for users in private homes. Up to 6 months battery life allows long-term measurement without mains power. Permanent operations via mains supply are possible via USB port.

Advantages AlphaE

- ultra-lightweight design
- sophisticated features
- wide measuring range for professional use
- up to 6 months autonomy
- · suitable software included

Download the datasheet or contact our product specialist.

PEO Detection Page 137 of 461

SaphyRAD MS Dom-420 - Bertin Instruments



SaphyRAD MS is the latest multiprobe survey meter designed for operation in harsh environments such as military fields and first responders.



Together with the probes, SaphyRAD MS allows to cover most of the needs of first responders. SaphyRAD MS associates a wide range dose rate meter and external smart probes for source and hot spot search and contamination measurement.

SaphyRAD MS includes a simulation mode which allows to train the users with high reality without the use of radioactive sources. Special care has been taken in the design of man machine interface for quick use by non radiation specialists.

SaphyRAD MS features

- designed for operation in harsh environments
- high resolution and large color LCD display
- built in simulation function for training
- designed for use with CBRN protective clothing
- built in GPS
- specific algorithm for very fast and reactive detection
- wide dose rate range 0.05 μGy/h to 10Gy/h
- comprehensive external smart probes for source search and multiple contamination measurement specially designed for use by non radiation specialists

SaphyRAD MS probes

Contact our PEO product specialist.

PEO Detection Page 138 of 461

Partner SE International





S.E. International, Inc. is a trusted U.S.-based manufacturer of radiation detection instruments under the Radiation Alert® brand. Their product range includes area monitors, handheld survey meters, and personal electronic dosimeters—each designed to deliver accurate, real-time radiation monitoring across a wide range of applications.

Product offering









Radiation Alert Frisker



Radiation Alert Ranger



Radiation Alert Monitor 4EC



Radiation Alert® Ranger EXP



Radiation Alert Monitor 1000EC



Radiation Alert® GammaView



PEO Detection Page 139 of 461





Radiation Alert Monitor 200



The Monitor 200, your go-to solution for precise and versatile radiation detection. This state-of -the-art device measures alpha, beta, gamma, and x-rays providing accurate readings displayed in your preferred unit of measurement. Choose from CPM, CPS, μ Sv/hr, mR/hr, or in accumulated counts.

Featuring a digital backlit display, the Monitor 200 ensures easy readability in any environment. The addition of a red count light and an audible beeper accompanying each count detected enhances your awareness during radiation monitoring. With an adjustable timer and customizable loud alert, this radiation detector is tailored to meet you specific needs, offering both accuracy and user-friendly functionality.

The Monitor 200 doesn't just stop at on-the-spot readings- it's equipped with internal memory and Included with your purchase is the Free Observer USB Software(compatible with Windows only), enabling you to effortlessly download and manage your data while setting up computer alarms for added convenience.

For an enhanced experience, the optional Bluetooth module opens up a world of possibilities. The Radiation Alert® Monitor 200 seamlessly integrates with the free Radiation Alert® Observer BLE app available for download from the Google App Store. This app empowers you to display real-time readings with descriptions, conduct timed counts, append GPS data, and send your saved survey files. What's more, any alarms set on the instrument will be mirrored on you android device, ensuring you stay informed and in control.



PEO Detection Page 141 of 461

Radiation Alert MC1K



The MC1K is an ergonomic handheld survey meter using a built-in energy compensated GM detector. It detects gamma and x-rays up to 1000 mR/hr over 4 selectable ranges. The energy compensated Geiger counter affords the detector a more linear response to gammas and x-rays over the full range. A beep sounds and a count light flashes with each event detected.

Applications & Uses: Expanded Range up to 1000 mR/hr, Linear Response needs with Energy Compensation, Checking accelerator & x-ray shielding for leakage, Checking industrial gauges; such as moisture, density, or level gauges containing Cesium-137, Locating lost sources, Personal protection, General surveying



PEO Detection Page 142 of 461

Radiation Alert Frisker



Tired of dealing with cumbersome cables? Need a free hand? Frustrated with carrying around bulky meters? Introducing The Radiation Alert® Frisker. This compact device detects alpha, beta, gamma, and X-ray radiation. It features multiple units of measure, customizable alarm levels, and a backlit display for easy reading.

The Frisker is a lightweight, single-handed radiation contamination instrument designed to meet the needs of today's radiation professionals. Perfect for leak testing, surface monitoring, sample screening, and personnel screening, it integrates the latest electronics with a reliable Geiger-Mueller detector. S.E. International has crafted a durable, ergonomic Geiger counter that excels in various radiological applications.

Applications & Uses: Screening personnel and objects, such as packages, surfaces, and clothing, Surveying for NORM (Naturally Occurring Radioactive Material) contamination, Gross wipe counting, Contamination surveys of packages, equipment, people, etc., Regulatory inspections, Low energy radionuclide detection.



PEO Detection Page 143 of 461

Radiation Alert Ranger



Introducing the Radiation Alert Ranger®, the pinnacle of nuclear radiation detection technology that seamlessly combines performance with unparalleled portability. Whether you're surveying facility or venturing into the field, the Radiation Alert Ranger® stands as a reliable companion, designed with industrial environments in mind while retaining all the features cherished in laboratory settings.

Compact and lightweight, the Radiation Alert Ranger® is a handheld digital survey meter that sets the bar for sensitivity across alpha, beta, gamma, and x-rays ensuring comprehensive coverage for your radiation detection needs. Equipped with built-in efficiencies for common isotopes, this model goes the extra mile by calculating activity in Becquerels (Bq) and Disintegrations Per Minute (DPM).

The Radiation Alert Ranger® boasts a user-friendly interface featuring a backlit digital display, a red count light, and a distinctive beeper that signals each count detected, enhancing your ability to respond promptly to radiation levels. Selectable alert levels, an adjustable timer, and an optional wipe test plate for swipes provide further flexibility. allowing you to tailor the device to you specific requirements.

- Free Observer USB Software
- Free Observer BLE Software
- For Use With The Optional Bluetooth Module

But the Radiation Alert Ranger® doesn't stop there. Included with your purchase is the Free Observer USB Software(compatible with Windows only), enabling you to effortlessly download and manage your data while setting up computer alarms for added convenience.

For an enhanced experience, the optional Bluetooth module opens up a world of possibilities. The Radiation Alert Ranger® seamlessly integrates with the free Radiation Alert® Observer BLE app available for download from the Google App Store. This app empowers you to display real-time readings with descriptions, conduct timed counts, append GPS data, and send your saved survey files. What's more, any alarms set on the instrument will be mirrored on you android device, ensuring you stay informed and in control.

Elevate your radiation detection capabilities with the Radiation Alert Ranger®- where cutting-edge technology meets user-friendly design, providing peace of mind whether



PEO Detection Page 144 of 461

in the lab, facility, or in the field.

Applications & Uses: Surveying for NORM (Naturally Occurring Radioactive Material) contamination, Gross wipe counting, Contamination surveys of packages, equipment, people, etc., Regulatory inspections, Scrap Metal Screening, Low energy radionuclide detection

PEO Detection Page 145 of 461

Radiation Alert Monitor 4EC



The Monitor 4EC is an energy compensated, ergonomic radiation survey meter capable of detecting alpha, beta, gamma, and x-rays over 3 selectable ranges. A red count light flashes and a beep sounds with each event detected. The Monitor 4EC offers a linear response for gamma and x-rays (above 40 keV).

Applications & Uses: Checking accelerator & x-ray shielding for leakage, Checking industrial gauges, such as moisture, density, or level gauges containing Cesium-137, Locating sources, Personal protection, General surveying



PEO Detection Page 146 of 461

Radiation Alert® Ranger EXP



The Radiation Alert Ranger® EXP, seamlessly combines performance with unparalleled portability. Whether you're surveying facility or venturing into the field, the Radiation Alert Ranger® EXP stands as a reliable companion, designed with industrial environments in mind while retaining all the features cherished in laboratory settings.

Compact and lightweight, the Radiation Alert Ranger® EXP is a handheld digital survey meter that sets the bar for sensitivity to NORM and low levels of alpha, beta, gamma, and x-rays ensuring comprehensive coverage for your radiation detection needs. Equipped with built-in efficiencies for common isotopes, this model goes the extra mile by calculating activity in Becquerels (Bq) and Disintegrations Per Minute (DPM).

The Radiation Alert Ranger® EXP has a user-friendly interface featuring a backlit digital display, a red count light, and a beeper that signals each count detected, enhancing your ability to respond promptly to radiation levels. Selectable alert levels, an adjustable timer further flexibility. allowing you to tailor the device to you specific requirements.

- Free Observer USB Software
- Free Observer BLE Software
- For Use With The Optional Bluetooth Module

But the Radiation Alert Ranger® EXP doesn't stop there. Included with your purchase is the Free Observer USB Software(compatible with Windows only), enabling you to effortlessly download and manage your data while setting up computer alarms for added convenience.

For an enhanced experience, the optional Bluetooth module opens up a world of possibilities. The Radiation Alert Ranger® EXP seamlessly integrates with the free Radiation Alert® Observer BLE app available for download from the Google App Store. This app empowers you to display real-time readings with descriptions, conduct timed counts, append GPS data, and send your saved survey files. What's more, any alarms set on the instrument will be mirrored on you android device, ensuring you stay informed and in control.

Applications & Uses: Surveying for NORM (Naturally Occurring Radioactive Material) contamination, Gross wipe counting, Contamination surveys of packages, equipment, people, etc., Regulatory inspections, Scrap Metal Screening, Low energy



PEO Detection Page 147 of 461

radionuclide detection

PEO Detection Page 148 of 461

Radiation Alert Monitor 1000EC



The Monitor 1000EC is an energy compensated radiation detector that measures gamma, and x-rays. Perfect for most applications requiring an energy compensated detector. Users can choose from readings of CPM, CPS, μ Sv/hr, mR/hr, or in accumulated counts. It has a red count light, a beeper that sounds with each count detected, and includes an adjustable timer, and selectable alert.

- Free Observer USB Software
- Free Observer BLE Software For Use With The
- Optional Bluetooth Module

The Radiation Alert® Monitor 1000EC doesn't stop there. Included with your purchase is the Free Observer USB Software(compatible with Windows only), reads in Total Counts, CPM, μ R/hr, mR/hr, CPS, μ Sv/hr, and has the ability to collect and log data, set alarms, set timed counts, set the calibration date and settings, and generate reports, enabling you to effortlessly download and manage your data while setting up computer alarms for added convenience.

For an enhanced experience, the optional Bluetooth module opens up a world of possibilities. The Radiation Alert® seamlessly integrates with the free Radiation Alert® Observer BLE app available for download from the Google App Store. This app empowers you to display real-time readings with descriptions, conduct timed counts, append GPS data, and send your saved survey files. What's more, any alarms set on the instrument will be mirrored on you android device, ensuring you stay informed and in control.

Free Radiation Alert® Observer BLE app from the Google App Store, where you can display the readings from your detector, label sample readings and descriptions, take timed counts, append GPS data and send your saved survey file. This radiation detector helps you to set alarms which will also activate if you sync it with your android device.

This radiation detector device include Free Observer USB software (Windows® only) reads in Total Counts, CPM, μ R/hr, mR/hr, CPS, μ Sv/hr, and has the ability to collect and log data, set alarms, set timed counts, set the calibration date and settings, and generate reports.

Applications & Uses: X-ray chamber inspection, Expanded Range up to 1000 mR/hr, Linear Response needs with Energy Compensation, Checking accelerator & x-ray shielding for



PEO Detection Page 149 of 461

leakage, Checking industrial gauges, such as moisture, density, or level gauges containing Cesium-137, Locating lost sources, Personal protection, Linear response detection applications, General surveying

PEO Detection Page 150 of 461

Radiation Alert® GammaView



The compact GammaView is light, easy to carry and operate with a 1×1 Nal scintillation detector that accurately measures gamma contamination and exposure. Perfect for use in the lab, facility, and in the field.

The GammaView boasts a user-friendly interface featuring a backlit digital display, a red count light, and a distinctive beeper that signals each count detected, enhancing your ability to respond promptly to radiation levels. Selectable alert levels, an adjustable timer, allowing you to tailor the device to you specific requirements.

The GammaView can also be used as a single-channel analyzer (SCA). This function allows a "window" to be set to focus on a specific energy region of the gamma spectrum, effectively reducing the background count.

Specific Applications Include: Compliance monitoring, environmental monitoring, remote monitoring, health physics, homeland defense.



PEO Detection Page 151 of 461

Radiation Alert Monitor 4



The Radiation Alert® Monitor 4 is a compact, analog radiation detector designed for versatility and reliability. This general-purpose survey meter can detect alpha, beta, gamma, and X-ray radiation across three selectable ranges. With decades of proven performance in the industry, the Monitor 4 has become one of the leading analog radiation detectors available today. Its simple, ergonomic design features a red count light that flashes and an audible beep for each detected count. A quick flick of your thumb allows for an easy battery check and silent operation.

Applications & Uses: Checking industrial gauges, such as moisture, density, or level gauges containing Cesium-137, Locating Sources, Personal protection, General surveying



PEO Detection Page 152 of 461

Partner GEORADIS s.r.o.



GEORADIS

Georadis s.r.o. is a specialized manufacturer of advanced radiation detection and monitoring instruments, offering a comprehensive suite of solutions for field and laboratory applications. Their product portfolio includes handheld stope identifiers, environmental monitoring devices, and laboratory equipment

monitors, portable isotope identifiers, environmental monitoring devices, and laboratory equipment, all designed to meet the rigorous demands of professionals in sectors such as environmental monitoring, industrial safety, and public security.

Product offering





RT-21 Handheld Radiation Detector -Georadis



RT-22 Handheld Radiation Detector with GeoView Software - Georadis



RT-30 Mk II - Georadis





RT-20 Compact handheld Radiation Detector - Georadis



The RT-20 Compact handheld Radiation Detector is a robust and compact hand held radiation detector specifically designed to quickly scan for radioactive materials. The ruggedness, small size and light weight of the RT-20, combined with its sensitive Gamma Ray scintillation detector makes it a versatile instrument for quick measurements in a large variety of applications.



RT-20 Compact handheld Radiation Detector features:

- 1,3 kg; balanced and lightweight
- reads in counts per second, sampling rate 4 per second
- high sensitivity, NaI/Tl crysta
- · adjustable audio threshold
- audio output and numeric LCD display maximum 19999 cps
- automated warning of high dose rate
- protection boot with carrying straps
- supplied in aluminium suitcase with moulded insert
- automatic charger integrated in unit
- dust and sprinkling water resistant (IP66)
- available with telescope (RS-111T)

Read more about the RT-20 Compact handheld Radiation Detector on the Georadis website

PEO Detection Page 154 of 461

RT-21 Handheld Radiation Detector - Georadis



The RT-21 (Georadis) is the most sensitive of numerous manufactured handheld radiation detectors. Its robust design allows it to operate even in the most demanding climatic conditions. Our bestseller at the time of the uranium panic. Popular with scrap yard owners.



RT-21 Handheld Radiation Detector features:

- one button operation
- · highest sensitivity
- weather protected
- lightweight, rugged and compact design
- graphical display
- with telescope available (RS-21T)
- sampling period: 20/sec
- detector: NaI(Tl) 2×2" or BGO 2×2", 103 ccm
- gamma ray energy range: 30 3000 keV

Read more about the RT-21 Handheld Radiation Detector on the Georadis website

PEO Detection Page 155 of 461

RT-22 Handheld Radiation Detector with GeoView Software - Georadis



The RT-22 model is based on the RT-21 series, the most sensitive from the range of manufactured hand-held radiation detectors. Compared to its predecessor, it comes with an internal memory for storing measurement data, and Bluetooth connectivity allowing the use of an external GPS module. Its robust design makes it suitable for hostile climatic conditions. Our bestseller at the time of the uranium panic. Popular with scrap yard owners.



GeoView provides specificated views on accumulated data such as survey in both doserate or cps. The RT-22 Handheld Radiation Detector can be connected with the software through USB or Bluetooth.

RT-22 Handheld Radiation Detector with GeoView Software features:

- · graphical display
- with telescope available (RT-22T)
- sampling period: 20/sec
- detector: NaI(Tl) 2×2" or BGO 2×2", 103 ccm
 gamma ray energy range: 30 3000 keV
- highest sensitivity
- weather protected
- lightweight, rugged and compact design

Read more about the RT-22 Handheld Radiaotion Detector with GeoView Software on the <u>Georadis</u> website

PEO Detection Page 156 of 461

RT-30 Mk II - Georadis



Handheld Isotope Identification Instrument RIID

The RT-30 Mk II is the second generation of popular handheld gamma ray spectrometer RT-30. Strengths of the first generation were copied in the new model. There has to be highlighted a strong alloy body sealed against dust and water, protective removable rubber boot, comfortable grip and low weight.

The Mk II learned of the limitations of the first generation and features a large colored transreflectible sun readable display, improved user's interface with five operation buttons, removable but well-sealed battery pack and clear and loud audio.



The instrument is built as an open platform with potential of fast and simple implementation of special features required by customers. Wide fleet of detectors is supported. The Mk II bridges traditional scintillation detection probes using common vacuum photomultiplier tube with up-to-date silicon photomultipliers technology. Saved significant volume of vacuum tubes is next occupied by larger size of detector.

A heart of gamma ray spectrometer is FPGA (programmable array) plus fast speed and low consumption ARM type processor. The combination of FPGA with ARM is taken of preceding larger instrument and has been tested for years. Beside gamma ray section the FPGA is capable to handle other sensors at the same time. A Geiger-Mueller counter and a Neutron detector make a standard offer.

Thanks to latest electronic the Mk II opens a platform for supporting most modern existing communication standards. Sharing new and traditional communication standards is guaranteed wide compatibility with older as well as new communication devices. The existing USB was upgraded to level C and beside communication it is used also for unit's battery charging. GPS system is built in the front part of the instrument and is used for localization of the unit and also for time synchronization.

Quickly determining the location of lost radioactive sources in the environment or scrap, monitoring of waste in hospitals or waste incinerators, scanning people or baggage to disclose illicit trafficking of nuclear materials; all are typical applications for the RT-30 Mk II series.

Features:


- Ergonomic, lightweight handheld well balanced, compact;
- Comfortable grip with five buttons operable in glows;
- Removable protective rubber boot;
- Detectors fully build in the housing, protected by rubber foam;
- Large, transreflectible colored display sharp and high contrast in sunlight, backlighted in dark;
- Loudspeaker with plastic membrane watertight;
- Four status indication LEDs indication of alarms and health status;
- USB standard C for data transfer and charging;
- Wide fleet of scintillation detectors NaI/Tl, CsI/Tl, CsI/Eu, LaHalide, BGO, GAGG, SrI, Plastic scintillation

PEO Detection Page 157 of 461

detectors PVT;

• Maximum detector size: Diameter 2" and height 2" with standard vacuum PMT or max 5" with Silicon PMT (SiPM or MPPC).

See the full details in the RT-30 Mk II datasheet.

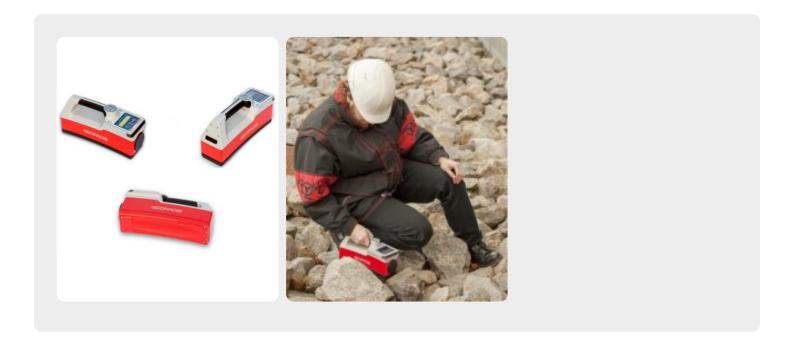

PEO Detection Page 158 of 461

Partner Kromek





Kromek Group plc is a global leader in advanced radiation detection technologies, specializing in compact, high-resolution solutions for security, defense, nuclear, and research applications. Leveraging proprietary Cadmium Zinc Telluride (CZT) semiconductor technology, Kromek delivers a versatile

portfolio that includes handheld monitors, portable isotope identifiers, CZT-based gamma cameras, and laboratory-grade spectrometers.

Product offering







PEO Detection Page 159 of 461



The D5 RIID provides a unique high performance and versatile radiation detection device in a wearable package for military, homeland security, and industrial personnel.



The D5 RIID is a small, light, 3.5% resolution, wearable Radioisotope Identification Device (RIID) with an expansive radioisotope library and an ultra low false alarm rate. It continuously scans and accurately identifies radiological threats in real time, even in mixed source environments.

The D5 RIID combines small form factor with powerful radiometric performance and enhanced sensitivity at a medium resolution of 3.5%. The D5 RIID has an area efficiency which is 62% higher when compared with conventional RIIDs.

D5 RIID Overview https://youtu.be/yi-uvo05nFg





D5 RIID is the smallest, lightest with the ultimate detection performance. It has a 3.5% resolution, with an expansive radioisotope library and an ultra low false alarm rate. It continuously scans and accurately identifies radiological threats in real time, even in mixed source environments.

PEO Detection Page 160 of 461

D3S ID



A wearable, concealable Gamma and Neutron detector which puts the power of a RIID into a package the size of a Personal Radiation Detector (PRD). D3S ID is the new standard in portable radiation detectors.

The D3S ID is a powerful, wearable, unobtrusive and handsfree device which is continuously scanning for Gamma and Neutron radiation threats.





Kromek's D3S meets the data security expectations of governments, intelligence services, and safety authorities. The D3S comes standard with a secure smartphone (Android control), which contains the exclusive and secured Kromek detector software. The D3S is already frequently used in the United States, for example on fire trucks and ambulances or as an area mapping system with 1,000 detectors during a 'scavenger hunt'. In Europe, the D3S has been deployed during state visits and NATO consultations in recent years, to detect early radioactive threats that may be present in cargo, vehicles, buildings, other objects, and in the environment.

Features:

- Identifies 37 isotopes (17 more than the current ANSI standard)
- Identifies faster than a RIID
- Budget-friendly compared to other products in the market
- Small size, wearable, fits on belt
- Networkable

PEO Detection Page 161 of 461

Radiation Detection > CZT & Gamma Cameras

RayMon



RayMon

A powerful and rugged handheld gamma detector for highresolution radioactive isotope identification. The RayMon10 is one of the most powerful and rugged handheld radiation monitors in the world. It can be used to detect, measure, and accurately identify gamma-ray emitting radionuclides, providing high-resolution isotope identification using the latest CZT solid-state detector technology. It is an all in one solution to your gamma radionuclide identification needs

It can output a variety of reports including date/time, user handheld ID, photo and audio note, GPS positioning, radiation spectra, and isotope identification.

Variations in normal operating conditions can often affect the performance of radio-isotope identification, the RayMon10's advanced one cubic centimeter CZT coplanar grid detector provides more stable performance than scintillation-type detectors



PEO Detection Page 162 of 461

Partner Radiation Solutions Inc.





Radiation Solutions Inc. (RSI) is a Canadian-based company specializing in advanced radiation detection and monitoring systems, with a focus on portal monitors for diverse applications. Their technologies are designed to ensure

safety and compliance in industries such as steel, scrap, recycling, and border security.

Product offering





RS-125 Handheld Spectrometer -Radiation Solutions



RS-125 Handheld Spectrometer -Radiation Solutions



PEO Detection Page 163 of 461

RS-230 BGO Handheld Spectrometer - Radiation Solutions



The RS-230 BGO Handheld Spectrometer (Radiations Solutions) is a portable handheld radiation survey search device for use in the geophysical industry. Using a BGO give very significant increase in performance over the normally used NaI detector (3x).



RS-230 BGO Handheld Spectrometer features:

- single button operationhigh countrate: 65, 535
- protection: IP67 rugged design
- digital LCD display
- analyses single channel and multichannel
- PC connectivity: USB or Bluetooth
- detector: BGO 2×2", 103 ccm

Read more about the RS-230 BGO Handheld Spectrometer on the Radiation Solutions website

PEO Detection Page 164 of 461

RS-125 Handheld Spectrometer - Radiation Solutions



The RS-125 Handheld Spectrometer (Radiation Solutions) is an advanced mobile instrument for radiation survey. The device is mainly used for spectral analyses in the geophysical industry. The RS-125 has the highest sensitivity in the market of spectrometers and is simple in use. There are no test sources required, the spectrometer stabilizes automatically on the different forms of radioactivity (K, U and Th).



RS-125 Handheld Spectrometer features:

- single button operation
- digital LCD display
- detector: NaI(TI) 2×2"
- analyses single channel and multichannel
- PC connectivity: USB or Bluetooth
- high countrate: 65, 535
- protection: IP67rugged design

Read more about the RS-125 Handheld Spectrometer on the Radiation Solutions website

PEO Detection Page 165 of 461

RS-125 Handheld Spectrometer - Radiation Solutions



The RS-125 Handheld Spectrometer (Radiation Solutions) is an advanced mobile instrument for radiation survey. The device is mainly used for spectral analyses in the geophysical industry. The RS-125 has the highest sensitivity in the market of spectrometers and is simple in use. There are no test sources required, the spectrometer stabilizes automatically on the different forms of radioactivity (K, U and Th).



RS-125 Handheld Spectrometer features:

- single button operation
- digital LCD display
- detector: NaI(TI) 2×2"
- analyses single channel and multichannel
- PC connectivity: USB or Bluetooth
- high countrate: 65, 535
- protection: IP67rugged design

Read more about the RS-125 Handheld Spectrometer on the Radiation Solutions website

PEO Detection Page 166 of 461

PERSONAL ELECTRONIC DOSIMETERS





Partner Tracerco





Tracerco is a global leader in radiation detection and measurement, offering a comprehensive range of handheld monitors and personal electronic dosimeters. Their instruments are designed to provide accurate, real-time monitoring of radiation levels, ensuring safety and compliance in various industries.

Product offering

PED2 (Personal Electronic Dosimeter) - Tracerco



PED2 - ER (Personal Electronic Dosimeter) - Tracerco



PED2-IS (Personal Electronic Dosimeter) - Tracerco



PED-Blue (Personal Electronic Dosimeter) - Tracerco



PED+ (Personal Electronic Dosimeter) - Tracerco



PED-ER (Personal Electronic Dosimeter) - Tracerco



PED-ER+ (Personal Electronic Dosimeter) - Tracerco



Dosimeter software DoseVision™ and DoseVision™ Tracerco



PEO Detection Page 168 of 461

PED2 (Personal Electronic Dosimeter) - Tracerco



A flexible personal electronic dosimeter for general radiation protection applications.

Flexible radiation protection

Instantaneously measures, records and displays dose rate and accumulated dose in real time

Up to four configurable dose and dose rate alarm settings

Optional extended range calibration up to 1 Sv/h where potential exists for emergency situations





Features:

- Clear and readable
- Simple and intuitive
- · Reliable and accurate
- Flexible radiation protection
- IS certification

Easy to use and understand

Large, easy-to-read color display ensures vital information is clear, simple to understand and visible in any lighting scenario

A single button is used to navigate an intuitive carousel menu

Alarm settings trigger audible, visual, textual and haptic alerts

IS certification

PED2-IS and PED2-IS+ are ATEX certified. This European certification is given to equipment that is tested and approved to be intrinsically safe. Giving you the peace of mind that the IS certified PED2 range is able to safely measure radiation exposure in potentially explosive



PEO Detection Page 169 of 461

environments.

PEO Detection Page 170 of 461







Additional Services

To support optimal performance and compliance with regulatory standards, PEO offers the following services for this device:

Service
Periodic inspections
carried out by qualified
technicians to assess
functionality, identify
wear, and detect
potential issues early.

Maintenance

Preventive measures, part replacements, and performance checks designed to extend the device's operational lifespan and maintain consistent reliability.

Calibration

Calibration services, performed by qualified technicians. Each unit receives a Calibration Certificate confirming accuracy and conformity.

Leakage Tests
Radiation leakage
testing to confirm
detector safety and
compliance with
applicable health and
safety requirements.

These services are available through PEO.

For service appointments or contract options, please contact your PEO representative.

Purchase Product

Request Service

Ask a question

Find more products

PEO Detection Page 171 of 461

PED2 - ER (Personal Electronic Dosimeter) - Tracerco



An intrinsically safe certified personal electronic dosimeter, with handheld survey mode and enhanced features such as Bluetooth, GPS and pop-up message alarms

Features:

- Clear and readable
- Simple and intuitive
- Reliable and accurate
- Flexible radiation protection
- IS certification



Easy to use and understand

Large, easy-to-read colour display ensures vital information is clear, simple to understand and visible in any lighting scenario

A single button is used to navigate an intuitive carousel menu

Alarm settings trigger audible, visual, textual and haptic alerts

Flexible radiation protection

Instantaneously measures, records and displays dose rate and accumulated dose in real time

Up to four configurable dose and dose rate alarm settings

Optional extended range calibration up to 1 Sv/h where potential exists for emergency situations

IS certification

PED2-IS and PED2-IS+ are ATEX certified. This European certification is given to equipment that is tested and approved to be intrinsically safe. Giving you the peace of mind that the IS certified PED2 range is able to safely measure radiation exposure in potentially explosive environments.

PEO Detection Page 172 of 461

PED2-IS (Personal Electronic Dosimeter) - Tracerco



Flexible radiation protection

Instantaneously measures, records and displays dose rate and accumulated dose in real time

Up to four configurable dose and dose rate alarm settings

Optional extended range calibration up to 1 Sv/h where potential exists for emergency situations





Features:

- Clear and readable transflective display enables use in dimly lit or sun-glare scenarios
- Responds promptly to small changes in radiation whilst also being capable of making accurate and reliable readings
- Intuitive single button operation
- Intrinsically safe for use in hazardous areas
- DoseVision™ companion software with optional cloud ecosystem

Easy to use and understand

Large, easy-to-read colour display ensures vital information is clear, simple to understand and visible in any lighting scenario

A single button is used to navigate an intuitive carousel menu

Alarm settings trigger audible, visual, textual and haptic alerts



PED2-IS and PED2-IS+ are ATEX certified. This European certification is given to equipment that is tested and approved to be intrinsically safe. Giving you the peace of mind that the IS certified PED2 range is able to safely measure radiation exposure in potentially explosive environments.



PEO Detection Page 173 of 461

PED-Blue (Personal Electronic Dosimeter) - Tracerco



PED-BLUE FROM TRACERCO

Personal Electronic Dosimeter

The PED-Blue is a lightweight, non-IS PED. The device can be charged with a direct micro USB connection, so it's more flexible. This dosimeter can also be configured to use either two or four dose alarm levels and is customisable through DoseVision™ software.


The PED Blue also has a task function where you can start and finish a task. After a task is finished you can look back by using <u>DoseVision</u>. This dosimeter is also perfect for clinical environments for example, because of its discreet alarm function.

The dosimeter gives the user immediate feedback so you'll know when the ambient dose is heightened.



BENEFITS OF THE PED BLUE:

- Robust and easy to use
- Direct micro USB connection for greater flexibility
- Large, clear, easy-to-read AMOLED display
- Light weight
- Used with DoseVision[™] software ensures ease of use
- IP67 rated
- Simple one-button operation
- Four adjustable alarms
- Immediate detection

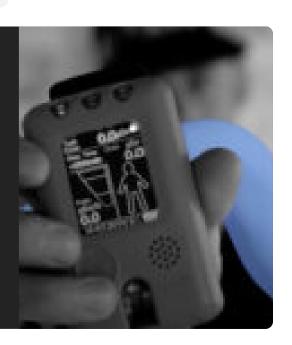

Tracerco Radiation Monitors https://youtu.be/Rm907F0KeX0





PEO Detection Page 174 of 461

For more info from Tracerco, take a look at this page.

Would you like more information on PED's?

Contact PEO!

PEO Detection Page 175 of 461

PED+ (Personal Electronic Dosimeter) - Tracerco



Radiation safety - simplified

Tracerco's range of personal electronic dosimeters (PEDs) are suitable for oil and gas, medical and life sciences, nuclear, CBRNe and emergency services, NDT, manufacturing and industrial, and environmental and waste management industries. We offer both intrinsically safe and non-intrinsically safe options for all needs.

PED+ (Personal Electronic Dosimeter) from Tracerco

The PED+ can be used as both a personal dosimeter and a handheld dose rate survey meter. It has a number of additional features, such as Bluetooth, GPS and pop-up message alarms.



Benefits of the PED+ include:

- Handheld mode allows the device to be used as a handheld survey meter
- Shows readings in dose rate (Sv or rem) and displays a live trend graph to show activity in real time
- Measurement is corrected for use off-body, so personal accumulated dose is not recorded
- Dose rate data is logged in off-body mode, allowing data review with DoseVision[™]
- Pop-up alert messages display clear instructions at alarm threshold
- Allows location data to be logged to the device alongside dose and dose rate data, that can be viewed using DoseVision™

Would you like to receive more information?

Contact PEO!

PEO Detection Page 176 of 461

PED-ER (Personal Electronic Dosimeter) - Tracerco



PED-ER FROM TRACERCO

Personal Electronic Dosimeter with extended range

The PED-ER is a robust, light and user-friendly personal electronic dosimeter. You can use it to effectively monitor, measure and manage radiation exposure. This PED is the same as the PED-Blue from Tracerco, only the ER stands for Extended Range, so the range is bigger.

This personal electronic dosimeter has both audio and visual alarms with vibration. The dosimeter will alarm you when you reach your personally set radiation dose. Because of the extended dose range from the PED-ER, it can detect radiation up to 1 Sv/h.

This dosimeter is not only designed to be robust and lightweight, it's also designed to keep it simple. The device has a large and clear AMOLED display which is very user-friendly. When you use this dosimeter in combination with the accompanying software <u>DoseVison</u>, you can easily manage radiation doses.



BENEFITS OF THIS DOSIMETER:

- The dosimeter has an extended dose range of up to 1 Sv/h
- Large easily readable display and intuitive graphical user interface
- A reliable dosimeter, even for the most challenging radiation monitoring situations
- User-friendly design because of one-button operation
- The user can easily operate it without any training
- You can choose between audio and/or visual alarms, with optional vibration



Tracerco Radiation Monitors https://youtu.be/Rm907F0KeX0

PEO Detection Page 177 of 461





For more information from Tracerco, take a look at this page.

Would you like more information on PED's?

Contact PEO!

PEO Detection Page 178 of 461

PED-ER+ (Personal Electronic Dosimeter) - Tracerco



Radiation safety - simplified

Tracerco's range of personal electronic dosimeters (PEDs) are suitable for oil and gas, medical and life sciences, nuclear, CBRNe and emergency services, NDT, manufacturing and industrial, and environmental and waste management industries. We offer both intrinsically safe and non-intrinsically safe options for all needs.

PED-ER+ (Personal Electronic Dosimeter) from Tracerco

The PED-ER+ provides the ultimate in radiation monitoring, measurement and management for those working in challenging environments. Ideal for use by industrial NDT workers, emergency services and first response teams (CBRNe).



Benefits of the PED-ER+ include:

- An extended dose rate range of up to 1Sv/h
- Weather, shock and drop-proof housing ideal for rugged environments
- Large clear display
- Portable can be used as both a personal dosimeter, and a handheld dose rate survey meter
- Pop-up message alarms when dose limits are reached

Would you like to receive more information?

Contact PEO!

PEO Detection Page 179 of 461

Dosimeter software DoseVision™ and DoseVision™ Tracerco



The dosimeter PC software interface for the PED-IS PED Blue and PED+ is specifically designed for simplicity and interactivity. DoseVision™ allows users to set alarms and reports. This is to assign users to the PED, and download and analyze data.



advantages of DoseVision:

- cumulative dose rate data analysis
- peak dose rates
- data export and easily generate reports
- password protection
- software and firmware updates available for free
- easy management of PED users
- GPS data logging using the PED+

advantages of DoseVison Live™:

- Bluetooth connectivity
- · live dose rate data
- management control for up to 7 devices
- live status updates

DoseVision Live dosimeter software Tracerco

PEO Detection Page 180 of 461

Partner Polimaster





Polimaster is a global leader in radiation detection and monitoring solutions, offering a comprehensive suite of instruments designed to detect, identify, and measure ionizing radiation across various environments. Their product range includes handheld monitors, personal electronic dosimeters, portable isotope identifiers, portal monitors, and mobile detection systems, all engineered to meet the rigorous demands of security, emergency response, and industrial

applications.

Product offering

PM1703GNA-II MBT Personal Radiation Detector/Dosimeter



PM1703GNA-II/BT Personal Radiation Detector



PM1703MO-II BT Personal Radiation Detector/Dosimeter



PM1703MA-II/BT Personal Radiation Detector



PM1610B X-Ray and Gamma Radiation Personal Dosimeter



PM1610 X-Ray and Gamma Radiation Personal Dosimeter



PM1605BT Personal Radiation Monitor/Dosimeter



PoliSimeter™ ERB Electronic Personal Dosimeter



PEO Detection Page 181 of 461

PoliSimeter™ ER Electronic Personal Dosimeter




PoliSimeter™ Electronic Personal Dosimeter



RadFlash® Electronic



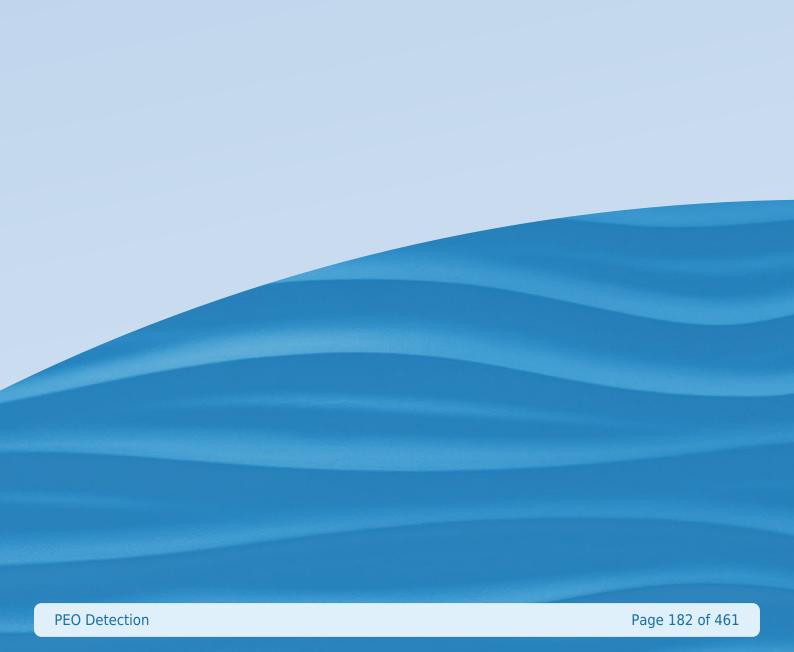

PM1703GNA-II MBT Personal Radiation Detector/Dosimeter



Gamma-neutron Personal Radiation Detector/Dosimeter.

The PM1703GNA-II MBT is a gamma-

neutron modification equipped with a **Bluetooth** module and a **Geiger-Mueller counter** for extended measurement of the personal dose rate up to 200 mSv/h and personal dose up to 10 Sv.

The **PM1703**®-**II** series of personal radiation detectors are extremely sensitive and robust devices that detect and locate even trace amounts of radioactive materials.

Equipped with a clip for multiple wearing options and easy to operate even for non-specialists, the PRDs became the perfect fit as Radiation Pagers for public security agencies, including border control, rescue teams, police, and anti-terrorist units, and first responders that need to quickly search for radioactive materials before and during public mass events.

Features

- ANSI N42.32-2016 and IEC 62401:2017 compliance
- NORM-suppression algorithm for differentiating color-coded alarms triggered by natural or man-made radiation materials
- Dedicated 0-9 scale mode with unitless dose rate indication allowing for ease of use and minimal training
- Personal dose accumulation up to 10 Sv
- Extended dose rate measurement ranges up to 200 mSv/h
- Operation in extreme temperatures from -40 °C to 50 °C
- Long-life alkaline or rechargeable battery for 800 hours
- Shockproof hermetic case IP65
- Audible, visual, and vibration alarms
- Free Polismart® iOS and Android app for advanced operation
- USB and Bluetooth communication



PEO Detection Page 183 of 461

PM1703GNA-II/BT Personal Radiation Detector



Gamma-neutron Personal Radiation Detector.

The **PM1703GNA-II** is a **gamma-neutron** modification equipped with a high-sensitive scintillator for measurement of the **personal dose rate up to 300 \muSv/h**.

The **PM1703**®-**II** series of personal radiation detectors are extremely sensitive and robust devices that detect and locate even trace amounts of radioactive materials.

Equipped with a clip for multiple wearing options and easy to operate even for non-specialists, the PRDs became the perfect fit as Radiation Pagers for public security agencies, including border control, rescue teams, police, and anti-terrorist units, and first responders that need to quickly search for radioactive materials before and during public mass events.

Features

- ANSI N42.32-2016 and IEC 62401:2017 compliance
- NORM-suppression algorithm for differentiating color-coded alarms triggered by natural or man-made radiation materials
- Dedicated 0-9 scale mode with unitless dose rate indication allowing for ease of use and minimal training
- Operation in extreme temperatures from -40 °C to 50 °C
- Long-life alkaline or rechargeable battery for 800 hours
- Shockproof hermetic case IP65
- Audible, visual, and vibration alarms
- Free Polismart® iOS and Android app for advanced operation
- USB and Bluetooth (PM1703GNA-II BT) communication



PEO Detection Page 184 of 461

PM1703MO-II BT Personal Radiation Detector/Dosimeter



Gamma-only Personal Radiation Detector/Dosimeter.

The PM1703MO-II BT is a gamma-only modification equipped with a Bluetooth module and a Geiger-Mueller counter for extended measurement of the personal dose rate up to 200 mSv/h and personal dose up to 10 Sv.

The **PM1703**®-**II** series of personal radiation detectors (PRD) are extremely sensitive and robust devices that detect and locate even trace amounts of radioactive materials.

Equipped with a clip for multiple wearing options and easy to operate even for non-specialists, the PRDs became the perfect fit as Radiation Pagers for public security agencies, including border control, rescue teams, police, and anti-terrorist units, and first responders that need to quickly search for radioactive materials before and during public mass events.

Features

- ANSI N42.32-2016 and IEC 62401:2017 compliance
- NORM-suppression algorithm for differentiating color-coded alarms triggered by natural or man-made radiation materials
- Dedicated 0-9 scale mode with unitless dose rate indication allowing for ease of use and minimal training
- Personal dose accumulation up to 10 Sv
- Extended dose rate measurement ranges up to 200 mSv/h
- Operation in extreme temperatures from -40 °C to 50 °C
- Long-life alkaline or rechargeable battery for 1000 hours
- Shockproof hermetic case IP65
- Audible, visual, and vibration alarms
- Free Polismart® iOS and Android app for advanced operation
- USB and Bluetooth communication



PEO Detection Page 185 of 461

PM1703MA-II/BT Personal Radiation Detector



Gamma-only Personal Radiation Detector.

The **PM1703MA-II** is a **gamma-only** Personal Radiation Detector (PRD) equipped with a high-sensitive scintillator for measurement of the **personal dose rate up to 300 µSv/h**.

The **PM1703**®-**II** series of PRDs are extremely sensitive and robust devices that detect and locate even trace amounts of radioactive materials.

Equipped with a clip for multiple wearing options and easy to operate even for non-specialists, the PRDs became the perfect fit as Radiation Pagers for public security agencies, including border control, rescue teams, police, and anti-terrorist units, and first responders that need to quickly search for radioactive materials before and during public mass events.

Features

- ANSI N42.32-2016 and IEC 62401:2017 compliance
- NORM-suppression algorithm for differentiating color-coded alarms triggered by natural or man-made radiation materials
- Dedicated 0-9 scale mode with unitless dose rate indication allowing for ease of use and minimal training
- Operation in extreme temperatures from -40 °C to 50 °C
- Long-life alkaline or rechargeable battery for 1000 hours
- Shockproof hermetic case IP65
- Audible, visual, and vibration alarms
- Free Polismart® iOS and Android app for advanced operation
- USB and Bluetooth (PM1703MA-II BT) communication



PEO Detection Page 186 of 461

PM1610B X-Ray and Gamma Radiation Personal Dosimeter



Extended range X-ray (continuous/pulsed) and gamma radiation personal dosimeter with replaceable battery.

The **PM1610B** model has an extended dose measurement range of up to 20 Sv and improved accuracy of the dose rate measurement. Instead of a rechargeable battery, this model is **powered by an AAA (LR03) battery** which is easy to replace, affordable, and safe to handle.

The **PM1610 series** of electronic personal dosimeters (**EPDs**) are intended for measurement of the personal dose equivalent Hp(10) and personal dose equivalent rate $\dot{H}p(10)$. The dosimeters are suitable for multiple applications providing the measurement of X-ray (continuous and pulsed) and gamma radiation in the wide energy range.

The **PM1610** dosimeters have unique features for operation in workplaces requiring the use of personal protective equipment or in a harsh environment, including a shockproof rubberized case, a high contrast display with a fluorescent backlight, and two big buttons for easy use even while wearing protective gloves.

- Easily replaceable long-life AAA battery: at least 480 hours
- Extended energy range: from 20 keV to 10 MeV
- Wide dose and dose rate measurement ranges
- Measurement of pulsed photon radiation
- Simple navigation with two large buttons
- Audible, visual, and vibration alarms
- USB communication with PC
- Shockproof hermetic case
- Small and lightweight



PEO Detection Page 187 of 461

PM1610 X-Ray and Gamma Radiation Personal Dosimeter



X-ray (continuous/pulsed) and gamma radiation personal dosimeter.

The **PM1610** series of electronic personal dosimeters (**EPDs**) are intended for measurement of the personal dose equivalent Hp(10) and personal dose equivalent rate $\dot{H}p(10)$. The dosimeters are suitable for multiple applications providing the measurement of X-ray (continuous and pulsed) and gamma radiation in the wide energy range.

The **PM1610** dosimeters have unique features for operation in workplaces requiring the use of personal protective equipment or in a harsh environment, including a shockproof rubberized case, a high contrast display with a fluorescent backlight, and two big buttons for easy use even while wearing protective gloves.

Features

- Long-life rechargeable battery: at least 650 hours
- Extended energy range: from 20 keV to 10 MeV
- Wide dose and dose rate measurement ranges
- Measurement of pulsed photon radiation
- Simple navigation with two large buttons
- Audible, visual, and vibration alarms
- USB communication with PC
- Shockproof hermetic case
- Small and lightweight



PEO Detection Page 188 of 461

PM1605BT Personal Radiation Monitor/Dosimeter



Ambient dosimeter for use in extreme environments.

The **PM1605BT** electronic dosimeter is equipped with a Geiger-Mueller counter for extended measurement of the **ambient dose equivalent** and **ambient dose equivalent** rate. Instruments can search, detect, and locate radioactive sources, alert the user with audible, visual, and vibration alarms, and transmit stored data to a PC or smartphone.

The dosimeter is designed to withstand **extreme environmental conditions** such as limited visibility, raised noise, high temperatures, exposure to seawater, shock, and falls. Its control panel with two big buttons allows using protective gloves while operating the instrument.

The instruments are recommended for personal radiation protection of first responders, HAZMAT teams, civil defense, firefighters, and the other divisions that deal with radiological emergencies.

Features

- IP68 case for operation in extreme environmental conditions
- Highly visible LEDs on the front and top panels for alarm indication
- Removable clip for secure fastening to a belt or a pocket
- Large buttons suitable for use with protective gloves
- Operating temperature from -30 °C to 65 °C
- Ambient dose equivalent rate up to 10 Sv/h
- Ambient dose equivalent up to 100 Sv
- Bluetooth and USB communication
- Battery lifetime of at least 9 months
- Large and easy-to-read LCD



PEO Detection Page 189 of 461

PoliSimeter™ ERB Electronic Personal Dosimeter



X-ray (continuous/pulsed) and gamma radiation personal dosimeter with an **extended range** of dose measurement and a replaceable **battery**.

PoliSimeter™ series of electronic personal dosimeters (EPDs) is the next generation of the well-known PM1610 series by Polimaster, which was a trusted solution on the market for nearly 15 years, with over 20,000 dosimeters sold. Building on the legacy of the PM1610, the PoliSimeter offers enhanced capabilities for the extended measurement of personal dose Hp(10) and dose rate Hp(10) of both continuous and pulsed X-ray and gamma radiation. The PoliSimeter is designed to meet the latest industry requirements and features a USB-C port for convenient connectivity and data transfer.

PoliSimeter ERB model has an **extended range** of dose measurement of **up to 20 Sv** for use in high-radiation environments, providing critical safety and monitoring functionality. Instead of a rechargeable battery, this model is powered by an **AAA battery**, which is easy to replace, affordable and safe to handle.

Features

- Wide dose and dose rate measurement ranges
- Easily replaceable long-life AAA battery: 500 hours
- Measurement of pulsed photon radiation
- Simple navigation with two large buttons
- Audible, visual, and vibration alarms
- USB-C communication with PC
- Shockproof hermetic case
- · Small and lightweight



PEO Detection Page 190 of 461

PoliSimeter™ ER Electronic Personal Dosimeter



X-ray (continuous/pulsed) and gamma radiation personal dosimeter with an **extended range** of dose measurement.

PoliSimeter™ series of electronic personal dosimeters (EPDs) is the next generation of the well-known PM1610 series by Polimaster, which was a trusted solution on the market for nearly 15 years, with over 20,000 dosimeters sold. Building on the legacy of the PM1610, the PoliSimeter offers enhanced capabilities for the extended measurement of personal dose Hp(10) and dose rate Hp(10) of both continuous and pulsed X-ray and gamma radiation. The PoliSimeter is designed to meet the latest industry requirements and features a USB-C port for convenient connectivity and data transfer.

PoliSimeter ER model has an **extended range** of dose measurement of **up to 20 Sv** for use in high-radiation environments, providing critical safety and monitoring functionality.

Features

- Wide dose and dose rate measurement ranges
- Long-life rechargeable battery: 500 hours
- Measurement of pulsed photon radiation
- Simple navigation with two large buttons
- Audible, visual, and vibration alarms
- USB-C communication with PC
- Shockproof hermetic case
- Small and lightweight



PEO Detection Page 191 of 461

PoliSimeter™ Electronic Personal Dosimeter



X-ray (continuous/pulsed) and gamma radiation personal dosimeter.

PoliSimeter™ series of electronic personal dosimeters (EPDs) is the next generation of the well-known PM1610 series by Polimaster, which was a trusted solution on the market for nearly 15 years, with over 20,000 dosimeters sold. Building on the legacy of the PM1610, the PoliSimeter offers enhanced capabilities for the extended measurement of personal dose Hp(10) and dose rate Hp(10) of both continuous and pulsed X-ray and gamma radiation. The PoliSimeter is designed to meet the latest industry requirements and features a USB-C port for convenient connectivity and data transfer.



- Wide dose and dose rate measurement ranges
- Long-life rechargeable battery: 500 hours
- Measurement of pulsed photon radiation
- Simple navigation with two large buttons
- Audible, visual, and vibration alarms
- USB-C communication with PC
- Shockproof hermetic case
- Small and lightweight



PEO Detection Page 192 of 461

RadFlash® Electronic Personal Dosimeter



With RadFlash, the instant your radiation exposure increases, you know it. Continuous monitoring and custom alerts provide immediate, precise feedback, empowering you to react in-themoment to changes in your exposure environment.

The dosimeter is capable of solving a wide range of personal dose monitoring tasks, including measurement of personal dose equivalent Hp(10) and personal dose equivalent rate $\dot{H}p(10)$ of X-ray (continuous and pulsed) and gamma radiation.

Only the best instant monitoring and alerts provide the safety professionals deserve. The RadFlash electronic personal dosimeter gives you immediate feedback, high precision, and unmatched flexibility. It's the perfect tool for minimizing risk and maximizing confidence.

Features

- Independent alarm thresholds for both dose and dose rate
- Automatic calculation of the safe stay time in the Polismart® app
- Compatible with real-time dosimetry systems
- Miniature, lightweight design
- Intuitive single-control button
- Bluetooth integration
- Wireless charging



PEO Detection Page 193 of 461

Partner Bertin Instruments





Bertin Instruments is a global provider of advanced radiation detection and environmental monitoring solutions, specializing in handheld monitors, personal electronic dosimeters, environmental monitoring systems, and waste &

recycling management technologies. Their instruments are designed to meet the rigorous demands of nuclear facilities, emergency response teams, and environmental agencies.

Product offering



PEO Detection Page 194 of 461

Saphydose gamma i



Saphydose Gamma i is an operational dosimeter measuring radiation in real time (Hp (10) X and γ dose).

This dosimeter is designed for people working in a controlled area (nuclear power plant, fuel reprocessing plant, research center, hospital, non-destructive testing service, etc.) or likely to be exposed (army, police, fire brigade, etc.).

It is compliant with the IEC 61526 standard for measurement of personal dose equivalents. Reliable and ergonomic, the Saphydose Gamma i is appreciated for its sturdy aluminum housing, its high resistance to electromagnetic fields and its long time battery life. It can be used individually or as part of our dosimetry management system.



PEO Detection Page 195 of 461

Partner SE International





S.E. International, Inc. is a trusted U.S.-based manufacturer of radiation detection instruments under the Radiation Alert® brand. Their product range includes area monitors, handheld survey meters, and personal electronic dosimeters—each designed to deliver accurate, real-time radiation monitoring across a wide range of applications.

Product offering





PEO Detection Page 196 of 461

Radiation Alert® Sentry EC



The Radiation Alert® Sentry EC is a personal alarming radiation dosimeter and rate meter, designed to safeguard personnel working in environments with potential X-ray or gamma exposure.

This pocket-sized unit features an energy-compensated tube for a linear gamma response and built-in memory for tracking accumulated exposure data. With the free SentryCom Software, you can easily generate incident reconstructions for analysis and set custom vibrating and audio alerts for dose (>1.0 mR/10 μ Sv) and dose rate (>1.0 mR/hr/10 μ Sv/hr).

An audio switch allows you to choose between audible clicks with each detected count or a discreet silent mode.



PEO Detection Page 197 of 461

Rad-60 Alarming Dosimeter



The RAD-60 is a Personal Alarming Radiation Dosimeter. It's a precise and reliable instrument for ensuring the safety of personnel. Ideally, the RAD-60 is used in stand-alone conditions for everyday radiation monitoring. The RAD-60 can also be switched into System Mode, for the purpose of tracking Personnel Dose records and generating compliance reports.

The design includes state-of-the-art technology with built in memory for retrieving dose, even during power-down. It eliminates outside interference from shock and RF. The RAD-60 is easily programmed by the user, has a digital display, and operates with a single AAA alkaline battery.

With the push of a button, you can turn the unit on/off, change the digital display to read dose or dose rate, select from several dose and dose rate alarm levels, turn the chirp function on/off, reset the integrated dose, and perform battery tests. The large digital display gives instant dose or dose rate readings with a loud audible alarm.



PEO Detection Page 198 of 461

Partner Ludlum Measurements Inc.





LUDLUM

Ludlum Measurements, Inc. is a trusted global provider of radiation detection

and monitoring instruments, offering rugged, accurate solutions for personnel and monitoring instruments, offering rugged, accurate solutions for personnel safety, environmental protection, and security screening. Since 1962, their

equipment has been used worldwide in applications ranging from nuclear power and emergency response to border protection and critical infrastructure monitoring.

Product offering





Model 23-1 Electronic Personal Dosimeter - Ludlum



The Model 23-1 Electronic Personal Dosimeter (Ludlum) is a solid and lightweight (55.9 g/2 oz) pen-type personal dosimeter. It can be used for measuring gamma or X-ray radiation in medical and laboratory environments or other areas where personal radiation monitoring is desired or required.



Model 23-1 Electronic Personal Dosimeter features:

- 600 record data logging option available
- low weight and slim design
- audio alarm
- silicon semiconductor detector
- gamma and X-ray (35 keV to 3 MeV)

Read more about the Model 23-1 Electronic Personal Dosimeter on the <u>Ludlum website</u>

PEO Detection Page 200 of 461

CZT & GAMMA CAMERAS





Partner 3D Plus





3D PLUS is a leading provider of compact, high-performance imaging systems based on advanced CZT (Cadmium Zinc Telluride) technology. Designed for demanding applications across space, defence, and nuclear sectors, their gamma cameras offer precise, real-time radiation imaging in compact, rugged formats.

Product offering



PEO Detection Page 202 of 461

Radiation Detection \rightarrow CZT & Gamma Cameras Spid-X



In collaboration with the French Atomic Energy Commission (CEA), the Spectro Imager Spid-X has been designed for nuclear safety applications such as radioactive waste monitoring, decommissioning, decontamination or emergency situations.

The device offers fine spectroscopic capabilities embedding ultra-low noise ASICs and CdTe crystal thanks to 3D PLUS electronic components miniaturization technology.

The Spid-X gamma camera allows locating, identifying and measuring the dose intensity of the various radioactive sources that can be found in a nuclear environment. Combined with the small size and lightweight of the device, it brings a fast and efficient diagnostic on site, and can help the decontamination process.

Features

- Identifies and locates the radioactive sources
- Measures the dose of the sources
- Small dimensions : 323 x 110 x 180 mm3
- Light Weight : < 3,5 kg
- Covers large range of energy
- Fine spectroscopic capabilities



PEO Detection Page 203 of 461

Partner Kromek





Kromek Group plc is a global leader in advanced radiation detection technologies, specializing in compact, high-resolution solutions for security, defense, nuclear, and research applications. Leveraging proprietary Cadmium Zinc Telluride (CZT) semiconductor technology, Kromek delivers a versatile

portfolio that includes handheld monitors, portable isotope identifiers, CZT-based gamma cameras, and laboratory-grade spectrometers.

Product offering









TN15



RayMon







K102



PEO Detection Page 204 of 461

Radiation Detection > CZT & Gamma Cameras

GR Series Gamma Spectrometers



A family of small and light CZT-based Gamma detector spectrometers!



The Kromek GR family is a range of CZT-based high-performance Gamma spectrometers. They are completely self-contained, with built-in preamplifier, shaping amplifier, baseline restorer, pulse height digitizer and HV supply. The digitised pulse heights of detected Gamma signals are sent to a computer via the USB. The unit is powered entirely from the USB bus, so no external power supply is needed.

Can be used for all Gamma radiation detection needs either straight out of the box or built into your own devices. The GR Gamma detectors can be mounted side by side in an array to give you coverage of a large area.

GR1/GR1+ Gamma spectrometer

- · Perfect for most uses
- Energy resolution: < 2.5% FWHM @ 662 KeV
- USB output only
- 1 cm cubed CZT detector
- The plus model is available for those that need higher resolution:
- Energy resolution: <2.0% FWHM @ 662 KeV

GR1-A/GR1-A+ Gamma spectrometer

- For those that need extra outputs channels
- Energy resolution: < 2.5% FWHM @ 662 keV
- USB output
- Three MCX connectors that provide energy and timing outputs and gate inputs
- MultiSpect Analysis spectroscopy software included in the price
- 1 cm cubed CZT detector
- The plus model is available for those that need higher resolution:
- Energy resolution: <2.0% FWHM @ 662 KeV

GR05 Gamma spectrometer

- For use in a high-flux environment
- Energy resolution: < 2.5% FWHM @ 662 keV
- Max dose rate approximately 10mSv/hr
- USB output
- Smaller 0.125 cm cubed CZT detector
- For use in high-count (high-flux) environments

PEO Detection Page 205 of 461



PEO Detection Page 206 of 461



The Quant GR1 is a complete mobile or benchtop solution for quantifying doses of Gamma radiation released by radionuclides. Its high resolution of <2% and count spectrum range of 4096 channels enables any isotope to be identified and its associated dose quantified, even from complex mixtures.

The ability to quantify radiation doses in real time eliminates the need for further analysis in the lab, as data can both be collected and processed on site, saving time and costs.



PEO Detection Page 207 of 461

Radiation Detection > CZT & Gamma Cameras

TN15



The Kromek TN15 is a robust, cost effective, self-contained, room temperature Neutron detector without Helium3. The detector surpasses the performance of a 100mm long 13mm3 He tube at 4 atmospheres and does not need cooling as it operates at room temperature.

This highly compact device is completely self-contained, with a built-in preamplifier, shaping amplifier, pulse discrimination, and HV supply.

The digitized neutron data is sent to a computer via the mini-USB which also powers the unit, so no external power supply is required; making the TN15 portable, creating a host of new ways to use and deploy neutron detectors.



PEO Detection Page 208 of 461

Radiation Detection > CZT & Gamma Cameras

RayMon



RayMon

A powerful and rugged handheld gamma detector for highresolution radioactive isotope identification. The RayMon10 is one of the most powerful and rugged handheld radiation monitors in the world. It can be used to detect, measure, and accurately identify gamma-ray emitting radionuclides, providing high-resolution isotope identification using the latest CZT solid-state detector technology. It is an all in one solution to your gamma radionuclide identification needs

It can output a variety of reports including date/time, user handheld ID, photo and audio note, GPS positioning, radiation spectra, and isotope identification.

Variations in normal operating conditions can often affect the performance of radio-isotope identification, the RayMon10's advanced one cubic centimeter CZT coplanar grid detector provides more stable performance than scintillation-type detectors



PEO Detection Page 209 of 461

Radiation Detection > CZT & Gamma Cameras Sigma 25/50



Available in two variations, Kromek's Sigma 25/50 Gamma ray detectors are highly sensitive, fast, and lightweight replacing conventional photomultiplier technology with state-of-the-art silicon photomultipliers (SiPMs).



The Sigma 25/50 Gamma detectors offer up to 32.8cm3 of detection volume, delivered in a package providing significant benefits in cost, size, weight, power consumption and temperature stability.

CsI(TI) has a light output of 54 photons/keV and is one of the brightest scintillators known. As well as good Gamma photon stopping power this makes CsI(TI) well suited for Gamma radiation detection.

Robust, Small & Lightweight

The Sigma 25/50 Caesium Iodide Scintillator Radiation detectors are perfect for radiation detection in the field and in the lab owing to their small size. If you need fast detection in an easy to use package this is what you need.

K-Spect & MultiSpect Analysis Integration

Kromek's Sigma 25/50 are available with both K-Spect and MultiSpect Analysis software which provide the spectrum acquisition, display, analysis, and storage functions.

Integration

Due to the discreet nature of the Sigma 25/50, these can be integrated into other systems. We've had them flying on drones and built into larger detector arrays.

PEO Detection Page 210 of 461

Radiation Detection > CZT & Gamma Cameras

K102



The Kromek K102 accepts amplified shaped pulses from detectors, digitizes the pulse heights, and sends the data to PC via the USB bus.

The Analyser is available with either Kromek's Windows based (7/8/10) K-Spect or MultiSpect Analysis software, which provide the spectrum acquisition, display, analysis, and storage functions.

It is powered through the USB bus so no external power supply is required.



PEO Detection Page 211 of 461

PORTABLE ISOTOPE IDENTIFIERS





Partner Kromek






Kromek Group plc is a global leader in advanced radiation detection technologies, specializing in compact, high-resolution solutions for security, defense, nuclear, and research applications. Leveraging proprietary Cadmium Zinc Telluride (CZT) semiconductor technology, Kromek delivers a versatile

portfolio that includes handheld monitors, portable isotope identifiers, CZT-based gamma cameras, and laboratory-grade spectrometers.

Product offering



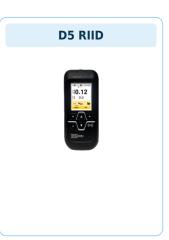







PEO Detection Page 213 of 461

Radiation Detection > CZT & Gamma Cameras

GR Series Gamma Spectrometers



A family of small and light CZT-based Gamma detector spectrometers!



The Kromek GR family is a range of CZT-based high-performance Gamma spectrometers. They are completely self-contained, with built-in preamplifier, shaping amplifier, baseline restorer, pulse height digitizer and HV supply. The digitised pulse heights of detected Gamma signals are sent to a computer via the USB. The unit is powered entirely from the USB bus, so no external power supply is needed.

Can be used for all Gamma radiation detection needs either straight out of the box or built into your own devices. The GR Gamma detectors can be mounted side by side in an array to give you coverage of a large area.

GR1/GR1+ Gamma spectrometer

- · Perfect for most uses
- Energy resolution: < 2.5% FWHM @ 662 KeV
- USB output only
- 1 cm cubed CZT detector
- The plus model is available for those that need higher resolution:
- Energy resolution: <2.0% FWHM @ 662 KeV

GR1-A/GR1-A+ Gamma spectrometer

- For those that need extra outputs channels
- Energy resolution: < 2.5% FWHM @ 662 keV
- USB output
- Three MCX connectors that provide energy and timing outputs and gate inputs
- MultiSpect Analysis spectroscopy software included in the price
- 1 cm cubed CZT detector
- The plus model is available for those that need higher resolution:
- Energy resolution: <2.0% FWHM @ 662 KeV

GR05 Gamma spectrometer

- For use in a high-flux environment
- Energy resolution: < 2.5% FWHM @ 662 keV
- Max dose rate approximately 10mSv/hr
- USB output
- Smaller 0.125 cm cubed CZT detector
- For use in high-count (high-flux) environments

PEO Detection Page 214 of 461



PEO Detection Page 215 of 461

Radiation Detection > Handheld Monitors **D5 RIID**



The D5 RIID provides a unique high performance and versatile radiation detection device in a wearable package for military, homeland security, and industrial personnel.



The D5 RIID is a small, light, 3.5% resolution, wearable Radioisotope Identification Device (RIID) with an expansive radioisotope library and an ultra low false alarm rate. It continuously scans and accurately identifies radiological threats in real time, even in mixed source environments.

The D5 RIID combines small form factor with powerful radiometric performance and enhanced sensitivity at a medium resolution of 3.5%. The D5 RIID has an area efficiency which is 62% higher when compared with conventional RIIDs.

D5 RIID Overview https://youtu.be/yi-uvo05nFg





D5 RIID is the smallest, lightest with the ultimate detection performance. It has a 3.5% resolution, with an expansive radioisotope library and an ultra low false alarm rate. It continuously scans and accurately identifies radiological threats in real time, even in mixed source environments.

PEO Detection Page 216 of 461

Radiation Detection > Handheld Monitors

D3S ID



A wearable, concealable Gamma and Neutron detector which puts the power of a RIID into a package the size of a Personal Radiation Detector (PRD). D3S ID is the new standard in portable radiation detectors.

The D3S ID is a powerful, wearable, unobtrusive and handsfree device which is continuously scanning for Gamma and Neutron radiation threats.





Kromek's D3S meets the data security expectations of governments, intelligence services, and safety authorities. The D3S comes standard with a secure smartphone (Android control), which contains the exclusive and secured Kromek detector software. The D3S is already frequently used in the United States, for example on fire trucks and ambulances or as an area mapping system with 1,000 detectors during a 'scavenger hunt'. In Europe, the D3S has been deployed during state visits and NATO consultations in recent years, to detect early radioactive threats that may be present in cargo, vehicles, buildings, other objects, and in the environment.

Features:

- Identifies 37 isotopes (17 more than the current ANSI standard)
- Identifies faster than a RIID
- Budget-friendly compared to other products in the market
- Small size, wearable, fits on belt
- Networkable

PEO Detection Page 217 of 461

Radiation Detection > CZT & Gamma Cameras

RayMon



RayMon

A powerful and rugged handheld gamma detector for highresolution radioactive isotope identification. The RayMon10 is one of the most powerful and rugged handheld radiation monitors in the world. It can be used to detect, measure, and accurately identify gamma-ray emitting radionuclides, providing high-resolution isotope identification using the latest CZT solid-state detector technology. It is an all in one solution to your gamma radionuclide identification needs

It can output a variety of reports including date/time, user handheld ID, photo and audio note, GPS positioning, radiation spectra, and isotope identification.

Variations in normal operating conditions can often affect the performance of radio-isotope identification, the RayMon10's advanced one cubic centimeter CZT coplanar grid detector provides more stable performance than scintillation-type detectors



PEO Detection Page 218 of 461

Radiation Detection > Portable Isotope Identifiers

AARM



Real-time location, measurement, and mapping of radioactivity from the air with Kromek's drone-based payload!



When mounted to any multirotor drone model, Kromek's AARM payload system can be used to complete rapid, detailed radiological surveys over wide areas. Its advanced sensor system of integrated radiation and positional sensors allows isotopic fingerprinting, counts per second, and full spectral data to be collected and subsequently delivered to the user every second.

Data is also visualised in real-time in the form of a metre resolution radiation heat map on the AARM's iOS-based app. Hotspots and anomalies can be quickly identified from a safe distance, optimal for applications including, but not limited, to environmental surveys and monitoring, as well as enhancing situational awareness and rapid response in nuclear security applications.

Flexible detector and communications options are also available, adding to the versatility of the system. Cloud-based comms allow spectral data and counts per second to be viewed from anywhere in the world. Non-cloud-based options are also available, with onboard storage of data possible as well. The payload houses Kromek's proven radiation detection capabilities, with single or dual detector configurations of the <u>GR1</u>, <u>SIGMA 50</u>, <u>TN15</u> or <u>D3S</u>. The system's large operating temperature range further expands the system's mission versatility, making missions possible anywhere in the world.



PEO Detection Page 219 of 461

Partner Polimaster





Polimaster is a global leader in radiation detection and monitoring solutions, offering a comprehensive suite of instruments designed to detect, identify, and measure ionizing radiation across various environments. Their product range includes handheld monitors, personal electronic dosimeters, portable isotope identifiers, portal monitors, and mobile detection systems, all engineered to meet the rigorous demands of security, emergency response, and industrial

applications.

Product offering





PEO Detection Page 220 of 461

Radiation Detection > Handheld Monitors

PM1401K-3M Multipurpose Hand-Held Radiation Monitor/Identifier



PM1401K-3M model is a gamma-only radiation monitor without a neutron detector which is designed for quick and reliable measurement of gamma dose rate, detection of alpha, beta, and gamma sources, measurement of alpha and beta radiation flux density, acquisition of gamma spectra, identification of radioisotopes, and measurement of food/soil contamination with 137Cs

Features

- Storage of up to 10000 events and 1000 spectra
- Audible, visual and external vibration alarm
- Categorization of identified radionuclides
- · Shock and water resistant IP65 case
- Adjustable radionuclide libraries
- USB communication with PC
- · Built-in GPS module

Applications

- · Customs and border control
- HAZMAT and CBRNe teams
- Emergency services
- Police and security
- Industrial facilities
- First responders



PEO Detection Page 221 of 461

PM1401K-3P Multipurpose Hand-Held Radiation Monitor/Identifier



Gamma-neutron model suitable for various radiation control tasks.

The **PM1401K-3 series** of radiation monitors compromises a wide range of all-in-one devices for radiation detection, dose rate, contamination measurements, spectrometry, and radionuclide identification.

The **PM1401K-3P model** is the **gamma-neutron model** suitable for various radiation control tasks, including measurement of ambient dose equivalent rate, detection of alpha, beta, gamma, and neutron sources, measurement of alpha and beta radiation flux density, acquisition of gamma spectra, identification of radioisotopes, and measurement of food/soil contamination with ¹³⁷Cs.

Features

- Storage of up to 10000 events and 1000 spectra
- Audible, visual, and external vibration alarm
- Categorization of identified radionuclides
- Shock and water-resistant IP65 case
- Adjustable radionuclide libraries
- USB communication with PC
- Built-in GPS module

Operation principle

The PM1401K-3P continuously measures ambient dose equivalent rate $\dot{H}^*(10)$ of photon radiation in the wide energy range, detects alpha, beta, gamma, and neutron radiation, measures alpha and beta radiation flux density, operates as a gamma radiation spectrometer and radioisotope identifier, and measures food/soil contamination with 137Cs radionuclide.



PEO Detection Page 222 of 461

Partner GEORADIS s.r.o.



GEORADIS

Georadis s.r.o. is a specialized manufacturer of advanced radiation detection and monitoring instruments, offering a comprehensive suite of solutions for field and laboratory applications. Their product portfolio includes handheld monitors, portable isotope identifiers, environmental monitoring devices, and laboratory equipment, all designed to meet the rigorous demands of professionals in sectors such as environmental monitoring, industrial safety, and public security.

Product offering





PEO Detection Page 223 of 461

Radiation Detection > Portable Isotope Identifiers

RT-30 Gamma-Ray Spectrometer with Nuclide ID Capability - Georadis



The RT-30 Gamma-Ray Spectrometer with Nuclide ID Capability (Georadis) integrates a radiation survey meter, dose meter and radionuclide identification device in a weather protected, lightweight and easy to use instrument.



RT-30 Gamma-Ray Spectrometer with Nuclide ID Capability features:

- multiple functions; nuclide ID (isotope name), scan and search
- auto-stabilization
- protection: IP66
- single button operation
- sensitivity: Co-60: 270 cps/MBq, Cs-137: 160 cps/MBq, Am-241: 75 cps/MBq
- data interchange; Bluetooth or USB
- readout search mode; 0 65535 cps
- energy response: 20 keV to 3000 keV
- energy compensated doserate: 0 10 mSv/h (with G/M detector)
- graphic LCD display; 128 x 64 pixels
- 2GB memory

Read more about the RT-30 Gamma-Ray Spectrometer with Nuclide ID Capability on the <u>Georadis</u> website

PEO Detection Page 224 of 461

ENVIRONMENTAL MONITORING





Partner Bertin Instruments





bertintechnologies

Bertin Instruments is a global provider of advanced radiation detection and environmental monitoring solutions, specializing in handheld monitors, personal electronic dosimeters, environmental monitoring systems, and waste &

recycling management technologies. Their instruments are designed to meet the rigorous demands of nuclear facilities, emergency response teams, and environmental agencies.

Product offering


GammaTRACER **Spider Autonomous Gamma Monitor for Emergencies -**Saphymo



AlphaGUARD-Radon **Monitor - Bertin** Instruments



ShortLINK Short-**Range Environmental Radiation Monitoring** Network - Bertin/ Saphymo



GammaTRACER Autonomous **Radiation Monitoring Probe - Saphymo**



BAB E Air Monitoring Beacon



SkyLINK Wide-Range Environmental Radiation Monitoring Network - Bertin/ Saphymo



AlphaE - Bertin Instruments



SpectroTRACER Environmental Radiation Monitor -Saphymo



Skydose Dosimetry System - Bertin **Instruments**

Coriolis RECON -**Bertin Instruments** **Coriolis Micro - Bertin** Instruments



PEO Detection Page 226 of 461







GammaTRACER Spider Autonomous Gamma Monitor for Emergencies - Saphymo



The GammaTRACER Spider Autonomous Gamma Monitor (Saphymo) has been designed to cover the needs of first responders in an emergency scenario. Based on the proven GammaTRACER design, the probe provides reliably the measurement of the gamma dose rate and wireless data transmission to the crisis center by means of SkyLINK radio or Iridium satellite modem.



GammaTRACER Spider Autonomous Gamma Monitor for Emergencies features:

- built-in battery for up to 5 years operation
- innovative self-erecting design, very fast deployment
- ultra compact design
- emergency proof communication options
- SkyLINK radio modem (up to 100 km/60 mi)
- satellite modem (Iridium)
- hermetically sealed weatherproof housing
- wide measurement range: 20 nSv/h up to 10 Sv/h
- can be used to quickly enhance density of existing monitoring networks

GammaTRACER Spider demo

PEO Detection Page 228 of 461

AlphaGUARD-Radon Monitor - Bertin Instruments



Overview:

The complete product line provides all accessories for radon in air, water, soil, building materials, progeny, thoron and calibration equipment to perform air, water, soil, exhalation measurements. The collected data can be linked to the DataVIEW software, allowing data download and storage as well as professional data analysis and reporting. With AlphaGUARD, bring your Radon Lab everywhere.



AlphaGUARD incorporates a pulse-counting ionization chamber (alpha spectroscopy).

Based on optimal chamber geometry and intelligent signal evaluation, this radon monitor is suitable for continuous monitoring of radon concentrations between 2 – 2 000 000 Bq/m³.

The DSP (Digital Signal Processing) technology provides highly effective differentiation ability between "real" radon data and all kinds of artefacts.



Features:

- 0.62 L pulsed ionization chamber
- Measuring range of 2 to 2,000,000 Bg/m³,
- Instrument calibrator error of 3%
- Storage capacity of up to 60,000 measurement points
- Storage of:
 - 400 days at 10 min measuring cycle
 - 2,500 days at 60 min measuring cycle
- Battery life of 10 days (40 days with external battery)
- 329 mm x 355 mm x 123 mm and weighs 6,2 kg (13,7 lbs)

Your Radon Lab - Everywhere:

- AquaKIT
- Soil gas Probe
- AlphaPM
- AlphaPUMP / LabPUMP
- Emanation / Calibration Container
- Exhalation Box
- On line Radon in water monitoring
- Valve Selector
- DataVIEW PRO software

Benefits:

- Quality at the highest level
- Long-term stable calibration factor (guaranteed 5 years)
- Calibration traceable to different national standards (PTB, NIST, NPL)
- Inbuilt quality assurance system for permanent validation of system operation and data
- Fast transient response
- Automatic background correction
- No sensitivity to high air humidity


PEO Detection Page 229 of 461

Reasons to choose ALPHAGUARD - RADON MONITOR:

Reference instrument with high sensitivity



Calibration stability guaranteed for 5 years



Maintenance-free operation

Gallery:













AlphaGUARD - Your Radon lab everywhere

https://youtu.be/oJaaYf9-Pbl






PEO Detection Page 230 of 461

ShortLINK Short-Range Environmental Radiation Monitoring Network - Bertin/Saphymo



The ShortLINK Wireless Communication System is a short-range, fully autonomous and private wireless network. You can use this system to transmit online data from connected low-power sensors or instruments to a central station. Unlike public cellular communication system standards (like GSM), this system is not dependant on the existence of an area covering cellular infrastructure. ShortLINK is generally installed in combination with a radiological network, like GammaTRACER and DataExpert supervision software.

If you want to know more about Bertin data transmission systems, take a look at <u>our partner's website!</u>

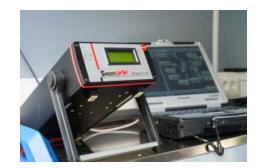

SHORTLINK WIRELESS COMMUNICATION SYSTEM FEATURES AND BENEFITS

- Very low power consumption
- Operating distance up to 5 km (3 mi)
- Turnkey installation
- Long-term maintenance-free operation
- Can withstand temperatures from -40°C to 60°C (-40°F to 140°F)

PEO Detection Page 231 of 461

GammaTRACER Autonomous Radiation Monitoring Probe - Saphymo



The GammaTracer Autonomous Radiation Monitoring Probe from Bertin is designed to continuously measure, record, and transmit the environmental gamma dose rate. The probes continuously measure the gamma radiation dose.

Worldwide, there are more than 4.000 GammaTRACERs in operation.

The probes also offer a new dimension in wireless data collection. This is possible because the probes are equipped with a radio module, so you can use them with SkyLINK and ShortLINK for wireless data collection. GammaTRACER can store up to 12.800 data sets, depending on the probe type and measurement cycle.

The probe is available in four types: Basic, Wide, High and XL2.




UNLIMITED AUTONOMY

The GammaTRACER is an autonomous radiation monitoring probe. The monitor's batteries allow maintenance-free, non-stop operation for up to five years, and with an extended battery pack, it will even last up to ten years! This is possible because of the energy-saving chip technology.

But, if you choose the internal solar panel, the autonomy can be unlimited!

They can also resist extreme climatic and environmental conditions because the probes are independent of any physical connections.

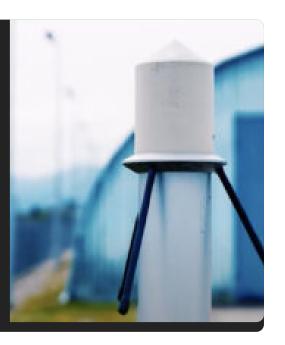

GAMMATRACER TYPES

GammaTRACER covers a broad range of radiation monitoring applications because there are multiple types available. The probes are deployable for multiple applications, for example nationwide monitoring, perimeter monitoring, and monitoring for nuclear facilities. The probes are not only suitable for routine, but also for emergency applications.

BASIC

PEO Detection Page 232 of 461

The GammaTRACER Basic has a dose rate measurement range of 20 nSv/h to 10 mSv/h and an energy range of 45keV to 3MeV.

WIDE

The GammaTRACER Wide has a dose rate measurement range of 20 nSv/h to 10 Sv/h and just like the BASIC, also an energy range of 45 keV to 3 MeV.

HIGH


The GammaTRACER High has a dose rate measurement range of 1 mSv/h to 10 Sv/h and an energy range of 80 keV to 4,4 MeV.

XL2

The GammaTRACER XL2 has a dose rate measurement range of 10 nSv/h to 10 Sv/h and an energy range of 45 keV to 2 MeV. The XL2 type also has fast a response mode of 1 second.

ADDITIONAL OPTIONS

Even though the four GammaTRACE options already have a lot of features, there are also options you can choose from. All types can operate in temperatures ranging from -20°C (-4°F) to 50°C (122°F), but you can also choose for the option of -40°C (-40°F) to 60°C (140°F). Furthermore, you can choose additional sensors (rain, wind and weather), power supply by solar panels or a seismic qualified version.

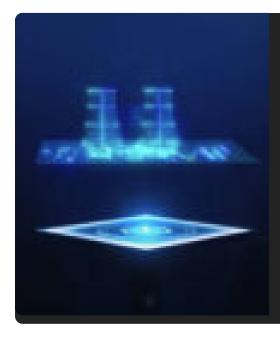

BENEFITS & FEATURES

- Measures x-radiation and gamma radiation
- Measurement cycle, adjustable from 1 second to 120 minutes
- Battery lifetime up to ten years or even unlimited with solar panels
- Can store up to 12.800 data sets
- Type apporval in several countries
- Maintanance-free
- Non-stop operation
- Easy to install

If you want to read more about GammaTRACER, take a look at our partner's website!

https://youtu.be/59D0HZs64zw





PEO Detection Page 233 of 461

If you have any questions...

Contact PEO!

PEO Detection Page 234 of 461

BAB E Air Monitoring Beacon



The BAB-E fixed beacon is used for continuous monitoring of artificial Alpha and Beta aerosols, in Gamma environments as well as in the presence of natural Radon descendants. It has a double cover that allows it to withstand the most extreme climatic conditions for uninterrupted use outdoors (territorial surveillance, nuclear infrastructures, etc.). The data collected by the BAB-E can be accessed remotely and in real time on the DataEXPERT supervision software.

Features

- Can be used in controlled areas with high gamma background
- Compensation of radon progenies
- Use of standard sources for efficiency controls
- Ruggedized, can be used on dismantling and purification sites
- Available as stationary or mobile version
- Can be connected to a central monitoring network and trigger a general alarm

Technology

- The radioactive dust is deposited by air suction on a filter paper placed in the BAB beacons.
- The suction flow rate is about 5 m3/h (it depends on dustiness and type of filter paper).
- The flow rate is calculated from the depression measured between the filter and the pump. This allows to detect any tear or dust clogging.
- Placed one centimeter above the sample, the detection system is based on two 300 μm thick silicon diodes with a surface of 360 mm2.
- The analog signal from the two diodes is amplified by a preamplifier with an output range of about 30mV/MeV.
- An amplifier increases the signal amplitude to 0.7V/MeV, and the signal is then used to produce the energy spectrum via an amplitude analyzer that encodes information to 512 channels.




PEO Detection Page 235 of 461

SkyLINK Wide-Range Environmental Radiation Monitoring Network - Bertin/ Saphymo



The SkyLINK Wireless Communication System is a wide-range, fully autonomous and private wireless network. You can use this system to transmit online data from connected low-power sensors or instruments to a central station. Unlike public cellular communication system standards (like GSM), this system is not dependant on the existence of an area covering cellular infrastructure. The system generally includes a radiological network like <u>GammaTRACER</u> probes and the DataExpert supervision software.



The system structure allows its use in every situations, even in the most accidental ones (private wireless communication network and easy-to-install autonomous probes).



SKYLINK WIRELESS COMMUNICATION SYSTEM FEATURES

- Very low power consumption
- Operating distance up to 100 km (60 mi)
- Private network, so no regular transmission fees
- Easy interface to external instruments or host processors
- Turnkey system installation
- Long-term maintenance-free operation

https://youtu.be/59D0HZs64zw





PEO Detection Page 236 of 461

AlphaE - Bertin Instruments



AlphaE is an electronic handheld device for fast and timeresolved radon monitoring in buildings, outdoors and mines. Typically, 80 % of the final result is achieved after 2 hours (faster response for higher values). Due to its ultra-lightweight design and sophisticated features, AlphaE is highly suitable also for surveying the personal radon exposure and dose at workplaces.



The AlphaE's favourable price-performance ratio makes it also interesting for service companies engaged in radon assessment and mitigation as well as for users in private homes. Up to 6 months battery life allows long-term measurement without mains power. Permanent operations via mains supply are possible via USB port.

Advantages AlphaE

- ultra-lightweight design
- sophisticated features
- wide measuring range for professional use
- up to 6 months autonomy
- · suitable software included

Download the datasheet or contact our product specialist.

PEO Detection Page 237 of 461

SpectroTRACER Environmental Radiation Monitor - Saphymo



SpectroTRACER is a continuous environmental radiation monitor for spectroscopy to measure very low gamma contamination (water: SpectroTRACER AQUA).



The SpectroTRACER produces a spectroscopic analysis of the detected nuclides identification. The SpectroTRACER is used for the measurement of radioactivity when a standard gamma dose rate monitor is not efficient enough and when it is necessary to discover the nature of the gamma radiation.

SpectroTRACER Environmental Monitor features:

- working temperature: -20 ° C to + 50 ° C. / option: -30 ° C to + 60 ° C
- max. 100 meters under water (SpectroTRACER -AQUA)
- IP68 certified
- relative humidity: 100%
- · integrated sensors for temperature and humidity

PEO Detection Page 238 of 461

Skydose Dosimetry System - Bertin Instruments



Skydose is an operational dosimetry system, designed to measure & monitor, in real time, the ambient dose level received by response teams in high exposure areas.



The operational dosimetry system Skydose consists in eight Saphydose γ i RT teledosimeters, one Personal Digital Assistant (PDA), one Easydose configuration software, one Saphyr portable reader, as well as one to three RT-ZB05 routers.

The Skydose system is part of an ongoing approach based on the reduction of both collective and individual doses, in compliance with the ALARA principle (As Low As Reasonably Achievable). By optimizing the exposition to ionizing radiation, it aims at improving the operators' conditions of intervention, who will thus be able to focus safely on the objectives of their mission. The Skydose system only takes a **few minutes to install**. Thanks to the PDA, it ensures the in-field monitoring of an eight-person team equipped with Saphydose γ i RT teledosimeters using mesh networking. **Flexible & robust**, the Skydose system can reliably cover an entire infrastructure (a nuclear power plant, for example), thanks to one or more RT-ZB05 dedicated routers.

Fast & easy to deploy, the Skydose system can be used by operators, first-responders & non-specialists, inside & outside the risk areas.

Features

- easy and quick setting even by non-specialized staff
- automatic network synchronization
- suitable for indoor and outdoor use including reactor buildings
- suitable for emergency situations (sturdy high dose and dose rate range)
- real-time hotspots detection to reduce the mission dose received by workers
- compliant with use in nuclear facilities (CEI 61526)
- low maintenance costs
- real-time, remote & simultaneous monitoring of the Saphydose γi RT dosimeters, for the team to react immediately in case of emergency
- the Skydose system can be installed and configured in a few minutes, and be safely stored in a ruggedized pelicase several systems can operate simultaneously, without interference

Specifications

- detector: 2 energy-compensated silicon diodes
- energy range: from 50 keV. to 7 MeV!

PEO Detection Page 239 of 461

- dose rate measurement range: 0.5 $\mu Sv.$ to 9,999.99 mSv

- dose measurement range: 1 $\mu\text{Sv}.$ to 9,999.99 mSv

• alarms: sound & visual

• battery lifetime in operation: 4,000 hours

• radio range: 300 m

PEO Detection Page 240 of 461

Coriolis RECON - Bertin Instruments



The Coriolis RECON is a portable, light and ruggedized bio-air sampler for biological warfare agents detection, dedicated to CBRN teams or first responders, with quick deployment in case of an event with biological attack suspicion. The Coriolis RECON have been designed to collect large concentrations of aerosols in the breathable range of 0.5 to 10 μm with an air flow rate at 600L/min, thus being more representative of the environment than traditional bio-aerosol samplers. Thanks to its ability to collect bio-aerosol particles into liquid format, this system can be used with rapid identification techniques for biological agents (immunoassay, PCR, etc.) to provide an early warning of aerosolized biological warfare agents.



Introduction video

Advantages Coriolis RECON

- the most efficient concentration of biological warfare agent
- · high air flow rate
- compatible with any downstream experiments for rapid identification
- bio surveillance with long time monitoring up to 6 hours
- quick deployment in a military / first responder context

Download the datasheet or contact our product specialist.

PEO Detection Page 241 of 461

Coriolis Micro - Bertin Instruments



Coriolis μ is an innovative biological air sampler for biocontamination assessment, mainly dedicated to air quality control and air quality monitoring in environmental and pollution research, pharmaceutical, food and veterinary industries, biomedical and health environment... Based on a cyclonic technology, combined to a high air flow rate, Coriolis μ offers the most efficient particles collection in 10 minutes. The biological particles such as toxins, virus, bacteria, molds, pollens, spores are collected and concentrated in a liquid ready to be analyzed with microbiological and cellular and molecular biology methods.



Introduction video

Advantages Coriolis Micro

- the most efficient concentration of biological particles
- high air flow rate & long time monitoring option up to 6 hours
- compatible with any downstream experiments divisible samples for several analysis in parallel
- flexible liquid sample output
- no saturation of the collection media for charged environment

Download the datasheet or contact our product specialist.

PEO Detection Page 242 of 461

Partner Ludlum Measurements Inc.





Ludlum Measurements, Inc. is a trusted global provider of radiation detection and monitoring instruments, offering rugged, accurate solutions for personnel safety, environmental protection, and security screening. Since 1962, their

equipment has been used worldwide in applications ranging from nuclear power and emergency response to border protection and critical infrastructure monitoring.

Product offering









PEO Detection Page 243 of 461

Model 3101 Portable Tritium in Air Monitor



The Model 3101 Tritium in Air Monitor features ruggedized and flexible operation. It is powered by rechargeable internal NiMH batteries and/or an external +12 Vdc power supply. It features a maintenance-free diaphragm air pump to pull air through the 250 cc tritium chamber, and the air flow is measured internally with a mass-air flow sensor. A second 250 cc chamber is used to provide gamma compensation, allowing operation in higher gamma fields. Other internal sensors measure temperature and ambient pressure and provide compensation for these effects.

The heart of the tritium detection is the sealed electrometer chamber, using the latest low-noise electrometer chip. This electrometer can reliably measure the femtoamperes of current resulting from tritium within the chamber and does not require the user to adjust an offset or zero knob. The pixelated digital display provides feedback on the tritium concentration, as well as showing status on several important conditions: temperature, pressure, power, airflow, chamber bias, and alarm or failure status.

The Model 3101 is easy to use, having only a few simple controls, and can be used while wearing gloves. It has a large easy-to-read display with a backlight control for increasing contrast in low-light conditions. In addition to the tritium level, the display simultaneously shows the user the battery/power condition, the temperature, the pressure, the status condition, and the airflow through the chamber.

The Model 3101 is built for ruggedness and reliability. Two airflow pumps were tested and shown to last over 10,000 hours of continuous use. The Model 3101 shares many of the characteristics and design of the Model 3100, which was built and tested for the U.S. military. Testing was done in accordance with ANSI N42.30, MIL-STD-810G, MIL-STD-461G, MIL-STD-901D, and MIL-STD-1399-300B standards which test instrument operation under various conditions including temperature, blowing rain, salt fog, vibration, mechanical shock, RF susceptibility, and RF emissions. The commercial user of the Model 3101 benefits from this design and testing history.

Features

- No Zero Adjust Control Needed
- Easily Calibrated with ¹³⁷Cs Gamma Range
- Temperature and Altitude Compensation



PEO Detection Page 244 of 461

- "Check Mode" Self-Test Feature Determines Instrument State of Health
- Digital Backlit Display with Status, Airflow Readout, and Diagnostic Information
- Internal Heater Element Purge Mode to Dry Ion Chamber
 Readout in μCi/m³ or MBq/m³

Page 245 of 461 **PEO** Detection

Model 334AB-G Alpha-Beta Particulate Monitor



The Model 334AB-G (a replacement for the Model 334AB) is a lightweight, battery-powered, alpha-beta air monitor that can be used as a portable workplace monitor or a portable CAM (continuous air monitor) for emergency-response assessments. Its design provides workers with an early warning of an airborne release of alpha- or beta-emitting particulates. The instrument can monitor up to two alpha isotopes of interest simultaneously with beta monitoring.

The Model 334AB-G has an internal 7-LPM pump. (An external pump with a higher flow rate is available as an option.) The integrated LCD and touchscreen displays information on instrument status and readings during operation. The estimated dose of the isotope(s) of interest and the instrument status are displayed at all times. A visual/audio alarm stack also indicates instrument status. An ion-implanted silicon detector and 1024-channel multi-channel analyzer feed data to the embedded processor board to perform beta detection and alpha spectral analysis for radon background compensation.



State-of-the-art alpha peak fitting quantifies the alpha and beta counts from radon and thoron progeny. This technique uses the profiles of multiple alpha isotope peaks to create a composite curve which best fits the actual alpha spectrum. Because the individual radon peaks are independently determined, the beta background compensation is impervious to radon equilibrium changes and contributes to low probability of false alarms.

Guard Detector

An internal guard detector provides real-time beta compensation for changing gamma background levels. An adjustable gamma subtraction factor allows for correction of slight differences in beta and guard count rate in a fixed gamma field to produce proper energy response.

Sensitivity and Response Time

The Model 334AB-G's sensitivity varies primarily as a function of the window time. The longer Chronic Window has improved sensitivities over the shorter Acute Window time. Sensitivity is reported in Minimum Detectable Concentration (MDC) in Bq/m³ (DAC) and Minimum Detectable Dose (MDD) in Bq-h/m³ (DAC-h).



PEO Detection Page 246 of 461

Features

- Integrated LCD and Touch Screen Display
- Acute and Chronic Dose, Concentration, and Flow Logging Measurements
- Radon Compensation
- Built-In Gamma Guard Detector
- American or SI Units of Measurement
- 8-Hour Battery Life

PEO Detection Page 247 of 461

Model 334A Alpha Air Monitor



The Model 334A is a compact, lightweight, and portable alpha air monitor designed to function both as a workplace monitor and a Continuous Air Monitor (CAM) for measurements in emergency response situations. Its functionality is enhanced by its splash- and dust-proof enclosure with splash-proof electronics.

Spectral analysis is conducted via a 1024-channel analyzer that feeds data to the embedded processor. Factory configuration provides either special nuclear materials (SNM) or radon progeny measurements of potential alpha energy concentration (PAEC).

Measurements may be taken in both fast-responding (Acute) or high-sensitivity (Chronic) assessments, and report in English or SI units. The Model 334A stores acquired data in comma-separated-variable (.csv) format that is recognized by most spreadsheet and database software. Data may be saved in the instrument's internal memory, or alternately may be written to an SD card for later retrieval and review.

Independent determination of nuclide peaks means they are impervious to radon equilibrium changes, thereby contributing to low probabilities of error and false alarms. Precise fitting of the ²¹⁸Po tail results in excellent sensitivity.

This Model 334A features an integrated LCD and touch screen that displays information on instrument status and readings during operation. The estimated dose of the isotope(s) of interest and instrument status is displayed at all times. A window below may be switched from showing historical readings and battery status, or displaying the current spectrum.

Factory-configurable Radon Mode allows the instrument to monitor potential-alpha-energy-concentration (PAEC) of radon progeny.

Features

- Easy Setup and Use
- Integrated LCD and Touch Screen Display
- English or SI Units of Measurement
- Acute and Chronic Dose Modes
- Significantly Reduced False Alarms Using Peak Shape Fitting Capability
- 8-Hour Battery Life
- Radon Mode Option

W LUDLUM Wana

PEO Detection Page 248 of 461

Model 3100 Portable Tritium in Air Monitor



The Model 3100 Tritium in Air Monitor features ruggedized and flexible operation. It may be powered by either 115 Vac, 50/60 Hz or by rechargeable internal NiMH batteries. It features a maintenance-free diaphragm air pump to pull air through the 250 cc tritium chamber, and the air flow is measured internally with a mass-air flow sensor. A second 250 cc chamber is used to provide gamma compensation, allowing operation in higher gamma fields. Other internal sensors measure temperature and ambient pressure and provide compensation for these effects.



Features

- No Zero Adjust Control Needed
- Easily Calibrated with ¹³⁷Cs Gamma Range
- Temperature and Altitude Compensation
- "Check Mode" Self-Test Feature Determines Instrument State of Health
- Digital Backlit Display with Status, Airflow Readout, and Diagnostic Information
- Purge Mode to Dry Ion Chamber
- Internal Chamber with Replaceable Desiccant
- Passed USA Military Tests Including: MIL-STD-810G, MIL-STD-461G, MIL-STD-901D, MIL-STD-1399-300B
- Readout in $\mu Ci/m^3$ or MBq/m³

The heart of the tritium detection is the sealed electrometer chamber, using the latest low-noise electrometer chip. This electrometer can reliably measure the femtoamperes of current resulting from tritium within the chamber and does not require the user to adjust an offset or zero knob. The pixelated digital display provides feedback on the tritium concentration, as well as showing status on several important conditions: temperature, pressure, power, airflow, chamber bias, and alarm or failure status.

The Model 3100 is easy to use, having only a few simple controls, and can be used while wearing gloves. A clear window allows the user to see the condition of the desiccant in the integrated desiccant chamber. A toggle switch allows the user to put the desiccant chamber in-line to the incoming air. The instrument comes in a rugged hard-shell commercial case with wall-mounting brackets. The Model 3100 has passed USA military testing for RF susceptibility and emission, shock and vibration, temperature and blowing rain, as well as other tests.

PEO Detection Page 249 of 461

Partner SDEC France





SDEC France is a specialized manufacturer of environmental monitoring and laboratory equipment, offering comprehensive solutions for waste and recycling management, environmental monitoring, and laboratory applications. With over

30 years of experience, the company designs and produces high-quality instruments to support professionals in environmental science, agronomy, and radiological safety.

Product offering

AM 3000 N - Air Sampler for Asbestos Diagnosis in Nuclear Environments -NF43-050 version 2021, NF X43-269, NF EN ISO 13137



AM 3000 - Air Sampler for Asbestos Diagnosis - NF43-050 version 2021, NF X43-269, NF EN ISO 13137



Battery Operated Field Electric Vacuum Pump PAV 2000 : For soil sampling



AS 5000 Aerosol & lodine Sampler - SDEC



AS 3000 AEROSOL & IODINE SAMPLER - SDEC



PEO Detection Page 250 of 461





- AUTONOMOUS SAMPLING: The AM 3000N ensures consistent and reliable air sampling without manual intervention.
- HIGH PRECISION: Equipped with a pump automatically regulated by a microcontroller and a mass flow meter for increased accuracy.
- **REMOTE CONTROL**: Controllable remotely via an infrared remote control for user convenience.
- **ROBUST & WATERPROOF**: Stackable device with an IP65 protection rating, resistant to harsh environments.
- PROTECTION AGAINST NUCLEAR CONTAMINATION:
 H13 white glass fiber THE filters at intake and exhaust to
 prevent contamination.
- CERTIFIED COMPLIANCE: Complies with NF43-050 version 2021, NF X43-269, NF EN ISO 13137 standards, ensuring reliability and adherence to standards.



PEO Detection Page 251 of 461



AM 3000 - Air Sampler for Asbestos Diagnosis - NF43-050 version 2021, NF X43-269, NF EN ISO 13137

- AUTONOMOUS SAMPLING: The AM 3000 is an autonomous air sampler, ensuring consistent and reliable sampling without manual intervention.
- **HIGH PRECISION**: Equipped with a pump whose flow rate is automatically regulated by a microcontroller and a mass flow meter.
- **REMOTE CONTROL**: Can be remotely operated using an infrared remote control, enhancing user convenience.
- **ROBUST & WATERPROOF**: The device is robust, stackable, and has an IP65 protection rating, ensuring its durability and resistance to environmental factors.
- **CERTIFIED COMPLIANCE**: Meets the strict requirements of NF43-050, NF X43-269, and NF EN ISO 13137 standards, ensuring its reliability and adherence to industrial norms.



PEO Detection Page 252 of 461

Battery Operated Field Electric Vacuum Pump PAV 2000 : For soil sampling



- **RAPID VACUUM CREATION:** Achieves a vacuum of -750 mbar in less than 15 seconds, significantly speeding up soil sampling.
- HIGH AUTONOMY & PORTABILITY: Offers 5 hours of continuous operation with a lightweight and durable aluminum design for convenience in the field.
- INTEGRATED SMART CHARGING SYSTEM: Includes a maintenance-free 12V, 5A/hour battery with a smart charger for easy recharging.
- **PRECISION & PROTECTION:** Equipped with an accurate Bourdon-type manometer and a Gore-Tex filter to guard against water ingress.
- **COMPACT & EASY TO USE:** Compact dimensions (200mm x 130mm x 240mm) with a simple three-position operational switch.



PEO Detection Page 253 of 461

AS 5000 Aerosol & Iodine Sampler - SDEC



The AS 5000 Aerosol & Iodine Sampler (SDEC) is a stationary equipment made for the sampling of aerosols and airborne iodine at high flow on paper filters and cartridges. It is particularly adapted for continuous sampling in stacks according to ISO 2889 standard.



AS 5000 Aerosol & Iodine Sampler features:

- automatic air flow regulation up to 100 liters per minute (6 Nm3/h)
- mass flow-meter with pressure and temperature compensation : display of the air flow in Nm3
- sampling compartment and electrical separated
- detection of filter clogging or accidental leakages
- safety: sampling head access door with key lock, differential circuit breaker
- alarm report via relay output, (optional Ethernet output)
- sampling parameters settings and clogging level threshold protected by access code
- stationary installation (wall mount) or mobile installation on trolley

Read more about the AS 5000 Aerosol & Iodine Sampler on the SDEC website

PEO Detection Page 254 of 461

AS 3000 AEROSOL & IODINE SAMPLER - SDEC



The AS 3000 Aerosol & Iodine Sampler (SDEC) has been designed to make sampling of aerosols and iodine on filter papers and/or carbon cartridges. It has many technological innovations like the automatic regulation of air flow and the data report on USB key.



AS 3000 Aerosol & Iodine Sampler features:

- automatic regulation of air flow from 10 to 50 LPM
- diaphragm pump (no maintenance)
- compatible with all paper filters and cartridges
- automatic recognition of filter paper or cartridge per drive scanner option
- independent pump (easy dismantling in case of contamination)
- installation of the filter holder by quick system on horizontal or vertical axis
- operating on power supply or battery
- · waterproof keyboard

Read more about the AS 3000 Aerosol & Iodine Sampler on the SDEC website

PEO Detection Page 255 of 461

Partner GEORADIS s.r.o.



GEORADIS

Georadis s.r.o. is a specialized manufacturer of advanced radiation detection and monitoring instruments, offering a comprehensive suite of solutions for field and laboratory applications. Their product portfolio includes handheld monitors, portable isotope identifiers, environmental monitoring devices, and laboratory equipment, all designed to meet the rigorous demands of professionals in sectors such as environmental monitoring, industrial safety, and public security.

Product offering



PEO Detection Page 256 of 461

GT-40 Gamma Ray Spectrometer



A multifunctional gamma ray spectrometer for rapid determination of activities of gamma emitters in field surveys or samplings. A wide range of applications in the field of monitoring heterogeneous substances, contamination of sites, buildings, objects, water and food. Application in geology in field surveys for raw material sources. Proven performance in harsh environment applications. Survey data is stored in the memory, including the GPS coordinates. Up to 6 different calibrations.

Properties

Portable digital gamma ray spectrometer with a built-in computer for complex analysis of the measured data. Bluetooth, Wi-Fi and GPS are an added advantage. Transreflective colour display.

Use

Applicable wherever it is necessary to quickly and accurately determine the activities/content of gamma emitters. Suitable for field survey measurements, but also to be incorporated into shielding.

Modification

The GT-40 series is provided with a NaI/TI scintillator with a 3" base diameter and 3" height. A GT-40S model is also manufactured, which is fitted with either a NaI/TI or BGO detector with a 2" base diameter and 2" height at the customer's request. The GT-40S model has a built-in 1 cm thick Pb collimator. The collimator is easily removable.

Specification

Two basic working modes: Survey, for terrain scanning, and Assay, for determining concentrations of precalibrated radionuclides, i.e. components. Energy calibration of the analyzer is carried out continuously throughout the operating time, and only natural background sources are used for the set-up. Monitoring and analysis results are displayed on a color graphic display in a well-arranged manner. All acquired data is stored in the unit's memory and can be exported to other devices via USB, Wi-Fi or Bluetooth. Field observations can be recorded and stored along with each measurement using a built-in voice recorder.

Alternatives - Options - Special applications



PEO Detection Page 257 of 461

Alternative models for special applications have been designed. GT-40-B profits of BGO detector 3" base diameter and 3" height. GT-40 – L is a model with extended length of body for scanning of small spots on earth surface. Support for high precision external GPS, build in calibration and protocol for fast core logging.

PEO Detection Page 258 of 461

Partner Centronic Nuclear





Centronic is a UK-based leader in radiation detection technologies, offering a range of detectors tailored for environmental monitoring in nuclear and industrial settings. Their expertise spans over 70 years, providing reliable solutions for monitoring radiation levels in various environments.

Product offering





PEO Detection Page 259 of 461



Alpha, Beta & Gamma Detectors - Centronic



The Alpha, Beta & Gamma Detectors (Centronic) are used for the detection of radiation at low dose rates. This range of mica-window tubes is used for monitoring all types of radiation in a wide variety of environments.



Alpha, Beta & Gamma Detectors features:

- circuitry simple
- robust build
- available with compensating filter

Contact our product specialist or download the datasheet below.

PEO Detection Page 260 of 461

Beta & Gamma Detectors - Centronic



The Beta & Gamma Detectors (Centronic) are used for the detection of radiation at low, intermediate and high dose rates. These types have a wide range of applications e.g. personal dosimetry, military and defence equipments.



Beta & Gamma Detectors features:

- robust construction
- simple circuitry

Contact our product specialist or download the datasheet below.

PEO Detection Page 261 of 461

Partner Ultra Electronics



Ultra Electronics acquired Lab Impex Systems on July 17th, 2014. This is a known specialized manufacturer in radiation detection solutions and services for use in the global nuclear industry. Founded in 1976, Laboratory Impex Systems Ltd (LIS) is a leader in designing, developing and manufacturing health physics and radiation protection measurement instrumentation focusing on stack monitoring.

Product offering



PEO Detection Page 262 of 461

CMS Gamma - Lab Impex



The CMS Gamma (Lab Impex) is an advanced continuous monitoring station for the measurement of gamma radiation (dose-rate of activity) in the environment or workplace. The system provides essential, reliable information to personnel when radiation levels are above normal. The versatile unit can provide interlock control in hot areas such as fuel stores, caves, glove boxes and hot cells as required.



CMS Gamma features:

- installed, transportable or trolley mounted
- internal back up battery which enables full operation for up to 1 hour in the event of mains failure
- the detector arrangement can be installed at distances of up to 1000m (3,280ft) from the CMS station
- wide range of detectors available

Read more about the CMS Gamma on the Lab Impex website

PEO Detection Page 263 of 461

PORTABLE HPGE





Partner PHDS





PHDS Co. specializes in the development of portable High-Purity Germanium (HPGe) gamma-ray detectors, providing high-resolution spectroscopy and imaging capabilities for applications in nuclear security, emergency response,

and scientific research. Their instruments are designed to offer precise isotope identification and quantification in field-deployable formats.

Product offering











PEO Detection Page 265 of 461

Radiation Detection > Portable HPGE

GeGI: Imaging HPGe Detector



- HPGe gamma-ray spectroscopy and isotope identification
- Real-time exposure rate calculation
- Fully capable of imaging Special Nuclear Materials (235 U and 239 Pu)
- Fast cool-down to operating temperature
- Long-life mechanical cooler
- Compact and hand-portable
- Hot-swappable batteries for continuous field operation
- User-friendly tablet operation
- Reachback File: ANSI N42.42 format



PEO Detection Page 266 of 461

Radiation Detection > Portable HPGE

NP Radiochemistry Imager



The NP Imager is specifically designed to measure the dynamics of radiochemical separation processes in real time. Developed under a Small Business Innovation Research (SBIR) grant from the Department of Energy Office of Nuclear Physics (NP), the NP Imager focuses on the unique needs of radiochemists and technicians separating radioisotopes for radio-pharmaceuticals and other applications.

The NP Imager monitors the locations and distributions of multiple isotopes over time, allowing the radiochemist and technician to monitor separation processes in real time. In the process shown here, NP Imager measured Lu-177 and Yb-175 separation on a column over the course of 3 ½ hours using 10-minute exposures. Note that it's clear when the Yb-175 has been removed from the column, allowing the radiochemist to know when to collect the desired Lu-177.



- Radiopharmaceutical Process Monitoring
- Radiochemical Separation Research and Development
- Nuclear Physics Isotope Production
- Nuclear Materials Management
- Waste Management
- Decontamination and Decommissioning



PEO Detection Page 267 of 461

Fulcrum: HPGe Detector





Overview:

The Fulcrum is a next-generation HPGe gamma ray detector engineered for rapid, accurate isotope identification in a compact, field-ready design. Weighing just 8 lbs, it is the lightest and most portable detector of its kind, making it ideal for mobile and emergency response scenarios. Equipped with the user-friendly PHDS OMNI software, the Fulcrum offers real-time exposure rate calculation and intuitive, color-coded isotope identification—all accessible through a simple touchscreen interface. With fast cool-down, wireless capability, and extended field operation features, the Fulcrum sets a new standard for high-performance gamma spectroscopy in any environment.

Features:

- HPGe gamma-ray spectroscopy and isotope identification
- Ultra-fast cool-down to operating temperature (2 hours)
- Most compact and lightweight HPGe detector (8 lbs)
- Relative efficiency: 12% at 1333 keV
- Real-time exposure rate calculation
- · Compact, hand-portable design
- User-friendly Android app interface
- Wireless capability for remote operation
- Long-life mechanical cooler
- Bridge battery option for uninterrupted field use
- User-defined timed data acquisition with auto file save
- Reachback file output in ANSI N42.42 format



PEO Detection Page 268 of 461

Radiation Detection > Portable HPGE

Fulcrum-40h: 40% HPGe Detector



- HPGe gamma-ray spectroscopy and isotope identification
- Relative efficiency of 40% (at 1332 keV)
- Fast cool-down to operating temperature (5 hours)
- Long-life mechanical cooler
- ISOTAC activity calculator
- Configurable with 1 or 2 onboard batteries and optional neutron detector
- Real-time exposure rate calculation
- User-specified timed data acquisition and auto file save
- Reachback File: ANSI N42.42 format



PEO Detection Page 269 of 461

Radiation Detection > Portable HPGE

LoPro HPGe Detector



The LoPro is a lightweight, low-profile HPGe gamma ray detector used by U.S. military operators around the world. The LoPro provides unmatched field reliability and gamma-ray spectroscopy for mission-critical applications. The unique form factor allows inconspicuous measurements for missions in which discretion is a must, while not sacrificing the spectroscopic performance expected from an HPGe detector.

Features

HPGe gamma-ray spectroscopy and isotope identification

Fast cool-down to operating temperature (3

hours)

format

Integrated GADRAS isotope identification 12% (at 1333 keV) rate calculation

User-friendly Android Reachback File: app, including TAK compatibility

Long battery life (up Wireless capable to 15 hours per battery)

ANSI N42.42

for remote

operation

Compact and handportable (8 lbs)

Relative efficiency: Real-time exposure

Long-life mechanical cooler

User-specified timed data acquisition and

auto file save



PEO Detection Page 270 of 461

LABORATORY EQUIPMENT





Partner Ludlum Measurements Inc.





Ludlum Measurements, Inc. is a trusted global provider of radiation detection and monitoring instruments, offering rugged, accurate solutions for personnel safety, environmental protection, and security screening. Since 1962, their

equipment has been used worldwide in applications ranging from nuclear power and emergency response to border protection and critical infrastructure monitoring.

Product offering

Model 3030E Alpha-Beta Scaler



Model 2000 General Purpose Scaler



Model 2100-1 Sample Counter



Model 2200 Scaler-Ratemeter



Model 2100 Conveyorized Sample Counter



Model 3030E with 43-10-1 Alpha-Beta Sample Counter



Model 3030-2 Simultaneous Alpha-Beta Sample Counter



Model 3030 Alpha-Beta Sample Counter



Model 3030P Alpha-Beta Sample Counter



Probes (Ludlum)



PEO Detection Page 272 of 461

Model 3030E Alpha-Beta Scaler



- Dual Channel Scaler with Independent Readouts
- Connects to External Sample Head/Detector
- CPM & DPM Modes
- Background Subtraction
- Alpha/Beta Alarms
- QC Check
- 8 Hour Battery Operation
- Real Time Clock
- RS-232 Interface
- Includes PC Software

The Model 3030E is a dual channel, scaler-type, sample counter electronics package that will accommodate many detector inputs from external sample head/detectors. This design represents a significant improvement over older analog type scalers by providing greater utility and functionality.

The system incorporates independent backlit LCD readouts to support discriminated alpha and beta sample counting. The system features background subtraction, crosstalk correction, separate alpha/beta alarms, cpm/dpm operating modes, and a pre-scripted QC function with an automatic reminder timer.

The instrument supports both 110 and 220 Vac operation and includes a trickle-charged gel-cell battery for portable offsite use up to eight hours. A wide-range, high-voltage power supply supports virtually any detector.

Status indicators located along the front panel inform the operator when another QC check is required, if the detector is nonfunctional, if it is operating in DPM or CPM mode, and if either an alpha or beta alarm setpoint has been exceeded. The count time is selected via a front panel rotary switch that enables count times ranging from 0.1 to 60 minutes or some other prescribed value as set up via a link to a PC. Other controls include a start count button, audio volume rotary adjustment, and instrument on/off switch.

An RS-232 output from the rear panel supports connection to either a printer or PC. Included in the price is PC control software, which is a Windows application that supports setup of the system, as well as collecting and logging all count results from the 3030E.



PEO Detection Page 273 of 461

Model 2000 General Purpose Scaler



- General Purpose Scaler
- Supports Wide Range of External Detectors
- 95 to 250 Vac Power Input
- Portable Battery Operation
- RS-232 Interface to Printer or PC

The Model 2000 is a general purpose scaler typically used for counting samples. Rugged design and construction accommodates both benchtop and portable applications. The wide-ranging AC power supply and internal batteries are capable of powering the instrument upwards of 120 hours. The Model 2000 supports GM, proportional, and scintillator type detectors, and provides fine adjustment controls for setting the high-voltage and threshold settings.

The scaler reading is presented on a digital, six-digit readout LED that can be set to count from 0.1 to 999 minutes via a front-panel dip switch. An internal switch facilitates counting in seconds rather than minutes, if desired. Other front-panel controls include a start-count button, an HV/Bat switch for displaying the current value on the accompanying analog meter, and a three-way switch for selecting Power Off, Battery, or Line Power.

An RS-232 port on the rear panel allows connection to a PC or printer as set by a rear mounted switch (a RS-232 to USB adapter cable is included). When connected to a PC, the counting may be controlled and results recorded via application software.



PEO Detection Page 274 of 461

Model 2100-1 Sample Counter



The Model 2100-1 manually operated sample counting system processes sample steel slugs to determine whether any radioactive impurities exist. The gamma radiation counting system is a table-mounted, fully integrated design that includes a gamma detector, sample tray, and controller.

The counting electronics incorporates two channels to distinguish between low and high energy gamma isotopes. All parameters, such as alarm point and count time are useradjustable from the front panel LCD touch screen via a simple menu selection.

Measurement results for each sample are displayed on the backlit LCD. An Ethernet port reports all results and system status in real time for remote data logging and alarm annunciation. Visual and audible alarms are annunciated via the system's LCD and rear panel mounted buzzer respectively. A built-in relay provides a method for driving an external horn/strobe (available as an option).

One rear panel mounted USB port enables connection to either a keyboard or barcode reader device for the purpose of entering sample IDs.

Features

- High Sensitivity Gamma Detector
- Separate High & Low Gamma Energy Sampling
- User-Adjustable Parameters
- Color LCD Touch Screen
- Ethernet Connectivity
- Remote Alarm Output
- USB Ports for ID Input Devices



PEO Detection Page 275 of 461

Model 2200 Scaler-Ratemeter



- General Purpose Scaler/Ratemeter
- Single Channel Analyzer
- Supports Wide Range of External Detectors
- 95 to 250 Vac Power Input
- Portable Battery Operation
- RS-232 Interface to Printer or PC

The Model 2200 is a general purpose scaler with an accompanying ratemeter, and is typically used for counting samples. Its rugged design and construction allow both benchtop and portable applications. The wide-ranging AC power supply and internal batteries are capable of powering the instrument upwards of 120 hours. The Model 2200 supports GM, proportional, and scintillator-type detectors, and provides fine adjustment controls for setting the high-voltage and threshold settings.

An adjustable discriminator and an adjustable window allow the user to count pulses within a user specified energy range. This portable unit can be powered by wall current or by four "D" cell batteries. The latter allows for continued operations during power interruptions. An optional printer (Model 4167-386) is available for hard copy archival of wipe test results.

The Ludlum Model 2200 Scaler/Ratemeter is the ideal economic solution for routine sample counting, single channel analyzing and routine radiopharmaceutical related procedures, when used with the <u>Model 243</u> well scintillator (Nal) detector. The well counter's 4π geometry and 1.3 cm (0.5 in.) shielding provides excellent sensitivity to higher energy isotopes like ¹³¹I.



PEO Detection Page 276 of 461

Model 2100 Conveyorized Sample Counter



The Model 2100 automated sample counting system processes sample steel slugs to determine whether any radioactive impurities exist. The gamma radiation counting system is a table-mounted, fully integrated design that includes a gamma detector, sample conveyor, and controller to facilitate automated processing.

Once the sample has been positioned on the conveyor, an infrared sensor automatically initiates conveyance of the sample into the lead shielded detector where it is counted for a predetermined time. Once the count is completed, the conveyor again advances until the sample drops into a discard container.

The counting electronics incorporates two channels to distinguish between low and high energy gamma isotopes. All parameters, such as alarm point and count time are useradjustable from the front panel LCD touch screen via a simple menu selection.

Measurement results for each sample are displayed on the backlit LCD. An Ethernet port reports all results and system status in real time for remote data logging and alarm annunciation. Visual and audible alarms are annunciated via the system's LCD and rear panel mounted buzzer respectively. A built-in relay provides a method for driving an external horn/strobe (available as an option).

One rear panel mounted USB port enables connection to either a keyboard or barcode reader device for the purpose of entering sample IDs.



PEO Detection Page 277 of 461

Model 3030E with 43-10-1 Alpha-Beta Sample Counter



- Alpha-Beta Dual Channel Sample Counter
- Simultaneous Alpha & Beta Counting
- 5.1 cm (2 in.) Diameter Sample Tray
- Independent Readouts
- CPM & DPM Modes
- Background Subtraction
- Alpha/Beta Alarms
- QC Check
- 8-Hour Battery Operation
- Real Time Clock
- RS-232 Interface
- Includes PC Software

This system joins Ludlum's Model 3030E dual channel scaler and the Model 43-10-1 dual phosphor detector with a 5.1 cm (2 in.) diameter sample tray to produce a complete alpha beta sample counting system. The 3030E electronics incorporates independent backlit LCD readouts to support discriminated alpha and beta sample counting. The system features background subtraction, crosstalk correction, separate alpha/beta alarms, CPM/DPM operating modes, and a prescripted QC function with automatic reminder timer.

The instrument supports both 110 and 220 Vac operation and includes a trickle-charged gel-cell battery for portable offsite use for up to eight hours. A wide-range high-voltage power supply supports virtually any detector. Status indicators located along the front panel inform the operator when another QC check is required, if the detector is nonfunctional, if it is operating in DPM or CPM mode, and if either an alpha or beta alarm setpoint has been exceeded.



PEO Detection Page 278 of 461

Model 3030-2 Simultaneous Alpha-Beta Sample Counter



- Fully Integrated Alpha-Beta Sample Counter
- Simultaneous Alpha and Beta Counting
- Shielded 5.1 cm (2 in.) Diameter Sample Tray
- Independent Readouts
- CPM, Bq, & CPS Modes
- Background Subtraction
- Alpha/Beta Alarms
- QC Check
- 8 Hour Battery Operation
- Real Time Clock
- RS-232 Interface

The Model 3030-2 Simultaneous Alpha-Beta Sample Counter is a dual-channel counter designed for simultaneous alpha and beta sample measurement.

The counts per minute (CPM), Becquerel (Bq), or counts per second (CPS) modes may be enabled to allow the count to be automatically, and in real time, in CPM, Bq, or CPS. While in Bq and CPS display modes the display will show the count with two decimal places.

The counter incorporates an internally housed ZnS(Ag) plastic scintillator detector with shielded 5.1 cm (2 in.) diameter stainless steel sample tray. This system supplies independent backlit LCD readouts to support alpha and beta sample counting.



PEO Detection Page 279 of 461

Model 3030 Alpha-Beta Sample Counter



- Fully Integrated Alpha-Beta Sample Counter
- Simultaneous Alpha and Beta Counting
- Shielded 5.1 cm (2 in.) Diameter Sample Tray
- Independent Readouts
- CPM & DPM Modes
- Background Subtraction
- Alpha/Beta Alarms
- QC Check
- 8 Hour Battery Operation
- Real Time Clock
- RS-232 Interface
- Includes PC Software

The Model 3030 Alpha-Beta Sample Counter incorporates an internally housed ZnS(Ag) plastic scintillator detector with shielded 5.1 cm (2 in.) diameter stainless steel sample tray into the Ludlum Model 3030 Scaler. This combined system supplies independent backlit LCD readouts to support discriminated alpha and beta sample counting. Key features include background subtraction, crosstalk correction, separate alpha/beta alarms, cpm/dpm operating modes, and a prescripted QC function with automatic reminder timer.

The instrument supports both 110 and 220 Vac operation, and includes a trickle charged gel-cell battery for portable offsite use for up to eight hours. A wide-range high voltage power supply supports virtually any detector. Status indicators located along the front panel inform the operator when a QC check is required, if the detector is non-functional, if it is operating in dpm or cpm mode, and if either an alpha or beta alarm setpoint has been exceeded.

The count time is selected via a front-panel rotary switch that enables count times ranging from 0.1 to 60 minutes, or some other prescribed value as set up via a link to a PC. Other controls include a start count button, audio volume rotary adjustment, and instrument on/off switch. An RS-232 output from the rear panel supports connection to either a printer or PC. Included in the price is PC-control software, which is a Windows application that supports setup of the system, as well as collecting and logging all count results from the 3030.



PEO Detection Page 280 of 461

Model 3030P Alpha-Beta Sample Counter



- Fully Integrated Alpha-Beta Sample Counter
- Simultaneous Alpha and Beta Counting
- Employs PIPS™ Detector
- Ultra Low A/B Crossover & Backgrounds
- Adjustable Alpha Window for Radon Rejection
- Data Logging with USB Connectivity
- 48-Hour Battery Operation
- Includes PC Software

The 3030P with a solid state PIPS™ detector facilitates efficient and cost-effective, simultaneous alpha and beta sample counting for air filters, smears, and swipes. This instrument meets the newer Electric Power Research Institute (EPRI) guideline for detecting a few disintegrations per minute of alpha amidst several hundred-thousand disintegrations per minute beta background. All data are automatically logged and easily retrievable via a USB connection. The light weight and battery operability afford convenient use in the field. With the optional detector shield, the Model 3030P can be used virtually anywhere.

The instrument comes with PC control software that allows the user to set all parameters, view QC check settings, change alpha and beta window and threshold values, perform MDA (Minimum Detectable Activity), and retrieve the sample data saved to the logging memory.



PEO Detection Page 281 of 461

Probes (Ludlum)



For any application Ludlum offers a wide range of probes. The probes can be used with all Ludlum models which require an external detector.



Ludlum models with external detector a.o.:

- Model 3000 Digital Survey Meter
- Model 3001 Multi-Detector Survey Meter
- Model 375 Area Monitor Controller
- Model 375/9 Digital Area Monitor
- Model 30 Digital Survey Meter

PEO Detection Page 282 of 461

Partner SDEC France





SDEC France is a specialized manufacturer of environmental monitoring and laboratory equipment, offering comprehensive solutions for waste and recycling management, environmental monitoring, and laboratory applications. With over

30 years of experience, the company designs and produces high-quality instruments to support professionals in environmental science, agronomy, and radiological safety.

Product offering

EDP 9002 - Double Mast Electrodeposition Equipment



PRC 14: Maintenance Pump - For Cleaning Pipes for HAGUE 7000 CARBON 14 Bubbler



MARC 7000 - Tritium Bubbler: Atmospheric Monitoring System with 4 Pots (With Oven)



Aerosol and Iodine Sampling Heads



AS 5000 Portable
Aerosol & Iodine
Sampler DPRC Type
for Air Flow
Regulation Maintenance-Free
Design



EDP 7000 -Electrodeposition Equipment -Monostation



DPM 7001 Liquid Scintillation Counter -SDEC




H3R 7000 Airborne Tritium Condenser -SDEC



PEO Detection Page 283 of 461





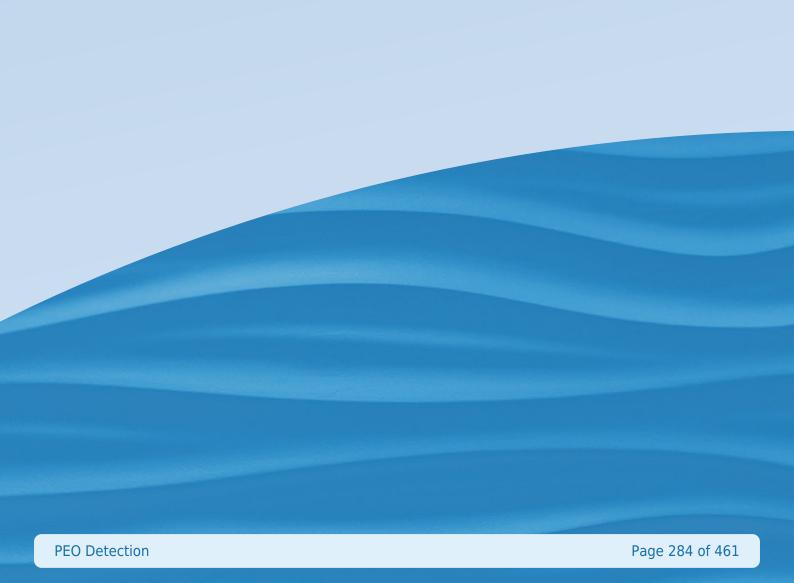

EDP 9002 - Double Mast Electrodeposition Equipment



- SPACE-SAVING & ECONOMICAL DESIGN: Two
 measurement stations on a single base, ideal for
 laboratories with limited workspace. The EDP 9002 is more
 affordable than purchasing two EDP 7000 devices.
- **TIME EFFICIENCY:** Significant time savings when conducting multiple analyses.
- **SYNTHETIC MATERIALS:** The EDP is made solely from synthetic materials that perfectly resist the sometimes highly corrosive environments of research laboratories, thus ensuring a very long lifespan for the device.
- **HIGH PRECISION:** Ensures optimal trapping efficiency with regulated and constant direct current. The EDP is equipped with a polarity reverser for electrochemical stripping of the stainless steel pellet intended to receive the deposit, thereby ensuring perfect purity of the support.
- **COOLING SYSTEM:** Features high-flow air convection, preventing solution evaporation thanks to a solution cooling system with high-flow air convection.
- **VERSATILE SETTINGS:** Adjust the current intensity up to 5 Amperes and the electrode rotation speed with precision potentiometers and three sizes for solution containers.
- **DIGITAL TIMER:** Set the exact duration of electrodeposition with a digital display timer and an audible alarm
- **EASY TO USE:** Quick assembly/disassembly of bottles and an internal container for accidental spills. Easy user maintenance of the device. Almost instantaneous assembly/disassembly of bottles.
- COLLABORATION WITH COGEMA: Designed in association with the leading French nuclear institute.



PEO Detection Page 285 of 461

PRC 14: Maintenance Pump - For Cleaning Pipes for HAGUE 7000 CARBON 14 Bubbler



- **RELIABILITY:** PRC 14 self-priming centrifugal pump with a 150-hour motor life, operates continuously without cooling.
- VERSATILITY: Specifically designed for HAGUE 7000 bubblers using a diluted acid solution. This operation dissolves and evacuates the solid deposits that have accumulated inside the Ø 3 mm stainless steel pipes and in the drilled block, mainly between pots 1 and 2. It is ideal for various applications, ensuring efficient capture of atmospheric 14C.
- **DURABLE CONSTRUCTION:** Equipped with an ABS impeller, stainless steel motor shaft, and nitrile seal, ensuring longevity and resilience with a constant flow rate of 10l/h.
- ENERGY EFFICIENCY: Maximum consumption of 60 Watts, operates ideally at 12-15 volts DC, compatible with 12V battery.
- **ECONOMICAL SOLUTION:** Offers reliability and performance at an attractive price.



PEO Detection Page 286 of 461

MARC 7000 - Tritium Bubbler: Atmospheric Monitoring System with 4 Pots (With Oven)



- **EFFICIENCY:** The MARC 7000 monitors atmospheric tritium, capturing vapor and gas, with oxidation in an oven.
- **PERFORMANCE:** 99% HTO trapping efficiency and 98% oven conversion efficiency for precise tritium monitoring.
- **INTEGRATED ADVANCED FUNCTIONS:** Offers adjustable airflow, real-time display of various parameters, automatic regulation, and default data storage. Designed for user-friendly operation and accurate readings.
- **PERFORMANCE:** Automatic air flow regulation, durable diaphragm pump, and 316L stainless steel circuit.
- INTEGRATED ADVANCED FUNCTIONS: Adjustable air flow, automatic regulation, real-time display, and anomaly storage.
- OPTIONS FOR ENHANCED FUNCTIONALITY: Cooling circuit, Ethernet connectivity, and alarms.
- **VERSATILE APPLICATIONS:** Suitable for the nuclear industry, research centers, waste storage, and laboratories.
- SUPPLIER CONFIDENCE: Officially supplied to major organizations such as IRSN, the French Navy, EDF, ANDRA, CEA, and internationally to IAEA and various nuclear power plants.
- CERTIFICATION: NF ISO 20045 & NF ISO 20041-1



PEO Detection Page 287 of 461

Aerosol and Iodine Sampling Heads



These holders are used for sampling aerosols and volatile compounds on filter paper and cartridge(s). They can be used for ambient sampling or connected to a line (e.g., type DPRC). They are made of anodised aluminium or stainless steel (on request) for various diameters of filter paper and cartridge(s):



PEO Detection Page 288 of 461

AS 5000 Portable Aerosol & Iodine Sampler DPRC Type for Air Flow Regulation - Maintenance-Free Design



- HIGH-QUALITY SAMPLING: The AS 5000 excels in aerosol and iodine sampling, fully compliant with NF ISO 2889 standards.
- **ADJUSTABLE AIR FLOW:** Microprocessor for airflow setting from 30 to 100 liters/minute, customizable options.
- **EASY FILTER HANDLING:** TPHP head for easy installation and retrieval of filters, without interrupting the air circuit.
- **EASY DATA TRANSFER:** Transmits data via Ethernet, an available option.
- PRECISE MONITORING: Tracks sampled air volume and alerts for clogging and leaks, with audible and written reports.
- CERTIFICATION: NF ISO 2889



PEO Detection Page 289 of 461

EDP 7000 - Electrodeposition Equipment - Monostation



- **SYNTHETIC MATERIALS:** Made from synthetic materials resistant to the corrosive environments of laboratories, ensuring longevity of the EDP.
- **HIGH PRECISION:** Ensures optimal trapping efficiency with a regulated and constant direct current. The EDP is equipped with a polarity reverser for electrochemical stripping of the stainless steel pellet intended to receive the deposit, thereby ensuring perfect purity of the support.
- **COOLING SYSTEM:** High-flow air convection to prevent solution evaporation, thanks to a cooling ventilation system.
- **VERSATILE SETTINGS:** Precise settings for current intensity up to 5 Amperes and electrode rotation speed.
- **DIGITAL TIMER:** Timer with digital display and audible alarm for exact duration of electrodeposition.
- **INTUITIVE USE:** Quick installation of bottles, internal container for spills, easy maintenance.
- COLLABORATION WITH COGEMA: Designed in partnership with COGEMA, a leading French nuclear institute.



PEO Detection Page 290 of 461

DPM 7001 Liquid Scintillation Counter - SDEC



The DPM 7001 Liquid Scintillation Counter (SDEC) is a mobile liquid scintillation counter equipped with two photomultipliers, giving it a high counting efficiency and low background noise. It is specially designed for the counting of tritium and carbone-14. Due to its small size and its light weight (16kg), it can be transported easily on monitoring sites for quick measurements.



DPM 7001 Liquid Scintillation Counter features:

- high counting efficiency (H3 > 37%, C14 > 94%)
- low background noise (< 40 CPM)
- light weight : 16 kg
- control and reading on LCD display or on PC (optional software)
- data export in excel format
- · two counting channels for two simultaneous countings

Read more about the DPM 7001 Liquid Scintillation Counter on the SDEC website

PEO Detection Page 291 of 461

H3R 7000 Airborne Tritium Condenser - SDEC



The H3R 7000 Airborne Tritium Condenser (SDEC) is an innovative instrument in the field of Tritium in air sampling. It collects samples of Tritium in its vapor form and produces results in less than 40 minutes. The sample obtained can be measured down to a detection limit of 0.01 Bq/m3 by deferred measurement using liquid scintillation.



H3R 7000 Airborne Tritium Condenser features:

- · quick start mode
- measurement and calculation in real time of the absolute humidity in ambient air in g/m3
- automatic calculation of trapping time depending on the required water quantitya
- automatic drying under high temperature of the trapping circuit to avoid a crossed contamination
- selection of the drying time
- USB output : data recuperation on USB key
- thermic printer integrated : printing of data on sticker to place on to sample vial

Read more about the H3R 7000 Airborne Tritium Condenser on the SDEC website

PEO Detection Page 292 of 461

Single Mast Electrodeposition Equipment - EDP 7000 - SDEC



The measure of radio-isotopes is used in nuclear medicine to control and follow the contamination level of a patient who has manipuled radio-isotopes. Usally when measuring a radio-isotope, the first thing to do is to trap it and make it deposit on a support.



The Single Mast Electrodeposition Equipment – EDP 7000 system is the most efficient principle for trapping a radio-element in liquid solution. This principle allow to deposit the radio-isotopes contained in a solution onto a metallic plate. To measure the quantity of radio-element trapped, the metallic plate is afterwards placed into a suitable machine (spectrometer or other one).

single mast electrodeposition equipment - EDP 7000 features:

- synthetic materials.
- temperature control of the solution.
- three sizes of solution containers.
- quick screw/unscrew.
- easy maintenance by operator.
- reverse polarity switch.
- independent timer.

Read more about the Single Mast Electrodeposition Equipment on the SDEC website

PEO Detection Page 293 of 461

Tritium sampler 4 vials MARC 7000 - SDEC



The Tritium sampler 4 vials (MARC 7000) equipment is designed to sample the tritium which is contained in a volume of air (gas H3, tritiated water HTO or organically combined). Tritiated water vapor is trapped in the first two feeding bottles by means of the bubbling principle. To trap the tritium which is combined to organic materials, an oxidation reaction is created in the oven. A catalyser is used to lower the combustion level. This causes tritium to react chemically to form tritiated water vapor which is trapped in feeding bottles n°3 & 4. After a certain time, the tritiated water contained in the bottles is measured in a laboratory. The quantity of tritium measured is related to the volume of air which has passed through the equipment.



Tritium sampler 4 vials features:

- excellent trapping efficiency (close to 99%)
- cooling system to increase sampling length (option)
- good price
- constant evolution of the product
- easy to use
- connectable to all sampling lines

Read more about the Tritium sampler 4 vials (MARC 7000) on the SDEC website


PEO Detection Page 294 of 461

Partner Spectrum Techniques



Spectrum Techniques Spectrum Techniques is a leading provider of radiation detection and measurement solutions, specializing in laboratory equipment and radioactive sources. Their offerings include a range of instruments and detectors designed to support educational, research, and industrial applications.

Product offering

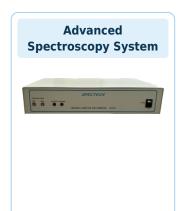





PEO Detection Page 295 of 461

Advanced Spectroscopy System



The Advanced Spectroscopy System, your comprehensive solution for advanced nuclear experimentation and analysis.

Sophisticated Capabilities: Our cutting-edge systems are engineered to meet the demands of diverse applications, from academic research and industrial quality control to environmental monitoring and nuclear medicine. They empower users with the tools needed to delve deep into the intricacies of radiation spectroscopy.

Tailored Solutions: Offering a range of models and configurations, these systems are highly customizable to align perfectly with your specific requirements. Whether you need energy resolution, peak analysis, or nuclide identification, our systems are designed to adapt.

Superior Detector Technology: At the heart of our spectroscopy systems lies advanced detector technology, delivering unparalleled sensitivity and accuracy. From scintillation detectors to high-purity germanium detectors, our instruments are optimized for peak performance.

User-Friendly Interface: Navigating the complexities of radiation analysis has never been easier. Our intuitive software interfaces simplify data acquisition and analysis, allowing users of all skill levels to achieve precise results.

Reliability and Support: Backed by Spectrum Techniques' decades of expertise, these systems are built for longevity and backed by top-notch technical support. We're committed to ensuring your success in radiation spectroscopy.

Elevate your research, enhance your quality control, and make breakthroughs in nuclear science with Spectrum Techniques' Advanced Spectroscopy Systems. Explore the limitless possibilities today.

The System is built around the UCS-30 and a $1.5'' \times 1.5''$ NaI(TI) detector; it is designed for conducting a wide selection of spectroscopy experiments.



PEO Detection Page 296 of 461

SCINTILLATION WELL COUNTING SYSTEM



The Wipe System – a state-of-the-art solution for the precise and efficient collection of radioactive contamination.

Effortless Contamination Detection: Our Wipe System is designed to simplify and enhance the process of identifying and quantifying radioactive contamination. With meticulous attention to detail, it enables you to maintain the highest standards of safety and environmental protection.

Comprehensive Solution: This system comprises userfriendly software and specialized wiping materials, ensuring a comprehensive approach to contamination monitoring. It empowers users across various industries, including nuclear facilities, healthcare, and environmental laboratories.

Accurate and Reliable: Spectrum Techniques' Wipe System is built on cutting-edge technology, offering unparalleled accuracy and reliability. It allows you to confidently detect and measure radioactive contaminants, safeguarding your personnel and the environment.

Customizable for Your Needs: We understand that different applications have unique requirements. Our Wipe System is customizable to meet your specific needs, offering flexibility in terms of sample size, detection thresholds, and reporting options.

Exceptional Support: As with all Spectrum Techniques products, our Wipe System is backed by a team of experts dedicated to ensuring your success. Our technical support and training resources are available to assist you every step of the way.

Upgrade your contamination monitoring process with Spectrum Techniques' Wipe System. Stay compliant, protect your environment, and mitigate risks with precision and confidence.



PEO Detection Page 297 of 461

Intermediate Nuclear Labororatory System



The Intermediate Plus Nuclear Laboratory System, your comprehensive solution for advanced nuclear experimentation and analysis.

Unparalleled Versatility: This cutting-edge system is meticulously crafted to cater to the evolving needs of educational institutions, research facilities, and nuclear science enthusiasts. With its versatile design, it's perfectly suited for a wide range of applications, including teaching, advanced research, and radiation safety studies.

Precise Data Acquisition: Equipped with state-of-the-art technology, the Intermediate Plus Nuclear Laboratory System ensures precise data acquisition. It empowers users to conduct experiments with confidence, facilitating a deeper understanding of nuclear phenomena.

Seamless Integration: Our system seamlessly integrates with an array of detectors, amplifiers, and software, providing a comprehensive toolkit to explore and analyze radiation sources effectively. It's engineered for ease of use, making it accessible to both novice and experienced users.

Enhanced Features: The Intermediate Plus Nuclear Laboratory System boasts an array of enhanced features, including user-friendly software for data analysis, adaptable detector options, and flexible connectivity options, allowing you to tailor your experiments to your specific requirements.

Reliability and Support: Backed by Spectrum Techniques' commitment to quality and customer satisfaction, this system is built to last and comes with exceptional technical support to ensure your research and educational objectives are met with ease.

Unlock the potential of nuclear science with confidence, precision, and versatility using the Spectrum Techniques Intermediate Plus Nuclear Laboratory System. Elevate your experiments and research to new heights with this comprehensive solution.



PEO Detection Page 298 of 461

Partner GEORADIS s.r.o.



GEORADIS

Georadis s.r.o. is a specialized manufacturer of advanced radiation detection and monitoring instruments, offering a comprehensive suite of solutions for field and laboratory applications. Their product portfolio includes handheld

monitors, portable isotope identifiers, environmental monitoring devices, and laboratory equipment, all designed to meet the rigorous demands of professionals in sectors such as environmental monitoring, industrial safety, and public security.

Product offering

RT-50 Laboratory Gamma-Ray Spectrometer -Georadis



PEO Detection Page 299 of 461

RT-50 Laboratory Gamma-Ray Spectrometer - Georadis



The RT-50 (Georadis) is a state of the art gamma spectrum analyzer to monitor and detect the presence of radiation in metals, metals by-products, geological samples, construction materials, environmental commodities, food and many other materials. Floor standing and easy to operate, the RT-50 spectrum analyzer is an indispensable part of any analytical laboratory, it rapidly detects and accurately measures extremely low levels of radioactive contamination.



RT-50 Laboratory Gamma-Ray Spectrometer features:

- full sample analysis in less than 5 min
- sensitivity; 0.02 Bq/g
- energy range: 20 keV 3,0 MeV
- 1024 channel pulse amplitude analyzer
- · short calibration times
- NaI(TI) volume 0.35 I, 76 x 76 mm (3"x3") detector

Read more about the RT-50 Laboratory Gamma-Ray Spectrometer on the Georadis website

PEO Detection Page 300 of 461

Partner Kromek





Kromek Group plc is a global leader in advanced radiation detection technologies, specializing in compact, high-resolution solutions for security, defense, nuclear, and research applications. Leveraging proprietary Cadmium Zinc Telluride (CZT) semiconductor technology, Kromek delivers a versatile

portfolio that includes handheld monitors, portable isotope identifiers, CZT-based gamma cameras, and laboratory-grade spectrometers.

Product offering



PEO Detection Page 301 of 461

Radiation Detection \rightarrow CZT & Gamma Cameras Quant GR1



The Quant GR1 is a complete mobile or benchtop solution for quantifying doses of Gamma radiation released by radionuclides. Its high resolution of <2% and count spectrum range of 4096 channels enables any isotope to be identified and its associated dose quantified, even from complex mixtures.

The ability to quantify radiation doses in real time eliminates the need for further analysis in the lab, as data can both be collected and processed on site, saving time and costs.



PEO Detection Page 302 of 461

Partner Ultra Electronics



Ultra Electronics acquired Lab Impex Systems on July 17th, 2014. This is a known specialized manufacturer in radiation detection solutions and services for use in the global nuclear industry. Founded in 1976, Laboratory Impex Systems Ltd (LIS) is a leader in designing, developing and manufacturing health physics and radiation protection measurement instrumentation focusing on stack monitoring.

Product offering



PEO Detection Page 303 of 461

CMS Iodine Monitor - Lab Impex Systems



The CMS Iodine Monitor (Lab Impex Systems) is an advanced system for monitoring airborne concentration of radioiodine in the workplace and other areas of interest (stacks, cells and glove boxes).

The monitor is available in isotopic specific configurations including I-124, I-125, I-129 and I-131, and offers real time measurement of both molecular and organic forms of iodine.

In addition, the system is available in a skid, enclosure or cart mounted configuration.

The sensor element of the Iodine Monitor is a patented detector called the CGADC (Continuous Gas Analysis and Detection Chamber). The CGADC combines a sensitive scintillation detector with a stainless steel measurement chamber housing a radioiodine filtration cartridge. The CGADC is packaged as an integrated device, with shielding, pump, flow sensor and CMS processor, and is available in either a fixed or transportable configuration.



- filtration mechanism captures all forms of radioiodine
- achieves low MDL's through unique detector design with Brehmstrahllung shield
- automatic background compensation
- temperature spectrum stabilization reduces inaccurate measurement due to spectrum drift
- CMS analysis algorithm provides a low stable measurement at background, but ensures a fast response to rising concentration levels

Read more about the CMS Iodine Monitor on the <u>Lab Impex</u> <u>Systems website.</u>



PEO Detection Page 304 of 461

TRAINING SIMULATORS












Partner Argon Electronics



ARGON Argon Electronics delivers high-fidelity simulator-based training solutions for shamical biological radiological puclear and explosive (CRPNe) and chemical, biological, radiological, nuclear, and explosive (CBRNe) and hazardous material (HazMat) response. Their technology enables realistic,

hands-on training in both field and classroom settings—without the risks of live agents.

Product offering





PlumeSIM®



PlumeSIM-SMART



RS340 Back Pack



UDR-13 & UDR-14 SIM



Radsim DS3 Mini 900



Nuvia CoMo 170 Contamination **Training Simulator**



AN/PDR 77 APLHA & **BETA SIM PROBES**



GMP-11 Radiation Safety Training Simulator Probe



6150AD-K **Contamination** Simulator

RADSIM GS4



PEO Detection Page 306 of 461







MultiGAS SIM



RDS Beta Photon Li
Probe Simulator



Ludlum 133-6 and 44-2 Radiation Simulation Probes



RDS-100 / PDR-77 / CDV 718 SIM Probes



AN/VDR 2 DT616-SIM Radiation Safety Training Simulator



ADM300A-SIM Radiation Training Simulator



GID-3 Chemical Warfare Detection Simulator



MCAD-SIM Chemical Warfare Detection Simulator



CAMSIM Chemical Hazard Detection Simulator



AccuRad PRD Simulator



Nuvia DolMo Radiation Hazard Detection Simulator



HRM Radiation Hazard Simulator



PEO Detection Page 307 of 461

SP4E Chemical Hazard Detection Simulator



AP4C-SIM Chemical Detector Simulator



D-tect SYSTEMS RDS Radiation Training Simulator



SVG-2 Radiation Hazard Detection Simulator



RadEye GF-10 SIM



RADSIM-SS3



LCD3.3-SIM Chemical Hazard Detection Simulator



FH 40 GSIM Survey Meter Simulator



Raid-100M Training Simulator



Dräger X-am Series Simulator



Tracerco PED+ Simulator



PEO Detection Page 308 of 461

RADSIM 44-9-SIM Radiation Safety Training Probe Simulator



The RADSIM 44-9-SIM is a cutting-edge simulation probe designed for use with Ludlum's 44-9 GM pancake-type detector.

This versatile training system offers a realistic alternative to traditional methods, eliminating the need for ionising radiation sources while delivering high-fidelity functionality for instructors and students alike.

Key Features

- Accurate Simulation: Replicates the functionality of Ludlum's 44-9 GM pancake-type detector, responding to safe magnetic sources simulating short-range Alpha and Beta radiation.
- Adaptable Training Design: Compatible with an extensive range of Ludlum survey meters, rate meters, and scalers.
 Includes an Instructor Remote Controller (IRC) for managing partial or full decontamination and probe functionality scenarios.
- Integrated Training Capabilities: Offers virtual Alpha, Beta, and Gamma simulation when used with Argon's Plume SIM system. Enables simultaneous, multi-detector, and multiisotope training scenarios.



PEO Detection Page 309 of 461

PlumeSIM®




Plume SIM is the ultimate tool for preparing teams to respond to complex chemical, biological, radiological, and nuclear (CBRNe) threats. This innovative wide area training system creates realistic hazard plumes and hotspots, allowing instructors to manage a variety of threat scenarios in real time.

Ideal for counterterrorism and nuclear emergency exercises, Plume SIM adapts seamlessly from classroom tabletop mode to full scale field operations, enhancing team preparedness through powerful, scenario-based training.

Key Features

- Versatile Training Modes: Use Plume SIM in tabletop mode for classroom exercises or field mode for outdoor training with GPS enabled units.
- Customizable Scenarios: Create user defined scenarios with single or multiple threat sources, environmental factors, and release characteristics like duration, direction, and persistence.
- RealTime Monitoring & Mapping: Supports GIS mapping and real time adjustments to simulate wind changes and other environmental variables, making every session unique.
- Multiplatform Compatibility: Integrates with a range of Argon simulators, including the M4 JCADSIM, CAMSIM, AP2CSIM, and others, allowing simultaneous, multi threat exercises.

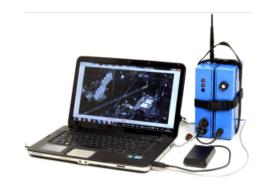

PEO Detection Page 310 of 461

PlumeSIM-SMART



Our App-based training system provides you with the capability to deliver practical, highly engaging Command Officer and survey operative tabletop and live field CBRNe / HazMat and offsite release exercises incorporating gaseous, radioactive, Hazardous Material (HazMat) and Chemical Warfare Agent (CWA) threats and releases.

PlumeSIM-SMART Simulates:

- Single or multiple threats / releases including Radioactivity,
 Radioactive compounds, TICs / TIMs and CWA
- Real-time chemical or radiation plume variation to changes in wind direction and velocity and evaporation, deposition, persistency, radioactive fallout and decay
- Hot spots, static emissions, hidden / activated radiological dispersion devices, puffs and plumes and placement of water barriers to restrict plume from sensitive areas
- Sources comprising Individual or multiple radionuclides and foot, fixed or vehicle based survey / monitoring / reconnaissance



PEO Detection Page 311 of 461

RS340 Back Pack



Based upon the Lawrence Livermore National Laboratory RaFTS Gamma Spectrometry simulation technology and developed in collaboration with Radiation Solutions Inc., the RaFTS-RS340 Gamma simulation module enables you to temporarily convert your operational RSI RS340 back pack into a powerful training system.

Substituting the RS340 detector, the RaFTS module responds to our GS Series simulation Gamma Sources which can be programmed to represent a variety of Industrial, Nuclear, Medical and even Specialist Nuclear Material (SNM) radionuclides and can be discretely hidden within buildings, open field, vehicles and even body worn rucksacks for specialist search and threat identification exercises.

For larger area exercises multiple GS series sources can be deployed or PlumeSIM provides the perfect solution.

Multi-Device Compatibility

The RS340 back pack responds in exactly the same way as it would for real radionuclides with count rate a spectra faithfully reproduced in real time with all standard user alarms and visual alerts including spectra displays presented on you Bluetooth linked RS340 mobile App.

Compatibility with all Argon Electronics survey, Personal Radiation Detector (PRD) and personal dosimeter simulators provides you with a powerful multi detector search team exercise capability so that you can ensure your teams maintain optimal operational readiness.



PEO Detection Page 312 of 461

UDR-13 & UDR-14 SIM



Thanks to a combination of Argon's wealth of simulation experience and our relationship with Mirion, the look, feel and response of the UDR-13 and UDR-14 radiation training simulators is extremely close to that of actual detectors.

The simulators respond to RADSIM electromagnetic sources that safely simulate ionizing radiation eliminating regulatory, environmental, and health and safety concerns for you and your students.

Key Features

- Simulated Science: Inverse square law (1/r2) response within real detector tolerance and accurate representation of different shielding effects.
- Unmatched Realism: Has the same human interface and dose rate alarm settings as the real detector.
- Comprehensive Training: Optional units of measurement available include Gy/hr, Sv/hr, Rem, and CPM.
- Cost Effective: Uses the same commercial batteries as real detector and doesn't require regular calibration or maintenance.



PEO Detection Page 313 of 461

Radsim DS3 Mini 900



The Radsim DS3 Mini 900 Simulator revolutionizes radiation safety training by replicating the detection capabilities of the Thermo Mini Monitor 900 EP15. Designed with photon based fluorescent simulation technology, this powerful training tool allows users to detect Alpha and Beta particles without any environmental or safety risks.

From educational institutions and hospitals to nuclear facilities and emergency response units, the Radsim DS3 provides a safe, hands on learning experience, equipping trainees to respond effectively in contamination scenarios.



- Realistic Simulation Technology: Detects safe, coloured powder, liquid, and cream simulants on various surfaces—including protective gloves, food, and even simulated contaminated water.
- Customizable Detection Modes: Easily configure the Radsim DS3 for Alpha, Beta, or combined Alpha Beta detection, simulating varied particle detection for an authentic hands on experience.
- Scenario Adaptability: Adjustable settings for background noise, mute, and alarm thresholds allow instructors to align the simulation environment with specific training objectives, enhancing immersion.
- Environmentally Safe Simulants: Made from common dyes, food additives, and cosmetic grade bases, all simulants are nontoxic, with full ingredient transparency for uncompromised safety.



PEO Detection Page 314 of 461

Nuvia CoMo 170 Contamination Training Simulator



The Nuvia CoMo 170 simulator replicates the operational features of the operational CoMo 170 contamination detector, enabling safe and effective radiation training. By eliminating the need for ionising radiation sources, this system ensures regulatory, environmental, and health safety compliance while offering unparalleled realism.

Key Features

- Advanced Simulation Technology: Accurate replication of the CoMo 170 detector with fully functional alarm, language, and configuration options.
- Dynamic Training Scenarios: Supports training for survey, location, and decontamination tasks.
- Integrated Training Solutions: Compatible with Argon's Plume SIM system for wide-area emergency response exercises. Allows simultaneous multi-detector and multi-hazard training with Argon simulators.



PEO Detection Page 315 of 461

AN/PDR 77 APLHA & BETA SIM PROBES



The RADSIM A-SIM-P and B-SIM-P radiation training simulator probes are for use with the Mirion / Canberra AN/PDR-77 and RDS100 survey meters. These probes provide you with a training system that enables your students to experience the operational features of the real detector without the need for real radiation sources or radioactive materials.

Key Features

- Operational Realism: Compatible with Mirion/Canberra meters including AN/VDR-2, PDR-77, and RDS100 with identical functionality and readings as the real probes.
- Dynamic Training Scenarios: Supports training for search, reconnaissance, survey, location, and decontamination procedures.
- Instructional Ease: Instructor remote control for simulating partial/full decontamination and probe failure at the push of a button.
- Advanced Simulation Capabilities: Simulates radiation hazards with realistic response and shielding effects.



PEO Detection Page 316 of 461

GMP-11 Radiation Safety Training Simulator Probe



The GMP-11-SIM is an advanced Beta radiation contamination training simulator designed for the Mirion GMP-11 probe. This simulator seamlessly connects to your Mirion RDS-200 or Argon RDS-200-SIM, providing an authentic training experience without the need for ionising radiation sources or radioactive materials.

Key Features

- Accurate Simulation: Responds to safe, inexpensive fluorescent powder and liquid materials that simulate beta radiation. Automatically detected by the RDS-200-SIM for seamless operation.
- Training Versatility: Compatible with both real RDS-200 and RDS-200-SIM survey meters.
- User-Friendly Design: Logarithmic analogue bar graph and numeric dose rate display.



PEO Detection Page 317 of 461

M4A1 JCAD Chemical Hazard Detection Simulator



The M4A1 JCAD-SIM is a high-fidelity simulator for the Smiths Detection M4A1 JCAD, enabling safe, effective, and environmentally friendly training for chemical warfare and hazardous material scenarios.

Designed to preserve operational readiness and reduce costs, this simulator ensures your team is prepared for real-world challenges while extending the lifespan of your actual detection equipment.

Key Features

- True-to-Life Interface: Perfectly mimics the actual detector, supporting a seamless transition from training to real-world response.
- Comprehensive Threat Simulation: Detects and simulates a wide array of agents, including nerve, blister, and blood agents, toxic industrial chemicals (TICs) and false positives.
- Environmental Adaptability: Simulate varied conditions like wind direction, temperature shifts, and night vision
- Enhanced Control for Instructors: With a dedicated remote, instructors can set decontamination effectiveness, persistency, and contamination levels



PEO Detection Page 318 of 461

6150AD-K Contamination Simulator



Radiation Hazard Detection Simulator

- Large area contamination simulation 6150AD-K probe for Automess 6150AD
- Responds to safe simulation radiation sources
- Simulation of partial and full decontamination
- Simulation of detector cover plate
- Simulation of contamination of sensor face
- Perfect for radiation, HazMat and CBRN training, exercises and scenarios.



PEO Detection Page 319 of 461

RADSIM GS4



The RADSIM series of highly realistic simulation gamma radiological sources overcome the regulatory, financial and administrative burden of live radiological source based training scenarios in an entirely safe, environmentally friendly and cost effective manner.

What truly sets the RADSIM series apart is the realism of the simulation – hide the simulation detector training label and the "Pucker Factor" is as real as it gets!

Key Features

- Dose rate and Dose readings and alarms indicating potentially hazardous radiation levels.
- Inverse square law (1/r2) response and shielding effects of different materials.
- Consistent readings across instruments each time the student revisits the same location within the exercise.



PEO Detection Page 320 of 461

MultiGAS SIM



MultiGAS-SIM supports from one to a total of six different simulation sensor types, including O2, CL2, SO2 and LEL. Instructors can configure the MultiGAS-SIM to incorporate specific simulation sensors as required to represent fielded single or multiple sensor MultiGAS detectors. You can even configure the visual layout of the sensors on the display screen to accurately replicate the sensor layout configuration of your operational detectors.

Key Features

- Realistic Training: Mimics the operation of real gas detectors, providing trainees with practical, hands-on experience.
- Customizable Scenarios: Enables tailored training for a wide range of hazardous environments and operational conditions.
- Enhanced Learning: Real-time feedback through instructor monitoring ensures trainees learn from their mistakes in a controlled, safe environment.
- Advanced Simulation Features: Features realistic O2 readings and LRVS simulation gas emitters detected up to 25 meters (80 feet).



PEO Detection Page 321 of 461

RDS Beta Photon Probe Simulator



The D-tect SYSTEMS Beta Photon radiation simulator probe has been designed to work with Argon's simulation RDS base unit.

The simulation Beta Photon Probe can be connected directly to the Simulation RDS base unit by flexible cable, or can be mounted on the Telepole enabling you to practice remotely monitoring high level radiation sources from a safe distance.

You can "hot connect" and disconnect the simulation Beta Photon Probe just like the real instrument – no need to turn the simulation RDS base unit of and most impressively the base unit display screen splits just like real providing real time simulated reading from both base unit and remote Beta Photon Probe enabling your trainees to experience the higher reading obtained due to the Beta Photon Probe while monitoring the base unit reading which represent the hazard at their personal location.

Inverse square law response is extremely realistic; even the effect of shielding between the probe and base unit to determine source position is realistically simulated enabling you to ensure survey teams understand what to do when that emergency comes.

Key features:

- Inverse square law (1/r2) response within real detector tolerance.
- Simulation of user body shielding for source location.
- Realistic representation of different shielding effects.
- Responds to Simulation check source.
- No regular calibration.
- No preventative maintenance.
- PlumeSIM compatible.
- Compatible with other Argon radiological simulators.



PEO Detection Page 322 of 461

Ludlum 133-6 and 44-2 Radiation Simulation Probes



The Ludlum 133-6-SIM and 44-2-SIM are advanced radiation simulator probes designed to replicate the operational features of the Ludlum 133-6 Gamma detector and the 44-2 scintillation detector.

These simulators provide unmatched realism and usability, enabling trainees to master radiation search, survey, and localisation skills without the need for real radioactive sources. Compatible with Ludlum meters, these probes offer a versatile and cost-effective solution for comprehensive radiation safety training.



- Expertly Designed: Identical user interface and operational characteristics to the real 133-6 and 44-2 detectors.
- Incredible Realism: Response speeds closely mimic real detectors, supporting realistic source search and localisation exercises.
- Effortless Integration and Versatility: Compatible with any Ludlum meter supporting 133-6 or 44-2 probes. o Fully compatible with PlumeSIM and other Argon simulation systems.
- Simulated Science: Inverse square law (1/r2) response within real detector tolerance.



PEO Detection Page 323 of 461

RDS-100 / PDR-77 / CDV 718 SIM Probes



The RDS-100-SIM 3-Probe simulator set offers a cutting-edge training system that replicates the operational features of an operational Canberra RDS-100, AN/PDR-77, and CDV 718 probes.

Designed to simulate Alpha, Beta, and Gamma radiation without the need for real radioactive sources, this system provides a safe, practical, and environmentally friendly solution for mastering radiation safety skills.

Key Features

- BG-SIM-P: Simulates the Beta/Gamma probe, compatible with the RDS-100, AN/PDR-77, and M-243/VDR-2 meters.
- A-SIM-P: Simulates the Alpha probe for contamination and decontamination training.
- B-SIM-P: Simulates the Beta probe for Pancake detector functions



PEO Detection Page 324 of 461

AN/VDR 2 DT616-SIM Radiation Safety Training Simulator



The DT616-SIM is a high-fidelity Beta/Gamma radiation training simulator designed for use with Mirion/Canberra AN/VDR-2, PDR-77, RDS100, and CDV 718 survey meters.

This innovative simulator allows trainees to experience the full operational functionality of the DT616 probe without the need for live radiation sources, ensuring safe, compliant, and practical training for critical radiological scenarios.

Key Features

- Advanced Simulation Capabilities: Simulates both Beta and Gamma radiation hazards with realistic inverse square law (1/r²) response and shielding effects.
- Operational Realism: Compatible with Mirion/Canberra meters including AN/VDR-2, PDR-77, and RDS100 with identical functionality and readings as the real DT616 probe.
- Dynamic Training Scenarios: Supports training for search, reconnaissance, survey, location, and decontamination procedures with encoded signals simulate specific Gamma emitting radionuclides.
- Instructional Ease: Instructor remote control for simulating partial/full decontamination and probe failure at the push of a button.



PEO Detection Page 325 of 461

ADM300A-SIM Radiation Training Simulator



The ADM300ASIM is a cutting-edge radiation training simulator, designed in collaboration with Mirion to replicate the functionality of the ADM300A radiation survey meter.

Providing seamless compatibility with your operational equipment, this simulator ensures safe, realistic, and comprehensive training without the need for ionising radiation sources.

Key Features

- Unparalleled Realism: Accurately simulates dose, dose rate, accumulated dose, and alarm thresholds using safe Beta and Gamma simulation sources.
- Simulated Science: Excellent simulation of inverse square law and body shielding effects.
- User-Friendly Design: Identical menu structure, software processing, and interface to the real ADM300A V1b meter, with visual and audible alarms fully configurable to match your operational equipment.
- Advanced Compatibility: Fully integrated with Argon's PlumeSIM and supports multi-detector and multi-threat scenarios with other Argon simulators.



PEO Detection Page 326 of 461

GID-3 Chemical Warfare Detection Simulator



PEO Detection Page 327 of 461

MCAD-SIM Chemical Warfare Detection Simulator



PEO Detection Page 328 of 461

CAMSIM Chemical Hazard Detection Simulator



PEO Detection Page 329 of 461

AccuRad PRD Simulator



PEO Detection Page 330 of 461

Nuvia DolMo Radiation Hazard Detection Simulator



PEO Detection Page 331 of 461

HRM Radiation Hazard Simulator



PEO Detection Page 332 of 461

SP4E Chemical Hazard Detection Simulator



PEO Detection Page 333 of 461

AP4C-SIM Chemical Detector Simulator



The AP4C-SIM is a state-of-the-art simulation training system designed collaboratively between Argon and Proengin to replicate the operational capabilities of Proengin's AP4C chemical hazard detector. Provide your security force, first responder, and industrial safety teams with a realistic and comprehensive training experience—without the risks associated with live chemical agents.

The AP4C-SIM allows your team to practice detecting chemical vapours, toxic industrial substances (TICs), and even false positives in various environments, all while using safe, electronic simulation sources.

Key Features

- Realistic Simulation: Responds to electronic sources simulating CWAs, TICs, and explosive atmospheres
- Safe and Environmentally Friendly: Eliminates the need for harmful simulants, allowing realistic training without environmental impact or safety compromise..
- Instructor Control: A remote control provides instructors with full control over scenario management in real-time, allowing trainers to adjust contamination levels, wind direction, and temperature effects.
- Simulation Tools: The system includes simulation sources, hydrogen cells, error reporting cards, survey nozzles, and a carry case for easy transport. The simulator is ready to go from the box with minimum set up required.



PEO Detection Page 334 of 461

D-tect SYSTEMS RDS Radiation Training Simulator



PEO Detection Page 335 of 461

SVG-2 Radiation Hazard Detection Simulator



The SVG-2 SIM is an advanced simulator designed to replicate the Thermo Fischer Scientific SVG-2 Radiac Meter with exceptional accuracy.

Offering a safe, practical, and cost-effective training solution, this simulator eliminates the need for ionising radiation sources, ensuring students can safely learn essential survey and reconnaissance skills in any environment.

No preventative maintenance, calibration or consumables (except batteries) are required ensuring whole life cost of ownership is minimal, expensive damage to real detectors is avoided and operational readiness is maintained.

Additionally, the SVG-2 SIM eliminates the regulatory, health, and environmental concerns of real radiation sources.

Key Features

- Advanced Simulation Capabilities: Simulated external Alpha, Beta, Gamma probe for contamination monitoring and decontamination exercises. Dose and dose rate indications with analogue and digital backlit displays.
- Operational Realism: Identical interface as the real SVG-2 detector, inverse square law (1/r2) response, and realistic shielding effects.
- Flexible Training Applications: Compatible with PlumeSIM for wide-area tactical field and emergency response exercises. Multi-detector, multi-isotope capability for comprehensive scenario development.



PEO Detection Page 336 of 461

RadEye GF-10 SIM



Overview:

The RadEye™ GF-10 Simulator offers realistic, risk-free training for radiation detection, mirroring the functionality of the Thermo Fisher RadEye™ GF-10. It's a safe, effective solution for hands-on exercises—without exposure to ionizing radiation.





Features:

- Unmatched Simulation Accuracy: Realistic inverse square law response within actual detector tolerances. Simulates user body shielding and shielding material effects for precise source location training.
- User Interface Fidelity: Identical display, switch panel, sounder, and vibrator as the operational RadEye™ GF-10. Configurable menu options, including measurement units (Sv/hr, Rem, CPS), language selection and dose and dose rate alarms with customisable settings.
- Seamless Integration: Fully compatible with Argon's Plume SIM for wide-area, multi-device CBRN and HazMat exercises.

High impact radiation training

The RadEye™ GF-10 Simulator delivers a true-to-life training experience by replicating the real detector's interface, audio/visual signals, and response speed. It supports realistic source search exercises with detection of the Radsim GS4 simulation source at distances up to 60 meters.

With accurate simulation of sensitivity and inverse square law behavior, it allows trainers to demonstrate and teach critical radiation protection principles such as time, distance, and shielding without the safety, regulatory, or environmental concerns of using live sources.

Consistent, Repeatable Performance

Powerful proprietary signal processing ensures consistent, repeatable readings every time a scenario is revisited. Simulated responses across multiple units remain within the tolerances of real detectors, delivering high-quality, realistic training that meets professional standards.

Train Smarter, Train Safer

RadEye™ simulators are fully compatible with Argon's PlumeSIM system—used by leading training facilities worldwide for live field and tabletop CBRN exercises. PlumeSIM enables real-time, wide-area emergency response training with multiple simulated devices reacting to virtual hazards.

PEO Detection Page 337 of 461

RADSIM-SS3



PEO Detection Page 338 of 461

LCD3.3-SIM Chemical Hazard Detection Simulator



PEO Detection Page 339 of 461

FH 40 GSIM Survey Meter Simulator



PEO Detection Page 340 of 461

Raid-100M Training Simulator



The RAID-M100 Chemical Hazard Detection Simulator is an advanced training tool designed for military and civil CBRNe responders. Specifically engineered to emulate the Bruker Daltonics RAID-M100, this simulator replicates its features, responses, and operations to deliver unmatched realism in training.

Whether preparing for chemical warfare agents (CWAs) or toxic industrial chemicals (TICs), the RAID-M100-SIM provides a safe, practical, and cost-effective solution for mastering critical detection skills.



- Versatile Hazard Simulation: Identifies CWAs, TICs, and false positives and simulates persistent and non-persistent substances.Replicates contamination and decontamination scenarios, including probe contamination.
- Realistic Instrument Interaction: Functional sieve pack and filter replacement and monitoring of user errors such as missed confidence tests or procedural oversights.
- Rapid Deployment: Set up scenarios in under 10 minutes for maximum training flexibility.
- Sustainability & Cost Efficiency: Requires no ionizing radiation, calibration, or preventative maintenance.
 Operates with electronic simulation sources that are safe and environmentally friendly.



PEO Detection Page 341 of 461

Dräger X-am Series Simulator



Developed in cooperation with Dräger, the Argon Electronics X-am 2×00/5×00 SIM replicates the full functionality of the Dräger X-am 2×00 and 5×00 series gas detectors, offering a powerful, engaging, risk-free training experience. Responding to Argon's safe, environmentally friendly simulation long range vapour sources (LRVS), instructors can quickly implement a wide variety of confined space and open area training scenarios.

Perfect for confined space, open area and gas leak detection and management training, the Dräger X-am series simulator helps ensure responders have the confidence to conduct gas monitoring, interpret readings, and respond to alarms without exposure to real gas hazards, depleted oxygen or explosive atmosphere.

Key Features

- Realistic Gas Detection Training: accurate replicates detection and alarm responses
- Seamless Compatibility: Works with Dräger's standard configuration software
- Data-Driven Training: Compatible with Dräger Gas Detection Connect for live data transmission.
- Multi Detector Exercises: Compatibility with Argon's CWA / TIC detector simulators for specialist team multi detector response exercises.
- Flexible Multi-Scenario Training: Integrates with Argon's simulation vapour sources and PlumeSIM for dynamic scenarios.



PEO Detection Page 342 of 461

Tracerco PED+ Simulator





Thanks to a combination of Argon's wealth of simulation experience and our relationship with Tracerco, the look, feel and response of the Personal Electronic Dosimeter (PED+) Simulator is extremely close to that of actual detector.

PED+SIM responds to Radsim electromagnetic sources that safely simulate ionizing radiation eliminating regulatory, environmental, and health and safety concerns for you and your students. You can use the simulation sources in the open or within buildings.



High impact radiation training

To ensure the ultimate training experience, all user interface components (display, indicators, switch panel, sounder and vibrator) are exactly the same as the real detector.

Response speed and characteristics when approaching and withdrawing from the simulation source are just

PEO Detection Page 343 of 461

like the real detector enabling you to deliver highly realistic source search / find training.

Simulated sensitivity enables the Tracerco PED+SIM to detect the Radsim GS4 simulation Gamma source at a free space distance of typically 200 feet (60 metres) distance line of sight.

Consistent, repeatable performance

Powerful proprietary signal processing ensures simulated readings are repeatable each time students revisit the same scenario location while also ensuring the readings observed on different simulators are within the accepted tolerances of actual detectors; all contributing to the provision of high quality, realistic training.

Even the effect of user body shielding to determine source position is realistically simulated so you can be certain your survey teams understand how to use and interpret their detector readings and alarms effectively.

Key features:

- Inverse square law (1/r2) response within real detector tolerance.
- Simulation of user body shielding for source location.
- Realistic representation of different shielding effects.
- Selectable units of measurement (Sv/hr, Rem, CPS).
- Same human interface as real Tracerco PED+.
- Configurable menu settings.
- Dose and dose rate alarm settings.
- Language selection.
- Same battery as real detector (approximately 36 hours standard operation, 150 hours operation in screen saver mode).
- No regular calibration.
- No preventative maintenance.



Time distance shielding

The PED+ training simulator enables the importance of time/distance shielding to be taught and demonstrated with ease; the activity of the simulated source realistically reduced depending upon the material between the simulation source and the simulated detector.

Extremely realistic inverse square law response allows the powerful protective combination of distance and shielding to be demonstrated enabling students to practice communication of recommendations and safety procedures without the regulatory, safety, environmental and cost restrictions associated with real sources.

PEO Detection Page 344 of 461

Cost effective realistic training

No preventative maintenance, calibration or consumables (except batteries) are required ensuring whole life cost of ownership is minimal, expensive damage to real detectors is avoided and operational readiness is maintained.

PlumeSIM compatible

PED+SIM is compatible with PlumeSIM, Argon's proven Live Field and Tabletop CBRN exercise system. In use by many of the world's leading training facilities, PlumeSIM enables real time instrumented wide area tactical field and nuclear / HazMat / Chemical Warfare emergency response exercises to be conducted using single or multiple simulation device types that respond in the real time to simulated hazards.

PED is a trade mark of Tracerco. Tracerco is a trade mark of Johnson Matthey.

PEO Detection Page 345 of 461

BODY MONITORS





Partner Ludlum Measurements Inc.





Ludlum Measurements, Inc. is a trusted global provider of radiation detection and monitoring instruments, offering rugged, accurate solutions for personnel safety, environmental protection, and security screening. Since 1962, their

equipment has been used worldwide in applications ranging from nuclear power and emergency response to border protection and critical infrastructure monitoring.

Product offering

Model 215 Alpha Frisker Station



Model 177HFM Low Cost Hand & Foot Monitor



Model HFC-8 Hand, Foot, and Clothing Monitor



Model 4906P Alpha-Beta-Gamma Hand & Foot Monitor



Model 4906AB Alpha-Beta Hand & Foot Monitor



Model 4906A Alpha Hand & Foot Monitor



Model 4901P Beta-Gamma Hand & Foot Monitor



Model 3276HFM Low Cost Hand & Foot Monitor



Model 3277HFM Compact Alpha-Beta Hand & Foot Monitor



Model 53 Gamma Portal Monitor



Model 52-1, 52-5 & 52-6 Series Portable Portal Monitors



Model 52 Portable Portal Monitor




PEO Detection Page 347 of 461

Model HBP-22 Body Contamination Monitor





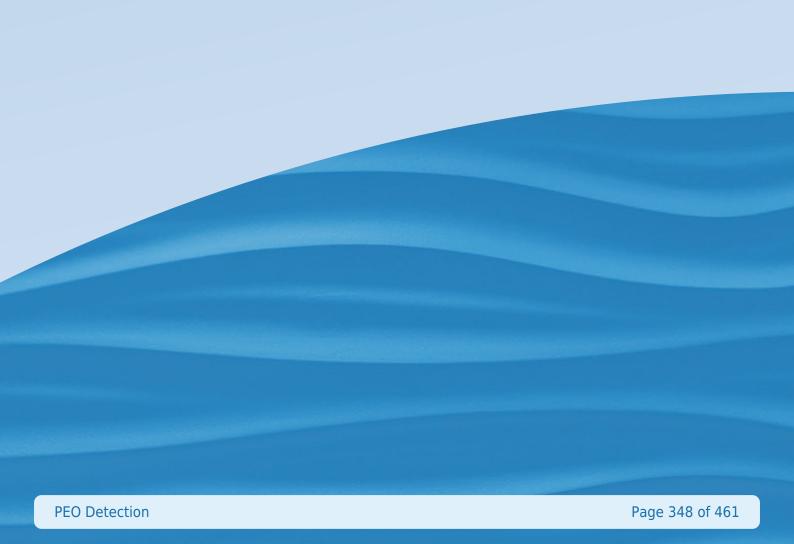

Model 215 Alpha Frisker Station



Ludlum Model 215 is a unique dual-purpose alpha contamination detection system that can be used as both a stationary detector and a mobile frisker. When alongside a glovebox, the operator can use this innovative device as a stationary hand frisker, then simply remove it from the charging stand for use as any other mobile alpha frisker.

This convenient, integrated detector design requires no batteries, P-10 counting gas, or cables, giving the user complete freedom in performing frisking duties. The large area, air proportional detector has built-in electronics, display, and capacitors that allow it to be operated for at least 10 minutes, typically 15 minutes, before needing to be recharged. Fully discharged, the detector is ready for stationary operation within five minutes of being placed into the charger stand, and ready for mobile frisking within 30 minutes. The charging stand interfaces to a PC to facilitate setting parameters and running high voltage plateaus via an optional application program.



- Dual Purpose Alpha Frisker & Hand Monitor Station
- Detector Operates Independent of Its Stand
- Simple to Use
- No Batteries, Cables, or Gas Required



PEO Detection Page 349 of 461

Model 177HFM Low Cost Hand & Foot Monitor



This setup offers a low-cost alpha/beta/gamma contamination monitoring system for checking hands and feet.

To build this system, order the following items:

- Model 177 Benchtop Meter (PN: 48-1632)
- Model 44-25 Hand Detector (PN: 47-1508)
- Model 44-26 Foot Detector (PN: 47-1509)
- Connection Tee (PN: 13-7788)
- 1.5 m (5 ft.) Cable (PN: 40-1004-5)

Features

- Detects alpha, beta, and gamma
- Low cost
- Easy to set up




PEO Detection Page 350 of 461

Model HFC-8 Hand, Foot, and Clothing Monitor



Robust and Portable Hand-Foot-Clothing Monitor with Touch-Screen Display

The HFC-8 is a compact hand, foot, and clothing monitor to measure personnel leaving controlled areas. With a removable probe and spring-loaded hand detectors, the HFC-8 has been developed for portability between different areas. Featuring a detector arrangement to measure the hands and feet in one measurement step, the HFC-8 integrates the latest technology and design, while meeting official standards.



- Beta detectors (plastic scintillator)
- Beta-Gamma detectors (plastic scintillator)
- Alpha/Beta detectors (plastic scintillator or gas-flow proportional)

The standard unit consists of:

- 8 detectors with semiconductor readout, one of them as removable hand probe
- Robust stainless-steel housing
- Ergonomic detector positioning
- Integrated 12 in. touch-screen display
- Fully automated measurement process with audiovisual operator guidance
- Latest industry controller technology
- Power provided by UPS for several measurements during mains power outage

Features

- Intuitive User-Friendly Software
- Spring-Loaded Hand Detectors for Reliable Contact with the Hand Surfaces
- Compact Footprint with Easy Access to the Service Cabinet
- Modern Touch-Screen Display
- Stainless Steel Housing for Easy Cleaning and Durability
- Access to Historical Measurement Data via Integrated Database
- Export of Measurement/Parameter Data in XML Format via USB



PEO Detection Page 351 of 461

Model 4906P Alpha-Beta-Gamma Hand & Foot Monitor



The Model 4906P is a low cost, industrial duty, alpha-beta-gamma contamination monitoring system that uses six pancake cluster detectors for checking personnel. A large color LCD presents users with the system status and points out any potential contamination in an easy-to-use manner. Alarms are annunciated locally and can be augmented with optional relays for signaling remote devices or a light stack mounted on top.

All maintenance can be performed from the front of the instrument. Detector access for quick replacement or repair is facilitated by hinged top covers. The unit is equipped with rear-mounted wheels to facilitate transporting the instrument from one location to the next.

Features

- GM Pancake Detectors
- Large LCD User Interface
- Automatic Routines for Detector Setup & Alarm Calculations
- Customizable Voice Prompts
- Single-Hand Operational Mode
- Front Access to All Components for Repair/Calibration



PEO Detection Page 352 of 461

Model 4906AB Alpha-Beta Hand & Foot Monitor



The Model 4906AB is a low cost, industrial duty, alpha and beta contamination monitoring system for checking personnel hands and feet. A large color LCD presents users with the system status and points out any potential contamination in an easy-to-use manner.

The system employs six gas flow proportional type detectors with counting activated by optical switches. Alarms are annunciated locally and can be augmented with optional relays for signaling remote devices or a light stack mounted on top. The built-in Ethernet interface supports connection to a network for gathering all count cycles and remote monitoring of the status.

All maintenance can be performed from the front of the instrument. Detector access for quick replacement or repair is facilitated by hinged top covers. The unit is equipped with rear-mounted wheels to facilitate transporting the instrument from one location to another.

Features

- Alpha-Beta Gas Flow Proportional Probes
- Large LCD User Interface
- Automatic Routines for Detector Setup and Alarm Calculations
- Voice Prompts
- Built-in Ethernet Interface
- Single-Hand Operational Mode
- Front Access to All Components for Repair/Calibration



PEO Detection Page 353 of 461

Model 4906A Alpha Hand & Foot Monitor



The Model 4906A is an industrial-duty, low-cost, alpha-only contamination monitoring system for the hands and shoes of personnel. System status and areas of possible contamination are presented in a large color LCD making the process simple and user-friendly.

Counting is initiated by optical switches that activate six airproportional-type detectors. Alarms annunciate locally and can be augmented with optional relays that will signal remote devices or a high-visibility alert light mounted on top of the unit. The built-in Ethernet interface supports connection to a network for gathering all count cycles along with permitting remote monitoring of the status of the instrument.

All maintenance can be performed from the front of the instrument. Hinged top covers make accessing detectors for repair or replacement convenient. Rear-mounted wheels allow the instrument to be transported from one location to another with relative ease.

Features

- Alpha Air Proportional Probes
- Large LCD User Interface
- Automatic Routines for Detector Setup and Alarm Calculations
- Voice Prompts
- Built-in Ethernet Interface
- Single-Hand Operational Mode
- Front Access to All Components for Repair/Calibration



PEO Detection Page 354 of 461

Model 4901P Beta-Gamma Hand & Foot Monitor



The Model 4901P Beta-Gamma Hand & Foot Monitor is intended for use as a medium-level beta and gamma contamination monitor. Four count channels are in the standard configuration for monitoring the palm of each hand and the sole of each foot. The Model 4901P employs a total of twenty-two pancake Geiger-Mueller (GM) type detectors, five in each hand detector (palm side only) and six in each foot detector. LED indicators show status and alarm location. The Model 4901P allows parameter updating by viewing the built-in, 16-character LCD display. Detector counts, background, alarm set points, and all parameters may be viewed on the LCD display. Switches at each hand detector initiate an interrogation (both switches must activate). Audible alarm and status change indications are standard.



Features

- Affordable
- Simple to Use
- Automatic Background Subtract
- Password-Protected Parameters
- Alarm Audio Volume Adjustment
- Non-Volatile Memory Requires No Battery Backup

PEO Detection Page 355 of 461

Model 3276HFM Low Cost Hand & Foot Monitor



The Model 3276 is a versatile instrument that can be used for multiple radiation detection or measurement purposes. In this configuration, the Model 3276 is connected to both a Model 44-25 hand monitor detector and Model 44-26 foot monitor detector to monitor personnel for alpha, beta, and gamma contamination. An optional Model 44-9 detector can also be included for frisking.

The Model 3276 features a large, backlit, easy-to-read LCD screen and audible alarms and is controlled using a simple four-button interface. The unit body is made of lightweight, rugged aluminum. It is not intended for outdoor use and should be protected from splashing water.

The Model 3276 can measure radiation in count rate, exposure rate, exposure rate/dose, activity rate, integrated exposure/dose, time-averaged rates, and scaler counts. In this configuration, three modes of operation are available – RATE, MAX, and COUNT – which can be selected by pressing the MODE button. Measurements can be collected in two sets of units (primary and secondary) for RATE and MAX modes in cps, cpm, Bq, dpm, R/hr, or Sv/h units. The user can switch between the two sets of units by pressing the UNITS button.

Instrument setup can be done either through the front-panel controls or via the Lumic Calibration Kit (PN: 4498-1018). Power is supplied by either four alkaline "AA" batteries or a 9 Vdc wall mount transformer. The Model 3276HFM is shipped ready to use with batteries, a wall transformer, and a calibration certificate.



PEO Detection Page 356 of 461

Model 3277HFM Compact Alpha-Beta Hand & Foot Monitor



The Model 3277HFM Hand & Foot Monitor is intended for checking low-level alpha and beta contamination on personnel. The gasless system incorporates two scintillation detectors, one for the hand and one for the foot. An optional frisker scintillation detector can be included as well.

Measurement is a two-step process, measuring the hand and foot on one side at a time. To begin an automatic count, both the hand and foot must be placed on the respective detectors, activating the infrared (IR) sensor on each detector. User-friendly instructions and the status of each detector is clearly displayed on the large, color touch-screen. The instrument uses a minimum count time mode to automatically determine the count time based on background, alarm setpoints, and other factors. When the count is completed, either a "Clean" or "Alarm" message will be displayed, depending on the configured alarm set-points.

In "Idle" mode, the screen will display the current detector count rates (default) or the accumulated background rate.

If the system includes a frisker, the status of all three detectors are displayed in "Idle" mode, but only the active detector(s) (either both the hand and foot, or the frisker) are displayed when a count is performed. The frisk state is activated when the frisker is removed from the cradle, and the automatic hand and foot count is activated as described above. A lockout prevents the instrument from toggling the display between the frisker and the hand and foot detectors, so that whichever detector is activated first remains active until the sensor is no longer triggered.

The system can communicate through a standard Ethernet connection for remote monitoring. It is powered by a 100 – 240 Vac wall transformer. An optional battery backup is available to ensure constant power. Instrument setup can be done through the touch-screen display or via Ludlum's Lumic Calibration Software.

Features

- 7-inch Color LCD Display Shows All Readings Simultaneously in a Large, Simple Layout
- Audible & Visual Alert Signals
- Easy to Operate Two-Step System
- Gasless Uses Dual-Phosphor Scintillation Detectors
- Optional Rechargeable Battery Backup



PEO Detection Page 357 of 461

- Automatic Start of Count
- Minimum Count Time
- Automatic Background Subtraction During Measurements

PEO Detection Page 358 of 461

Model 53 Gamma Portal Monitor



The Model 53 Gamma Personnel Portal detects gamma radiation in or on personnel passing through the portal from either direction. This highly sensitive portal uses eight large plastic scintillation detectors. Shielding is accomplished with either the standard 2.5 cm (1 in.) or optional 5.1 cm (2 in.) thickness of lead. A user-friendly interface guides personnel through the portal monitor via automated voice prompts, and is accompanied with 25.7 cm (10.1 in.) color LCD articulating screens presenting the instrument readiness and status at the ingress and egress. Alarms are manifested both audibly and visually, and can be silenced and acknowledged via control buttons located on either side of the instrument.

Three statistical counting modes are available to maximize throughput, maximize sensitivity, or fix the count time. Several modifiable parameters adjust the alarm set point, including the false alarm probability, detection probability, background sigma coefficient (K_B), and the composite sigma coefficient (K_{S+B}). Fast alarm and clean options provide the ability to quickly determine if personnel are contaminated or clean before the entire count cycle has ended.

There are also four user modes to choose from that include a walk-through mode, a pause mode, a pause-and-turn mode, and a front-and-back mode. Voice prompts may be customized in any language for each of these modes. These prompts can, for example, dictate in-house procedures to follow. Instrument technicians have password-protected access to set up the instrument, and to the advanced automated routines for calibrating and verifying operation.

Easily accessible USB ports facilitate connecting a keyboard to implement changes, input user ID, or upload revised software. The system also includes an Ethernet link. Ludlum's optional Universal Network Software can be used to log instrument status, user activity, and other information from one or more instruments connected to the network. This software broadcasts emails whenever radiological alarms or instrument failures occur, and has the ability to capture images from network cameras that can be stored along with the user ID (if implemented). See the "Options" tab for more information and other available options.



PEO Detection Page 359 of 461

Model 52-1, 52-5 & 52-6 Series Portable Portal Monitors



The Model 52-1, 52-5, and 52-6 Series Portable Portal Monitors are used for beta-gamma contamination monitoring on personnel and meet the FEMA standard for Emergency Response Portal Monitoring (FEMA-REP-21). They are designed to be disassembled for ease of transportation and storage, and can be set up in five minutes or less without any tools.

Each instrument's non-volatile parameters are preset at the factory to detect a 1.0 μ Ci 137 Cs source in a 10 μ R/hr background field. Microprocessor-based electronics provide ease of setup and reliability. Status LEDs indicate count-cycle status and audible signals accompany the LEDs for additional indication. Detector counts, background, and all parameters may be viewed on the instrument display. All setup is accomplished by way of pushbuttons located below the display.

These portal monitors can be operated in a walk-through mode with a quick scan occurring while a person is positioned within the portal. In this mode, checking is performed every 200 milliseconds while the portal is occupied, and 600 milliseconds before and 600 milliseconds after the portal is occupied. The portal monitor can also monitor in a stop-and-count mode, allowing for a more sensitive scan. In stop-and-count mode, the fixed count time may be set from 1 to 20 seconds.

These instruments have automatic background update and dynamic alarm setting capabilities. On startup, the instrument will take a background count and calculate alarm levels for each detector. Self-diagnostic routines check the background count and warn if the background becomes either too high or too low.

Alarms are calculated with a user-adjustable sigma parameter and the current background count. During setup, the user can also specify individual alarms only, sum alarm only, or both individual and sum alarm. The sum alarm groups upper detectors and lower detectors.

Included with each instrument are a wheeled transport case and a clear polypropylene sleeve to protect against wet weather conditions.

These instruments are able to operate from 85 to 250 Vac, 50/60 Hz without a voltage selector switch. They may also be



PEO Detection Page 360 of 461

powered from the supplied vehicle cigarette lighter adapter, or three or six "D" cell batteries.

Water-Resistant Versions

Ludlum also offers some water-resistant versions: Models 52-1W (PN 48-4300), 52-1-1W (PN 48-3516) and 52-6-1W (PN 48-4312). Note that these water-resistant versions can only be used for gamma contamination monitoring.

Vehicle Monitoring


The Model 52-1, 52-5, and 52-6 Series can also be used as vehicle monitors using the optional vehicle conversion kit (PN 4215-374 for standard models, PN 4215-1099 for waterresistant models). The kit includes two stands to support the side detectors and a 6.1 m (20 ft.) cable. See Options tab for more information.

PEO Detection Page 361 of 461

Model 52 Portable Portal Monitor



The Model 52 Portal Monitor is used for Beta-Gamma personnel contamination monitoring and meets the FEMA standard for Emergency Response Portal Monitoring (FEMA-REP-21). It is designed to be assembled in five minutes or less without tools, and can be quickly disassembled for ease of transportation and storage. All parameters are stored in non-volatile memory, which requires no battery backup. These parameters allow easy operation with minimal setup by minimally trained personnel. The parameters are preset at the factory to detect a 1 μ Ci 137 Cs beta window source in a 10 μ R/hr background field, in accordance with the FEMA standard. The Model 52 can be powered by 120 Vac, six "D" cell batteries, or 220 Vac-powered units, which are available as a special order.

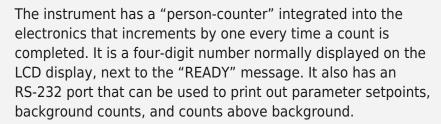

The portal frame incorporates an array of 18 Geiger-Mueller (GM) detectors positioned around the frame and base. Fourteen GM pancake detectors are located in the frame for monitoring the head and body. Four cylindrical GM detectors are utilized in the base for monitoring the feet. The electronics are microprocessor-based for ease of setup and reliability. Individual LEDs (Light Emitting Diodes) mounted in the frame and also on the electronics front panel indicate the specific alarm location. LEDs in the front panel indicate count cycle status. Audible signals accompany the LEDs for additional indication. Detector counts, background, and all parameters may be viewed on the LCD display. All setup is accomplished via pushbuttons on the electronics assembly.

The Model 52 incorporates a summing alarm in addition to the individual channel alarms. This increases the system sensitivity to widespread contamination. If two or more channels have a noticeable increase in counts but do not exceed their alarm threshold, the sum of their counts could exceed the summing alarm.

The Model 52 also has background update and subtract capabilities. The instrument will take a background count and subtract it from the current count. This function helps



PEO Detection Page 362 of 461

compensate for fluctuations in background. Background subtract can be turned on or off, the background count time is adjustable, and the background interval time is adjustable. The operator can force the instrument to stop and take a background count at a different interval if desired.

The Model 52 is supplied with a polypropylene weather sleeve to protect against wet weather conditions. Units are also supplied with a rugged, wheeled, and padded transport/storage case for rapid deployment.

PEO Detection Page 363 of 461

Model HBP-22 Body Contamination Monitor



Robust, Ergonomically Designed Body Contamination Pre-Monitor

The Model HBP-22 is a body contamination monitor that utilizes beta plastic detectors to measure personnel as a premonitor. Robust, with a modern design that integrates the latest available industrial technology, the system is optimized for users of all sizes.

The key features include:

- 22 beta plastic detectors with semiconductor readout
- Whole body measurement in 2 easy steps
- Automated measurement process with audio-visual user guidance
- Integrated 12 in. touch-screen display
- Intuitive user-friendly software
- · Hand-detector on the side
- Latest industry-controller technology
- Energy filter settings to optimize discrimination of background radiation
- Power provided by internal UPS for several measurements during power loss
- Intuitive User-Friendly Software
- Large Service Space in a Footprint of 900 x 840 mm (35.4 x 33.1 in.) (W x D) with Easy Access to the Service Cabinet
- Modern 12 in. Touch-Screen Display
- Stainless Steel Housing for Easy Cleaning and Durability
- Access to Ludlum's Test Tool Software for Detector Analysis
- Export of Measurement/Parameter Data in XML Format via USB
- Access to Historical Measurement Data via Integrated Database
- Network Capability for Remote Monitoring



PEO Detection Page 364 of 461

Model HBP-29 Body Contamination Monitor



The Model HBP-29 is a whole-body contamination monitor designed to measure personnel leaving controlled areas.



Features:

- Intuitive User-Friendly Software
- Large Service Space in a Footprint of 900 x 840 mm (35.4 x 33.1 in.) (W x D) with Easy Access to the Service Cabinet
- Modern Touch-Screen Display
- Access to Ludlum's Test Tool Software for Detector Analysis
- Export of Measurement/Parameter Data in XML Format via USB
- Access to Historical Measurement Data via Integrated Database
- Remote Access via Web Browser Interface

Standard features include:

- 29 beta plastic detectors with semiconductor readout
- Stainless steel housing for easy cleaning and durability
- Ergonomic detector positioning
- Hand-detector on the side
- Integrated 17 in. touch-screen display
- Automated measurement process with audio-visual guidance
- Latest industry-controller technology
- Energy filter settings to optimize discrimination of background radiation
- Power provided by UPS for several measurements during power loss
- Designed to meet industry and regulatory standards

PEO Detection Page 365 of 461

Model 375P-1000 Outdoor Radiation Contamination Monitor - Ludlum



The Model 375P-1000 Outdoor Radiation Contamination Monitor (Ludlum) is a Digital Model 375 controller coupled to 2 shielded 7866 cm² plastic scintillator detectors. The detectors are covered in weathertight enclosures applicable for the outside environment. The Model 375P-1000 Outdoor Radiation Contamination Monitor is perfect for examine outgoing trash and/or medical waste for possible low-level radioisotope contamination.



Model 375P-1000 Outdoor Radiation Contamination Monitor features:

- indicates status, sum alarm, sigma alarm, low battery, det fail and overrange
- 4-digit LED display with 2 cm (0.8 in.) digits
- range: 0.0 to 9999 kcps
- battery backup
- programmable alarms
- network cable
- data output: 9-pin connector providing RS-232 output, signal ground connection, FAIL and ALARM signals and direct connection to battery and ground
- relay output: mains (120 or 240 Vac) output on alarm

Read more about the Model 375P-1000 Outdoor Radiation Contamination Monitor on the <u>Ludlum</u> website

PEO Detection Page 366 of 461

Partner Helgeson Scientific Services (HSS)





Helgeson Scientific Services (HSS) designs and manufactures advanced radiation monitoring systems focused on personnel safety, facility protection, and waste control. Their portfolio includes whole-body monitors, portal

detection systems, and waste management solutions—each developed to support the safe handling of radiological materials in critical environments.

Product offering















PEO Detection Page 367 of 461

HS-BEXA - Alpha Beta hand feet monitor



The HS-BEX monitors are multitasking equipment designed for the detection and measurement of radiation ALPHA and BETA on the hands and feet of potentially exposed personnel through a fully automatic operation.

The system can be configured to have 3, 4, 6 or 7 detectors depending on the application and budget. An equipment that complies with the highest quality standards, designed and assembled in Spain.



PEO Detection Page 368 of 461

HS-BEX - Beta gamma hand feet monitor



The HS-BEX monitors are multitasking equipment designed for the detection and measurement of radiation BETA and GAMMA on the hands and feet of potentially exposed personnel through a fully automatic operation.

The system can be configured to have 3, 4, 6 or 7 detectors depending on the application and budget. An equipment that complies with the highest quality standards, designed and assembled in Spain.



PEO Detection Page 369 of 461

DIYS - Bed type whole body counter for internal dosimetry



PEO Detection Page 370 of 461

HS-ABOMO - Alpha beta gamma portal for personnel monitoring



Multitasking two-step device

The HS-ABOMO unit is a multitasking two-step device designed for the detection and measurement of radioactive contamination, ALPHA, BETA and GAMMA, on potentially exposed personnel.

It has been specifically designed for controlled areas. It includes up to 31 detectors, which work autonomously and independently, allowing to perform simultaneous measurements with different alarm levels.

The user can identify exactly in a different channel the beta cps and gamma cps since the detectors are different for each type of radiation. Its operation is fully automated. The equipment has sensors that detect when a person enters the portal, interrupting the background acquisition and initiating automatically a thorough examination of the subject.



PEO Detection Page 371 of 461

HS-BOMO - Beta gamma portal for personnel monitoring



Multitasking two-step device

The HS-BOMO unit is a multitasking two-step device designed for the detection and measurement of radioactive contamination, BETA and GAMMA, on potentially exposed personnel.

It has been specifically designed for controlled areas. It includes up to 31 detectors, which work autonomously and independently, allowing to perform simultaneous measurements with different alarm levels.

The user can identify exactly in a different channel the beta cps and gamma cps since the detectors are different for each type of radiation. Its operation is fully automated. The equipment has sensors that detect when a person enters the portal, interrupting the background acquisition and initiating automatically a thorough examination of the subject.



PEO Detection Page 372 of 461

HS-RAM - Gamma portal for personnel monitoring



Completely autonomous equipment

The HS-RAM monitors are completely autonomous equipment designed for the detection and measurement of gamma radiation on exposed workers.

They are designed to perform high speed measurements, allowing fast counting of a high volume of nuclear power plant workers. With different versions that customize the number of detectors, size, barriers, etc. the HS-RAM is without doubts the most flexible gamma portal for fast screening of personnel.



PEO Detection Page 373 of 461

QUICKY - Whole body counter for internal dosimetry



Helgeson "Quicky" In-Vivo Counter is designed to complement any health physics program which includes routine whole body counting.

The "Quicky" is used to rapidly screen personnel or it can be used with a fixed counting time to obtain more precise results. The printed results provide the documentation for subject identification, counting time and date. Results are reported in Becquerel or Nano curies. The "Quicky" can reduce your regular counting requirements and costs significantly.

User-friendly software

Software for the "Quicky" is "user-friendly" with a menu format which provides a variety of standard and optional operating programs. System performance software includes a Quality Assurance program which checks the electronics of system, reporting any errors to the operator. An Energy Calibration program allows the gains of the individual detector-amplifier systems to be adjusted to uniformity and conformity to the design parameters.

- Data Acquisition, continuous spectral display.
- Data Analysis with graphs of original data and residuals.
- Calibrations: Energy vs. Channel and Efficiency, FWHM vs Channel.
- Parameter Modification for complete control: acquisition, analysis & miscellaneous parameters.
- File Maintenance.
- Dose calculating software based on ICRP recommendations and approved by the Spanish Nuclear Council.



PEO Detection Page 374 of 461

PORTAL MONITORS





Partner Polimaster





Polimaster is a global leader in radiation detection and monitoring solutions, offering a comprehensive suite of instruments designed to detect, identify, and measure ionizing radiation across various environments. Their product range includes handheld monitors, personal electronic dosimeters, portable isotope identifiers, portal monitors, and mobile detection systems, all engineered to meet the rigorous demands of security, emergency response, and industrial

applications.

Product offering























PEO Detection Page 376 of 461



Poligate Light G1 RPM



Lightweight one-sided model equipped with one gamma detector.

The **PoliGate™ Light G1** is a one-sided **gamma-only** Radiation Portal Monitor (RPM) equipped with one detector and is a **high-sensitive fixed system** designed for permanent installation and providing continuous radiation detection and monitoring of vehicles, people, or packages.

The **PoliGate™ Light series** is a simplified series of Polimaster RPMs that is available in a **more compact and lightweight design** and its detection blocks can be mounted on a frame or wall.

Features

- Lightweight design
- Control zone up to 1.5 m x 2 m (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP55
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 378 of 461

PoliGate™ Vehicle G4 RPM



Double-sided gamma model equipped with four gamma detectors.

The PoliGate™ Vehicle G4 is a double-sided gammaonly Radiation Portal Monitor (RPM) equipped with four 11Lgamma detectors and is a high-sensitive fixed system designed for permanent installation and providing continuous radiation detection and monitoring of moving objects.

The **PoliGate™ Vehicle series** is an essential tool for safeguarding against the potential threat of nuclear materials entering secure areas and can be used for screening **trains**, **trucks**, **vehicles**, **cargo containers**, **luggage**, and **people**.

Features

- IEC 62244:2019 compliance
- Control zone up to 6 x 4.5 (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP65
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 379 of 461

PoliGate™ Pedestrian G1 RPM



One-sided gamma model equipped with one (11L) gamma detector.

The **PoliGate™ Pedestrian G1** is a one-sided **gamma-only** Radiation Portal Monitor (RPM) equipped with one 11L-gamma detector and one neutron detector and is a **high-sensitive fixed system** designed for permanent installation and monitoring of people or packages for the presence of radioactive materials.

The **PoliGate™ Pedestrian series** is an essential component of any facility that requires strict security measures, including government buildings, research facilities, and nuclear power plants. The compact and ergonomic design of the RPM makes it a convenient solution for use in various applications for screening **people**, **luggage**, **and cargo**.



- IEC 62244:2019 compliance
- Control zone up to 1.5 x 2 (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP65
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 380 of 461

PoliGate™ Pedestrian GN2 RPM



Double-sided gamma-neutron model equipped with two gamma (6.6L each) and two neutron detectors.

The **PoliGate™ Pedestrian GN2** is a double-sided **gamma-neutron** Radiation Portal Monitor (RPM) equipped with two 6.6L-gamma and one neutron detector and is a **high-sensitive fixed system** designed for permanent installation and monitoring of people or packages for the presence of radioactive materials.

The **PoliGate™ Pedestrian series** is an essential component of any facility that requires strict security measures, including government buildings, research facilities, and nuclear power plants. The compact and ergonomic design of the RPM makes it a convenient solution for use in various applications for screening **people**, **luggage**, **and cargo**.



- IEC 62244:2019 compliance
- Control zone up to 1.5 x 2 (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP65
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 381 of 461

Poligate Light G2 RPM



Lightweight double-sided model equipped with two gamma detectors.

The **PoliGate™ Light G2** is a double-sided **gamma-only** Radiation Portal Monitor (RPM) equipped with two detectors and is a high-sensitive fixed system designed for permanent installation and providing continuous radiation detection and monitoring of vehicles, cargo containers, people, or packages.

The **PoliGate™ Light series** is a simplified series of Polimaster RPMs that is available in a **more compact and lightweight design** and its detection blocks can be mounted on a frame or wall.

Features

- Lightweight design
- Control zone up to 6 m x 2 m (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP55
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 382 of 461

Poligate Light G4 RPM



Lightweight double-sided model equipped with four gamma detectors.

The **PoliGate™ Light G4** is a double-sided **gamma-only** Radiation Portal Monitor (RPM) equipped with four detectors and is a high-sensitive fixed system designed for permanent installation and providing continuous radiation detection and monitoring of vehicles, cargo containers, people, or packages.

The **PoliGate™ Light series** is a simplified series of Polimaster RPMs that is available in a **more compact and lightweight design** and its detection blocks can be mounted on a frame or wall.

Features

- Lightweight design
- Control zone up to 6 m x 4.5 m (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP55
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 383 of 461

Poligate Pedestrian GN1 RPM



One-sided gamma-neutron model equipped with one gamma (6.6L) and one neutron detector.

The **PoliGate™ Pedestrian GN1** is a one-sided **gamma-neutron** Radiation Portal Monitor (RPM) equipped with one 6.6L-gamma and one neutron detector and is a **high-sensitive fixed system** designed for permanent installation and monitoring of people or packages for the presence of radioactive materials.

The **PoliGate™ Pedestrian series** is an essential component of any facility that requires strict security measures, including government buildings, research facilities, and nuclear power plants. The compact and ergonomic design of the RPM makes it a convenient solution for use in various applications for screening **people**, **luggage**, **and cargo**.

Features

- IEC 62244:2019 compliance
- Control zone up to 1.5 x 2 (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP65
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 384 of 461

Poligate Deployable RPM



Gamma-only model transported in plastic protective cases and designed for fast deployment.

The **PoliGate™ Deployable** is a **gamma-only** Radiation Portal Monitor (RPM) highly sensitive **deployable radiation monitor** designed to detect radioactive and nuclear materials transported through a controlled area.

This fast deployable RPM is designed to provide high mobility and flexibility, allowing it to be used in various settings to screen individuals, vehicles, or cargo at the scene of an incident or in temporary screening situations such as at major public mass events.

Features

- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Wide gamma energy range from 30 keV to 3 MeV
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system
- Optional Ethernet / Wi-Fi connection



PEO Detection Page 385 of 461

Poligate Pedestrian G2 RPM



Double-sided gamma model equipped with two (11L each) gamma detectors.

The PoliGate™ Pedestrian G2 is a double-sided gammaonly Radiation Portal Monitor (RPM) equipped with two 11Lgamma detectors and is a high-sensitive fixed system designed for permanent installation and monitoring of people or packages for the presence of radioactive materials.

The **PoliGate™ Pedestrian series** is an essential component of any facility that requires strict security measures, including government buildings, research facilities, and nuclear power plants. The compact and ergonomic design of the RPM makes it a convenient solution for use in various applications for screening **people, luggage, and cargo**.



- IEC 62244:2019 compliance
- Control zone up to 1.5 x 2 (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP65
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 386 of 461

Poligate Vehicle G4N4 RPM



Double-sided gamma-neutron model equipped with four gamma and four neutron detectors.

The **PoliGate™ Vehicle G4N4** is a double-sided **gamma-neutron** Radiation Portal Monitor (RPM) equipped with four 11L-gamma and four neutron detectors and is a **high-sensitive fixed system** designed for permanent installation and providing continuous radiation detection and monitoring of moving objects.

The **PoliGate™ Vehicle series** is an essential tool for safeguarding against the potential threat of nuclear materials entering secure areas and can be used for screening **trains**, **trucks**, **vehicles**, **cargo containers**, **luggage**, **and people**.

Features

- IEC 62244:2019 compliance
- Control zone up to 6 x 4.5 (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP65
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 387 of 461

Poligate Vehicle G2 RPM



Double-sided gamma model equipped with two gamma detectors.

The PoliGate™ Vehicle G2 is a double-sided gammaonly Radiation Portal Monitor (RPM) equipped with two 11Lgamma detectors and is a high-sensitive fixed system designed for permanent installation and providing continuous radiation detection and monitoring of moving objects.

The **PoliGate™ Vehicle series** is an essential tool for safeguarding against the potential threat of nuclear materials entering secure areas and can be used for screening**trucks**, **vehicles**, **cargo containers**, **luggage**, **and people**.

Features

- IEC 62244:2019 compliance
- Control zone up to 6 x 2 (W x H)
- Wide gamma energy range from 20 keV to 3 MeV
- No stop of an object is required for the inspection
- Lead shielding for natural background rejection
- Ingress protection IP65
- Local and remote light and audible alarm annunciators
- Back-up battery providing at least 8 hours of operation
- Presence detection system (occupancy sensors)
- Adjustable sensitivity parameters for specific applications
- Optional video surveillance system



PEO Detection Page 388 of 461

Partner Radiation Solutions Inc.





Radiation Solutions Inc. (RSI) is a Canadian-based company specializing in advanced radiation detection and monitoring systems, with a focus on portal monitors for diverse applications. Their technologies are designed to ensure

safety and compliance in industries such as steel, scrap, recycling, and border security.

Product offering


RS-200 / 3000 Radiation Portal Monitoring Systems (Radiation Solutions)



RS-200 / 6000 Radiation Portal Monitoring Systems (Radiation Solutions)



RS-200 / 10000 Radiation Portal Monitoring Systems (Radiation Solutions)

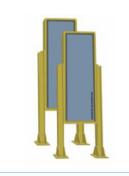

RS-300 Radiation Portal Monitoring Systems (Radiation Solutions)



RS-400 Radiation Portal Monitoring Systems (Radiation Solutions)



PEO Detection Page 389 of 461

RS-200 / 3000 Radiation Portal Monitoring Systems (Radiation Solutions)



The RS-200 systems (Radiation Solutions) are 2 PMT based fully digital systems specially designed for the difficult operating conditions of scrap and aluminum processing plants. These systems combine exceptional performance with minimum false and nuisance alarms through advanced digital design and spectral analysis.



The system is fully modular which makes it easily configurable to suit local logistics and permits fast, easy maintenance. The system operates independently and has direct Ethernet connectivity to plant networks. This connectivity allows for a fully integrated plant design with the ability for RSO overview on all installed systems.

RS-200 / 3000 Radiation Portal Monitoring Systems features:

- detector volume: 1512 in3 (23.5L) maximum 16 detectors
- fully digital system design no user adjustments
- 2 PMT technology for high sensitivity + high noise rejection 10/sec data sampling rate for optimum data analysis
- advanced 4096/128 channel spectrometer system for improved analysis
- spectral analysis permits rejection of the majority of false, rain and void alarms prevalent in most systems without reducing system sensitivity
- alarm classification to sort alarms into scrap and non-scrap categories for better control
- minimum nuisance alarms due to advanced signal screening and pattern recognition
- system sensitivity analysis and auto correction to minimize signal loss with NO radioactive sources required to test system performance
- 15" color touch screen display for easy user interfacing
- local printer for alarm printout
- GPS connection for accurate location and timing
- direct connection to the plant network enabling RSO overview of all alarms on all systems
- real-time (1/sec) error reporting to RSI service via the Internet for fast support and system overview
- 48V operation to minimize voltage drops on long cables
- modular system design for easy on site service by local staff for "instant" service support
- 24/7 tech support for fast responsive support from technical people if required

PEO Detection Page 390 of 461

RS-200 / 6000 Radiation Portal Monitoring Systems (Radiation Solutions)



The RS-200 systems are 2 PMT based fully digital systems specially designed for the difficult operating conditions of scrap and aluminum processing plants. These systems combine exceptional performance with minimum false and nuisance alarms through advanced digital design and spectral analysis.

The system is fully modular which makes it easily configurable to suit local logistics and permits fast, easy maintenance. The system operates independently and has direct Ethernet connectivity to plant networks. This connectivity allows for a fully integrated plant design with the ability for RSO overview on all installed systems.



RS-200 / 6000 Radiation Portal Monitoring Systems features:


- detector volume: 3000 in3 (24L) maximum 16 detectors
- fully digital system design no user adjustments
- 2 PMT technology for high sensitivity + high noise rejection 10/sec data sampling rate for optimum data analysis
- advanced 4096/128 channel spectrometer system for improved analysis
- spectral analysis permits rejection of the majority of false, rain and void alarms prevalent in most systems without reducing system sensitivity
- alarm classification to sort alarms into scrap and non-scrap categories for better control
- minimum nuisance alarms due to advanced signal screening and pattern recognition
- system sensitivity analysis and auto correction to minimize signal loss with NO radioactive sources required to test system performance
- 15" color touch screen display for easy user interfacing
- local printer for alarm printout
- GPS connection for accurate location and timing
- direct connection to the plant network enabling RSO overview of all alarms on all systems
- real-time (1/sec) error reporting to RSI service via the Internet for fast support and system overview
- 48V operation to minimize voltage drops on long cables
- modular system design for easy on site service by local staff for "instant" service support
- 24/7 tech support for fast responsive support from technical people if required

PEO Detection Page 391 of 461

RS-200 / 10000 Radiation Portal Monitoring Systems (Radiation Solutions)



The RS-200 systems are 2 PMT based fully digital systems specially designed for the difficult operating conditions of scrap and aluminum processing plants. These systems combine exceptional performance with minimum false and nuisance alarms through advanced digital design and spectral analysis.

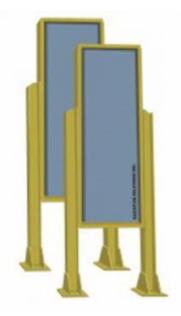

The system is fully modular which makes it easily configurable to suit local logistics and permits fast, easy maintenance. The system operates independently and has direct Ethernet connectivity to plant networks. This connectivity allows for a fully integrated plant design with the ability for RSO overview on all installed systems.

RS-200 / 10000 Radiation Portal Monitoring Systems features:

- detector volume: 5000 in3 (73L) maximum 16 detectors
- fully digital system design no user adjustments
- 2 PMT technology for high sensitivity + high noise rejection 10/sec data sampling rate for optimum data analysis
- advanced 4096/128 channel spectrometer system for improved analysis
- spectral analysis permits rejection of the majority of false, rain and void alarms prevalent in most systems without reducing system sensitivity
- alarm classification to sort alarms into scrap and non-scrap categories for better control
- minimum nuisance alarms due to advanced signal screening and pattern recognition
- system sensitivity analysis and auto correction to minimize signal loss with NO radioactive sources required to test system performance
- 15" color touch screen display for easy user interfacing
- local printer for alarm printout
- GPS connection for accurate location and timing
- direct connection to the plant network enabling RSO overview of all alarms on all systems
- real-time (1/sec) error reporting to RSI service via the Internet for fast support and system overview
- 48V operation to minimize voltage drops on long cables
- modular system design for easy on site service by local staff for "instant" service support
- 24/7 tech support for fast responsive support from technical people if required

PEO Detection Page 392 of 461

RS-300 Radiation Portal Monitoring Systems (Radiation Solutions)



The RS-300 system is a 3PMT based super-Coincidence fully digital system specially designed for the difficult operating conditions of many Steel and Scrap processing plants. This system uses medium volume detectors for good vehicle coverage. Also, in order to permit easy replacement and upgrades, the detectors are identical is size to most commonly used detectors in the field today.



The system is fully MODULAR to make it easily configurable to suit local logistics. The system operates independently but has direct Ethernet connectivity to Plant networks that permit a fully integrated Plant design with RSO overview on all installed systems. USB/Serial connectivity also enables system configuration to suit user needs for local displays, local or Network printers, scale computer integration etc.

RS-300 Radiation Portal Monitoring Systems features:

- 3000 cu ins (3024 cu ins actual) detector assemblies max 16 detectors
- fully digital system design no complicated user adjustments
- 3 PMT technology for high sensitivity + high noise rejection
- 10/sec data sampling rate for optimum data analysis
- advanced 128 channel spectrometer system
- full spectral NASVD analysis for high sensitivity with essentially zero false alarms
- essentially zero void and rain alarms due to advanced spectral analysis
- fully integrated networking for integration into the plant network
- quad optical sensors with 500Hz data sampling for accurate vehicle sensing
- 12" or 15" color touch screen display for easy user interfacing
- alarm classification if required to sort alarms into scrap and non-scrap
- 48V operation to minimize voltage drops on long cables
- auto connection to RSI service centre via the Internet for fast service support
- RSO software supplied for alarm analysis direct from RSO office
- real-time (1/sec) error reporting to RSI service via the Internet for fast support
- automatic system sensitivity monitoring with auto gain correction
- modular system design for easy servicing

Models available:

- RS-300/6000 = 2 detector system
- RS-300/9000 = 3 detector system
- RS-300/12000 = 4 detector system
- RS-300/15000 = 5 detector system
- RS-300/18000 = 6 detector system
- RS-300/21000 = 7 detector system
- RS-300/24000 = 8 detector system

PEO Detection Page 393 of 461

RS-400 Radiation Portal Monitoring Systems (Radiation Solutions)



The RS-400 system is a 4PMT based super-Coincidence fully digital system specially designed for the difficult operating conditions of many Steel and Scrap processing plants. This system uses large volume detectors for optimum vehicle coverage. These long detectors suffer substantially from signal loss using conventional technology so RSI has developed a 4PMT technology utilizing PMTs at BOTH ends of the detector for greatly improved signal collection and spectral shape.



The system is fully MODULAR to make it easily configurable to suit local logistics. The system operates independently but has direct Ethernet connectivity to Plant networks that permit a fully integrated Plant design with RSO overview on all installed systems. USB/Serial connectivity also enables system configuration to suit user needs for local displays, local or Network printers, scale computer integration etc.

RS-400 Radiation Portal Monitoring Systems features:

- 5000 cu ins (4698 cu ins actual) detector assemblies max 16 detectors
- fully digital system design no complicated user adjustments
- 4 PMT technology for high sensitivity + high noise rejection on long detectors
- 10/sec data sampling rate for optimum data analysis
- advanced 128 channel spectrometer system
- full spectral NASVD analysis for high sensitivity with essentially zero false alarms
- essentially zero void and rain alarms due to advanced spectral analysis
- fully integrated networking for integration into the plant network
- quad optical sensors with 500Hz data sampling for accurate vehicle sensing
- 12" or 15" color touch screen display for easy user interfacing
- alarm classification if required to sort alarms into scrap and non-scrap
- 48V operation to minimize voltage drops on long cables
- auto connection to RSI service centre via the Internet for fast service support
- RSO software supplied for alarm analysis direct from RSO office
- real-time (1/sec) error reporting to RSI service via the Internet for fast support
- automatic system sensitivity monitoring with auto gain correction
- modular system design for easy servicing

Models available:

- RS-400/10000 = 2 detector system
- RS-400/15000 = 3 detector system
- RS-400/20000 = 4 detector system
- RS-400/25000 = 5 detector system
- RS-400/30000 = 6 detector system

PEO Detection Page 394 of 461

- RS-400/35000 = 7 detector system
 RS-400/40000 = 8 detector system

Page 395 of 461 **PEO** Detection

Partner Ludlum Measurements Inc.





Ludlum Measurements, Inc. is a trusted global provider of radiation detection and monitoring instruments, offering rugged, accurate solutions for personnel safety, environmental protection, and security screening. Since 1962, their

equipment has been used worldwide in applications ranging from nuclear power and emergency response to border protection and critical infrastructure monitoring.

Product offering

Model 4525 Series Radiation Portal Monitor



Model 4525-5000 Radiation Portal Monitor - Ludlum



Model 4525-7000 Radiation Portal Monitor - Ludlum



Model 4530 Series Radiation Portal Monitor



Model 375P-3500 Conveyor Monitor -Ludlum



Model 52-8 Series Outdoor Portal Monitor



PEO Detection Page 396 of 461

Model 4525 Series Radiation Portal Monitor



All Model 4525 systems with 57 L (3500 in³) detectors now come with new 5th generation NEMA 4 enclosures.

The new enclosures are manufactured with a 14-gauge carbon steel body and a 2 mm (0.080 in.) aluminum door for increased sensitivity. Using stainless steel concealed hinges and quarter turn latches for easy accessibility, they are 70 mm (2.75 in.) slimmer than the previous generation, reducing waste and cost.

Ask about our NEMA 4X stainless steel upgrade option for increased corrosion protection!

The Model 4525 Series of Radiation Portal Monitors (RPMs) represents state-of-the-art technology for detecting low levels of radiation, such as orphan radiation sources and NORM (naturally occurring radioactive materials), at facilities including scrap yards, recycling companies, landfills, and foundries. These systems are composed of ruggedized, large plastic scintillation detectors optimally arranged to monitor items passing through. Each system can be configured with two to six large detectors, with individual detector volumes of 9.8 L (600 in³), 41 L (2500 in³), or 57 L (3500 in³).

Real-time data acquisition and analysis is performed directly at each detector system and then reported to a central PC for logging, reporting, and alarm notification. Up to four detector systems (lanes) can be networked together via Ethernet or wirelessly to a central PC so that vehicles entering from either direction can be monitored in real time. An optional remote control/annunciator panel is available to support operator awareness, alarm acknowledgement, and if necessary, backup operation in the event the central PC is unavailable.

Data from all the system sensors are acquired and checked by powerful, field-tested, and time-proven algorithms designed to check each load vigorously in a multi-dimensional and multi-layered manner before declaring any load as clean. Any abnormality is immediately indicated via both local and remote alarms. An optional camera system can capture an image of the offending vehicle and store the image with the logged data for permanent record keeping. Alarms can also be configured to automatically notify shift supervisors directly by e-mail if desired.

The system is designed for ease of use and can be customized



PEO Detection Page 397 of 461

to accommodate a wide variety of site and application specific criteria. Intuitive menus and controls combined with predefined automatic event handlers ensure each situation is handled properly and consistently.

Features

- Use to Monitor Trucks, Rail Cars, Personal Vehicles, etc.
- Large, Highly Sensitive, Industrial Duty Plastic Scintillation Detectors
- Reliable Operation with Very Low False Positives
- Flexible Configurations Accommodate Up to Four Lanes,
 Each with Two to Six Detectors
- Real-time Central Data Logging, Reporting, and Alarm Notification
- Bi-Directional Entry
- User-Friendly Operation
- Excellent Service and 24-Hour Tech Support
- 8-hour Battery Backup in Event of Power Loss
- Modular and Upgradeable
- Variety of Options to Customize the System to Meet Your Needs
- Made in USA

PEO Detection Page 398 of 461

Model 4525-5000 Radiation Portal Monitor - Ludlum



The newly reconfigured Ludlum 4525-Generation IV Series of Radiation Portal Monitors (RPMs) represents state-of-the-art technology for detecting orphan radiation sources and NORM. The revised systems are upgradable, with a lower cost of ownership, and represent a lower initial purchase price.



The Gen IV series of RPM systems are ruggedized, large plastic scintillation systems that can be optimally arranged to monitor moving vehicles entering into the system. Each detector system can be configured with two to six large detectors.

Model 4525-5000 Radiation Portal Monitor features:

- real-time central data logging, alarm notification and reporting
- user-friendly operation
- large size, high sensitivity Industrial Duty Detectors
- upgradable and modular system
- 2 detector systems
- bi-directional entry
- logs vehicle images and camera captures (optional)
- EJ-200 plastic scintillator

Read more about the Model 4525-5000 Radiation Portal Monitor on the Ludlum website

PEO Detection Page 399 of 461

Model 4525-7000 Radiation Portal Monitor - Ludlum



The Ludlum 4525-7000 Radiation Portal Monitor (RPM) represents state-of-the-art technology at detecting orphan radiation sources. Ludlum has sold over 800 of these types of systems throughout the world to scrap yards, recycling companies, landfills, and foundries. The Model 4525 series detectors are ruggedized large plastic scintillation systems that can be optimally arranged to monitor moving vehicles entering into the system.



Model 4525-7000 Radiation Portal Monitor features:

- real-time central data logging and reporting
- 76.2 m (250 ft) CAT 5e cable
- dual presence/speed sensors
- remote annunciator panel
- bi-directional entry
- camera image capturing and dB storage (optional)
- rail car mode
- two weather protected plastic scintillator detectors

Read more about the Model 4525-7000 Radiation Portal Monitor on the Ludlum website

PEO Detection Page 400 of 461

Model 4530 Series Radiation Portal Monitor



The Model 4530 Series of Radiation Portal Monitors (RPMs) represents state-of-the-art technology for detecting low levels of radiation, such as orphan radiation sources and NORM (naturally occurring radioactive materials), at facilities including scrap yards, recycling companies, landfills, and foundries. These systems are composed of ruggedized, large plastic scintillation detectors optimally arranged to monitor items passing through. Each system can be configured with one to six large detectors, with individual detector volumes of 39.7 L (2117 in³) or 57 L (3500 in³).

Real-time data acquisition and analysis is performed directly at each detector system and then reported to the internal PC for logging, reporting, and alarm notification. Up to four detector systems (lanes) can be networked together via Ethernet or wirelessly to a central PC so that vehicles entering from either direction can be monitored in real time. An optional remote control/annunciator panel is available to support operator awareness, alarm acknowledgement, and if necessary, backup operation in the event the internal PC is unavailable.

Data from all the system sensors are acquired and checked by powerful, field-tested, and time-proven algorithms designed to check each load vigorously in a multi-dimensional and multi-layered manner before declaring any load as clean. Any abnormality is immediately indicated via both local and remote alarms. An optional camera system can capture an image of the offending vehicle and store the image with the logged data for permanent record keeping. Alarms can also be configured to automatically notify shift supervisors directly by e-mail if desired.

The system is designed for ease of use and can be customized to accommodate a wide variety of site and application specific criteria. Intuitive menus and controls combined with predefined automatic event handlers ensure each situation is handled properly and consistently.

All of the main components of these systems are manufactured in-house in the USA.

Features

- Made in USA
- Monitor Trucks, Rail Cars, Personal Vehicles, etc.
- Large, Highly Sensitive, Industrial Duty Plastic Scintillation Detectors



PEO Detection Page 401 of 461

- Reliable Operation with Very Low False Positives
- Flexible Configurations Accommodate Up to Four Lanes, Each with One to Six Detectors
- Real-time Central Data Logging, Reporting, and Alarm Notification
- Bi-Directional Entry
- User-Friendly Operation
- Excellent Factory Service and 24-Hour Tech Support
- Modular and Upgradeable
- Variety of Options to Customize the System to Meet Your Needs

Retrofit Option

Ludlum Measurements offers the option to retrofit existing portal monitor systems with the electronics and software used in our Model 4530 Series Radiation Portal Monitors, including systems manufactured by our competitors. Retrofitting allows you to upgrade an aging system without having to purchase new detector housings and stands. Besides our own systems, Ludlum has experience retrofitting systems manufactured by Exploranium, RadComm, SAIC, Mirion/Canberra, and Thermo. Retrofits are customized to your needs, and can also include replacing the plastic scintillator detectors if necessary.

PEO Detection Page 402 of 461

Model 375P-3500 Conveyor Monitor - Ludlum



The Model 375P-3500 Conveyor Monitor (Ludlum) is a radiation detector system to inspect materials at contamination on a conveyor.



Model 375P-3500 Conveyor Monitor features:

- detector delivers superior sensitivity
- controller can operate totally independently or connected to an ethernet network or wired for remote annunciation
- 57.4 L (3500 in²) plastic detector with 15.2 m cable
- 24-Hour battery backup
- check source (10 μCi)
- electronics housed in a NEMA 4X enclosure with external reset button
- see-through viewing window
- weathertight, lead-shielded enclosure

Read more about the Model 375P-3500 Conveyor Monitor on the Ludlum website

PEO Detection Page 403 of 461

Model 52-8 Series Outdoor Portal Monitor



The Model 52-8 is a weather-resistant portable scintillation portal monitor used for beta-gamma radiation monitoring of vehicles, as well as monitoring of personnel. Two plastic scintillation detectors, one per side, are housed in weatherproof, dust-tight, impact-resistant cases with wheels and tow handles. Microprocessor-based electronics are housed in a third case with matching characteristics, plus a mounted On/Off toggle switch and an optional red/green strobe light. The system provides high sensitivity for detecting very low levels of radiation coming from personnel or vehicles that move through the portal.

Ease of setup, adjustable audio signals, and user-friendly LCD display that provides detector counts, background levels, and system parameters, and the ability to operate via vehicle cigarette lighter plug or batteries, keep the Model 52-8 applicable to a variety of different situations. This instrument meets the Federal Emergency Management Agency (FEMA) standard for Emergency Management Response Portal Monitoring (FEMA-REP-21).

Features

- Portable Weatherproof Monitor
- Deploys in 5 Minutes
- Vehicle or Personnel Screen Compatibility
- Audible & Visual Alert Signals
- Two Sizes: 15.7 L (960 in³) or 32.7 L (2000 in³)



PEO Detection Page 404 of 461

Partner Helgeson Scientific Services (HSS)





Helgeson Scientific Services (HSS) designs and manufactures advanced radiation monitoring systems focused on personnel safety, facility protection, and waste control. Their portfolio includes whole-body monitors, portal

detection systems, and waste management solutions—each developed to support the safe handling of radiological materials in critical environments.

Product offering









HS-VGAM - Portal vehicle for scrap yards



The HS-VGAM unit is an automated multitasking device, designed for the detection and measurement of gamma radiation on potentially exposed material, transported in vehicles.

It is particularly suitable fort he detection of radioactive sources in loads of raw materials, scrap and waste materials.



PEO Detection Page 406 of 461

HS-PORT - Portable Gamma Portal monitor for personnel and vehicles



The HS-PORT has been designed for the detection and measurement of gamma radiation on potentially contaminated personnel, vehicles, etc.

It has a very fast deployment (one person in 2 minutes) and can be used in several applications like emergency response, monitoring of critical facilities, monitoring of events like concerts, sport events, etc. The system is operated remotely with a mobile phone or laptop without any additional cable connection.



PEO Detection Page 407 of 461

HS-PoNal



Detectors:

- Nal scintillation detector (can be customized: Csl, LaBr, CeBr, etc.)
- Number of detectors: 1 detector (can be upgraded to 2 detectors)
- Detector size: 4x4x16 inches (3x5x16" also available)
- Energy range: 40 keV 3 MeV

• Electronics:

- Plug-in MCA with 2048 channels
- Automatic gain stabilization

• Other features:

- PC with Windows 11
- Software for isotope identification and quantification
- Spectrums displayed in real time, can be saved to be analyzed later
- o GPS
- Hard disk memory up to 125 Gb
- Remote connection with tablets, PCs, etc.
- Dimensions: 730 x 160 x 170 mm approx.
- Weight: 25 kg
- Power: 220 115 V , 10 36 VDC
- Battery bank to work autonomously
- ∘ IP67

HS-PoNal is a fantastic solution for a quick and efficient **insitu isotope identification** in different applications. It is a strong and customizable equipment with a very simple and intuitive operation thanks to its automatic isotope identification and quantification software. It is equipped with a 4 liters NaI detector (4x4x16"), and all electronics are installed inside a PeliCase providing IP67 protection. Communication can be done remotely via tablet or another device.



PEO Detection Page 408 of 461

RADIATION MOBILE DETECTION SYSTEMS





Partner Polimaster





Polimaster is a global leader in radiation detection and monitoring solutions, offering a comprehensive suite of instruments designed to detect, identify, and measure ionizing radiation across various environments. Their product range includes handheld monitors, personal electronic dosimeters, portable isotope identifiers, portal monitors, and mobile detection systems, all engineered to meet the rigorous demands of security, emergency response, and industrial

applications.

Product offering





PoliPack® G-S Backpack Radiation Detector



PoliPack® GN Backpack Radiation Detector



PoliPack® G Backpack Radiation Detector



PoliPack® GN-S Backpack Radiation Detector



PEO Detection Page 410 of 461

Radiation Detection > Radiation Mobile Detection Systems PoliGate ™ Mobile MDS



Vehicle-based radiation portal monitors for detection on the go.

The PoliGate™ Mobile MDS is a complex solution designed for the automatic scanning of fixed or mobile objects to detect illicit trafficking of radioactive substances and materials. The vehicle-integrated system is highly customizable and available in numerous modifications to cater to the specific requirements of the customers. The vehicle model used for the MDS can differ depending on the needs of the user.

When it comes to securing borders, emergency response, and any situation where rapid response is vital, the PoliGate™ Mobile is a game-changer. Its mobile design allows for **quick deployment at strategic locations**, enabling an efficient inspection (detection, localization, measurement, and identification) of vehicles, cargo, and pedestrians for potential radioactive threats in any place.



PEO Detection Page 411 of 461

PoliPack® G-S Backpack Radiation Detector



Spectroscopic Gamma-only Backpack Radiation Detector.

The **PoliPack® G-S** is a **gamma-only** Backpack-Based Radiation Detection System (BRD) equipped with spectroscopic gamma detectors for identifying radionuclides. It is carried in a compact backpack and controlled remotely via the wired control unit or a smartphone with the free Polismart® iOS and Android App.

The **PoliPack® BRDs** are rugged, lightweight, and fast-deploying devices that provide prompt and reliable detection, location, and identification of multiple and masked isotopes. The device is ideal for undercover radiation surveys in crowded areas, addressing the problems of orphaned and maliciously introduced sources and ensuring security before and during mass events. Radionuclides libraries are uploaded in the BRD and can be customized by users.



PEO Detection Page 412 of 461

PoliPack® GN Backpack Radiation Detector



Gamma-Neutron Backpack Radiation Detector.

The **PoliPack® GN** is a **gamma-neutron** Backpack-Based Radiation Detection System (BRD) equipped with a highly sensitive portable radiation monitor carried in a compact backpack and controlled remotely via the wired control unit or a smartphone with the free Polismart® iOS and Android App.

The **PoliPack® BRDs** are rugged, lightweight, and fast deployable devices that provide prompt and reliable detection, location, and identification of multiple and masked isotopes. The device is ideal for undercover radiation surveys in crowded areas, addressing the problems of orphaned and maliciously introduced sources and ensuring security before and during mass events.



PEO Detection Page 413 of 461

PoliPack® G Backpack Radiation Detector



Gamma-only Backpack Radiation Detector.

The **PoliPack® G** is a **gamma-only** Backpack-Based Radiation Detection System (BRD) equipped with a highly sensitive portable radiation monitor carried in a compact backpack and controlled remotely via the wired control unit or a smartphone with the free Polismart® iOS and Android App.

The **PoliPack® BRDs** are rugged, lightweight, and fast-deploying devices that provide prompt and reliable detection, location, and identification of multiple and masked isotopes. The device is ideal for undercover radiation surveys in crowded areas, addressing the problems of orphaned and maliciously introduced sources and ensuring security before and during mass events.



PEO Detection Page 414 of 461

PoliPack® GN-S Backpack Radiation Detector



Spectroscopic Gamma-Neutron Backpack Radiation Detector.

The **PoliPack® GN-S** is a **gamma-neutron** Backpack-Based Radiation Detection System (BRD) equipped with **spectroscopic** gamma detectors for identifying radionuclides. It is carried in a compact backpack and controlled remotely via the wired control unit or a smartphone with the free Polismart® iOS and Android App.

The **PoliPack® BRDs** are rugged, lightweight, and fast deployable devices that provide prompt and reliable detection, location, and identification of multiple and masked isotopes. The device is ideal for undercover radiation surveys in crowded areas, addressing the problems of orphaned and maliciously introduced sources and ensuring security before and during mass events. Radionuclides libraries are uploaded in the BRD and can be customized by users.



PEO Detection Page 415 of 461

RADIATION PROTECTION GEAR





Partner RADsafe





RADsafe personal radiation protective apparel is setting new standards in innovative and reliable protection for healthcare professionals around the world. Manufactured to exceptionally high standards, RADsafe aprons are

available in a number of ergonomic and gender-specific designs to maximise flexibility and comfort. This means that, if required, RADsafe aprons may be safely and comfortably worn more frequently, or for longer periods.

Product offering
















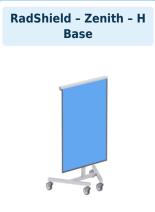

PEO Detection Page 417 of 461

Comfortwear Aprons



The Comfortwear Apron is a flexible fit. Please refer to our apron size measurements to choose your size preference for the required use.

At RadSafe we strive to make our protective aprons simple to apply and remove. Fitting and storage time are critical in the medical industry. The Comfortwear Apron's application time from removing the apron off the storage rack to placing it on the wearer for use is approximately 25 seconds. Additionally, the time from removing the apron off the wearer after use to storing the garment on the storage rack is approximately 20 seconds.

The Comfortwear Apron is ideal for use during short periods of time, particularly for radiology and minor surgeries in addition to nurses and vets.



PEO Detection Page 418 of 461

Urology Aprons



The apron's two vital protective contact points are the shoulders and waist. The Urology Apron is a flexible fit. Please refer to our apron size measurements to choose your size preference for the required use.

At RadSafe we strive to make our protective aprons simple to apply and remove. Fitting and storage time are critical in the medical industry. The application time from removing the apron off the storage rack to placing it on the wearer for use is approximately 25 seconds. Additionally, the time from removing the apron off the wearer after use to storing the garment on the storage rack is approximately 20 seconds.

The Urology Apron is typically worn for urological surgeries or procedures.



PEO Detection Page 419 of 461

Surgical Drop-Away Aprons



The apron's two vital protective contact points are the shoulders and waist. The Surgical Drop-Away Apron is a flexible fit. Please refer to our apron size measurements to choose your size preference for the required use.

At RadSafe we strive to make our protective aprons simple to apply and remove. Fitting and storage time are critical in the medical industry. The application time from removing the apron off the storage rack to placing it on the wearer for use is approximately 25 seconds. Additionally, the time from removing the apron off the wearer after use to storing the garment on the storage rack is approximately 20 seconds.

The Surgical Drop-Away Apron is typically worn for short periods of time. Most suitably worn for radiology and minor surgeries in addition to vets and more.



PEO Detection Page 420 of 461

Radiation Detection > Radiation Protection Gear Maternity Aprons



The apron's three vital protective contact points are the shoulders, underarm and waist. The Maternity Apron is a flexible fit. Please refer to our apron size measurements to choose your size preference for the required use.

At RadSafe we strive to make our protective aprons simple to apply and remove. Fitting and storage time are critical in the medical industry. The application time from removing the apron off the storage rack to placing it on the wearer for use is approximately 50 seconds. Additionally, the time from removing the apron off the wearer after use to storing the garment on the storage rack is approximately 35 seconds.

The Maternity Apron is used during long or short periods of time for procedures in operating theatres, catheter laboratories and more.



PEO Detection Page 421 of 461


RadShield - Apex Series



Mobile radiation protective screens with lead glass viewing panel. Suitable for any environment. Lead equivalence is 2.1 Pb. Height 1990 mm, Depth 650mm.

Screen Types:

- **Type 1**: Width 600mm (310×1000 window) (Narrows to 450mm at top)
- **Type 2**: Width 600mm (460×1000 window)
- **Type 3**: Width 1200mm (1000×500 window)
- **Type 4**: Width 1200mm (1000×1000 window)
- Type 5: Width 600mm (no window)
- Type 6: Width 1200mm (no window)

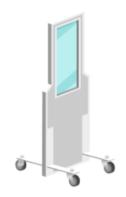

PEO Detection Page 422 of 461

RadShield - Zenith Series



Powder coated steel frames, precision TIG welded for years of trouble-free service completely enclosing the leaded glass panel for increased durability and safety. Includes extra support around base unlike competing models.

Screen Types:

- **Type 1**: 1100mm x 1975mm leadlined Radiation Screen Viewing panel 1000mm x 1800mm.
- **Type 2**: 1100mm x 1975mm leadlined Radiation Screen Viewing panel 1000 x 1330mm.
- **Type 3**: 1100mm x 1975mm leadlined Radiation Screen Viewing panel 1000 x 1000mm.
- **Type 4**: 1300mm x 1975mm leadlined Radiation Screen Viewing panel 1200 x 1000mm.
- **Type 5**: 760mm x 1775mm leadlined Radiation Screen Viewing panel 660 x 1000mm.



PEO Detection Page 423 of 461

RadShield - Zenith - X Base



Height adjustable mobile personal shield, featuring a RadSafe protective panel supported by a powder coated steel frame with precision TIG welds and medical grade wheels for years of trouble-free service.

Unique shield design for todays users, featuring:

- Stable X Base giving increased usability and handling
- Centralised height adjustment allowing no obstructions above the shield
- Middle mount support allowing ease of left hand, right hand or both
- Medical grade castors (wheels) as standard
- RadSafe lead protective panel as standard

Specifications:

- Shield Size: 1200x500mm
- Shield Protection: 0.5mmPb RadSafe Non-Lead Core
- Frame Width: 840mm at user side, 240mm at patient side
- Frame Depth: 520mm
- Frame Height: 1350mm at lowest, 2000mm at highest
- Height Adjust: Manual pull pin, release, lift and lock



PEO Detection Page 424 of 461

RadShield - Zenith - H Base




Height adjustable mobile personal shield, featuring a RadSafe protective panel supported by a powder coated steel frame with precision TIG welds and medical grade wheels for years of trouble-free service.

Unique shield design for todays users, featuring:

- Angled H Base improving usability and handling
- Centralised height adjustment allowing no obstructions above the shield
- Middle mount support allowing ease of left hand, right hand or both
- Medical grade castors (wheels) as standard
- RadSafe lead protective panel as standard


Specifications:

- Shield Size: 1200x500mm
- Shield Protection: 0.5mmPb RadSafe Non-Lead Core
- Frame Width: 840mm at user side, 240mm at patient side
- Frame Depth: 520mm
- Frame Height: 1350mm at lowest, 2000mm at highest
- Height Adjust: Manual pull pin, release, lift and lock

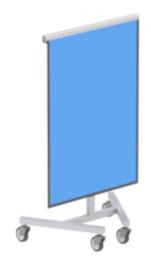

PEO Detection Page 425 of 461

SOURCES

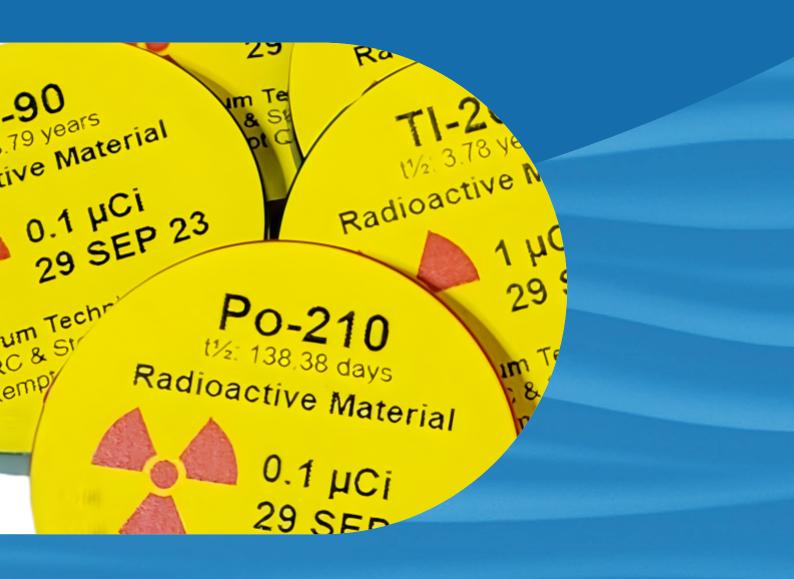



Partner Spectrum Techniques



Spectrum Techniques Spectrum Techniques is a leading provider of radiation detection and measurement solutions, specializing in laboratory equipment and radioactive sources. Their offerings include a range of instruments and detectors designed to support educational, research, and industrial applications.

Product offering

RSS3 Source Set - Spectrum Techniques



RSS-5 Source Set -Spectrum Techniques



RSS-8 Source Set - Spectrum Techniques



Laminated Sources - Spectrum Techniques



Disc Sources - Spectrum Techniques



Isotope Generator - Spectrum Techniques



Tube Sources - Spectrum Techniques



Needle Sources -Spectrum Techniques



PEO Detection Page 427 of 461

Radiation Detection > Sources

RSS3 Source Set - Spectrum Techniques



The RSS-3 contains 1 each Po-210, Sr-90 and Co-60 emitting a range of alpha, beta and gamma radiation's. This set is ideal for demonstration and introductory nuclear labs covering basic characteristics of radiation. The Co-60 is 1.0 uCi and the Po-210 and Sr-90 are 0.1 uCi activity.

Contact one of our product specialists.



PEO Detection Page 428 of 461

Radiation Detection > Sources

RSS-5 Source Set - Spectrum Techniques



Containing 1 each Cs-137, Co-60, Sr-90, Tl-204 and Po-210, the RSS-5 provides a wide of alpha, beta and gamma emissions making it a popular choice for nuclear science instruction. The set contains two beta emitters, two beta/gamma emitters and one alpha source for in-depth studies of radiation. The Cs-137 is 5 uCi, the Po-210 and Sr-90 are 0.1 uCi activity and the Co-60 and Tl-204 are both 1 uCi.

Contact one of our product specialists.



PEO Detection Page 429 of 461

Radiation Detection > Sources

RSS-8 Source Set - Spectrum Techniques



Designed for gamma spectroscopy, the RSS-8 contains eight different gamma emitting isotopes covering the entire energy range from 32 to 1333 keV. Also included in the set is a mixed source of Cs-137 and Zn-65 which students may use to identify an "unknown" isotope. The set consists of Ba-133, Cd-109, Co-57, Co-60, Cs-137, Mn-54. Na-22 and Cs/Zn. Source activities are all 1 uCi, except the Cs/Zn source, which is 0.5 uCi Cs and 1 uCi Zn.

Contact one of our product specialists.



PEO Detection Page 430 of 461

Laminated Sources - Spectrum Techniques



Laminate credit card sources are designed to offer a convenient alternative packaging – easy to handle and store – in various industries including, but not limited to:

- **Laboratories:** They are ideal for performing functional checks on gamma counters or spectrometers.
- Radiation Protection: Laminate credit card sources can be used for functional checks and periodic verifications of radiation protection probes and systems.
- Training and Education: Laminate credit card sources can be used to illustrate fundamental concepts in nuclear physics and radiation science. Students can observe and study radioactive decay, half-life, energy spectra, and interactions of radiation with matter.
- Security: Laminate credit card sources are also useful for functional checks and periodic verifications of portable devices used to identify radiological threats and for conducting emergency exercises.



Each credit card source is constructed using 7.5 mil, heavyweight card stock and is available in one standard size:

• 3.75 x 2.25 inches (95.3 mm x 57.2 mm)

The source material deposit will be 2-3 mm in diameter located at the center of the radiation trefoil.

CALIBRATION OPTIONS

Credit card sources are not available for calibration. The maximum deviation of the delivered activity from the nominal values listed is $\pm 20\%$.

REGULATORY COMPLIANCE

Activities provided will not exceed the U.S. NRC Exempt Quantity limit.



Plastic laminates provide a convenient alternative packaging being easy to handle and store. The standard laminates have a transmission window of 0.005" and produce minimum attenuation for photons and higher energy beta particles.

Two sizes are available, 3.75″x2.25″, and a 1″ diameter circular disc. Other sizes are available; just let us know and we will send you a quote. Low energy x-ray, beta and alpha sources can be produced with a 80 µgm/cm2 aluminized Mylar window offering excellent transmission for Fe-55, C-14 and Po-210.

PEO Detection Page 431 of 461

Contact one of our product specialists.

PEO Detection Page 432 of 461

Disc Sources - Spectrum Techniques



Disc sources are available in 1'' and 2'' diameter plastic disc with the 1'' being standard and other sizes on special order.

The Po-210 alpha source is of open window construction with the source material bonded to the surface of a silver foil mounted in the recess of the plastic disc. This design yields excellent emission of alpha particles without window losses.

Contact one of our product specialists.



PEO Detection Page 433 of 461

Radiation Detection > Sources

Isotope Generator - Spectrum Techniques



This Cs-137/Ba-137m Isotope Generator is used to conduct experiment in schools and universities to demonstrate the properties of radioactive decay. Based on the original Union Carbide patented design, it offers exceptional performance combined with ease of use and safe operation.

Contact one of our product specialists.

If you prefer to continue your search for additional information, try this <u>link</u>.



PEO Detection Page 434 of 461

Radiation Detection > Sources

Tube Sources - Spectrum Techniques



We now offer a selection of exempt quantity gamma sources encapsulated in standard size test tubes or rods for use with well type radiation detectors. These sources are exempt sources and of nominal activity. The isotope is deposited as a point source in the bottom of the tube and is then sealed with epoxy.

Contact one of our product specialists.



PEO Detection Page 435 of 461

Radiation Detection > Sources

Needle Sources - Spectrum Techniques



Needle sources are used to generate a point source of radiation inside cloud chambers for demonstrating alpha and beta radiation tracks. Three different types of isotopes are offered, a pure alpha emitter, a pure beta emitter and a combined alpha /beta emitter.

The sources are constructed by depositing a small, license exempt quantity of radioactive isotope onto the eye of a standard sewing needle which is mounted on a test tube stopper for insertion into the cloud chamber. The needle and stopper are placed into a test tube for protection during shipping and storage.

Contact one of our product specialists.



PEO Detection Page 436 of 461

WASTE & RECYCLING MANAGEMENT





Partner Ludlum Measurements Inc.





Ludlum Measurements, Inc. is a trusted global provider of radiation detection and monitoring instruments, offering rugged, accurate solutions for personnel safety, environmental protection, and security screening. Since 1962, their

equipment has been used worldwide in applications ranging from nuclear power and emergency response to border protection and critical infrastructure monitoring.

Product offering





Model 375-600 Digital Area Monitor for Small Areas



Model 2100-1 Sample Counter



Model 329-32 Laundry Contamination Monitor



Model 2100 Conveyorized Sample Counter



Model 375P-3500 Conveyor Monitor



Model 375P-1000 Outdoor Monitoring System



Model 375P-2000 Outdoor Monitoring System



HLM-22, HLM-3G Laundry Monitor



PEO Detection Page 438 of 461

HLM-6GP Laundry Monitor



PEO Detection Page 439 of 461





PEO Detection Page 440 of 461

Radiation Detection > Laboratory Equipment

Model 2100-1 Sample Counter



The Model 2100-1 manually operated sample counting system processes sample steel slugs to determine whether any radioactive impurities exist. The gamma radiation counting system is a table-mounted, fully integrated design that includes a gamma detector, sample tray, and controller.

The counting electronics incorporates two channels to distinguish between low and high energy gamma isotopes. All parameters, such as alarm point and count time are useradjustable from the front panel LCD touch screen via a simple menu selection.

Measurement results for each sample are displayed on the backlit LCD. An Ethernet port reports all results and system status in real time for remote data logging and alarm annunciation. Visual and audible alarms are annunciated via the system's LCD and rear panel mounted buzzer respectively. A built-in relay provides a method for driving an external horn/strobe (available as an option).

One rear panel mounted USB port enables connection to either a keyboard or barcode reader device for the purpose of entering sample IDs.

Features

- High Sensitivity Gamma Detector
- Separate High & Low Gamma Energy Sampling
- User-Adjustable Parameters
- Color LCD Touch Screen
- Ethernet Connectivity
- Remote Alarm Output
- USB Ports for ID Input Devices



PEO Detection Page 441 of 461

Model 329-32 Laundry Contamination Monitor



PEO Detection Page 442 of 461

Radiation Detection > Laboratory Equipment

Model 2100 Conveyorized Sample Counter



The Model 2100 automated sample counting system processes sample steel slugs to determine whether any radioactive impurities exist. The gamma radiation counting system is a table-mounted, fully integrated design that includes a gamma detector, sample conveyor, and controller to facilitate automated processing.

Once the sample has been positioned on the conveyor, an infrared sensor automatically initiates conveyance of the sample into the lead shielded detector where it is counted for a predetermined time. Once the count is completed, the conveyor again advances until the sample drops into a discard container.

The counting electronics incorporates two channels to distinguish between low and high energy gamma isotopes. All parameters, such as alarm point and count time are useradjustable from the front panel LCD touch screen via a simple menu selection.

Measurement results for each sample are displayed on the backlit LCD. An Ethernet port reports all results and system status in real time for remote data logging and alarm annunciation. Visual and audible alarms are annunciated via the system's LCD and rear panel mounted buzzer respectively. A built-in relay provides a method for driving an external horn/strobe (available as an option).

One rear panel mounted USB port enables connection to either a keyboard or barcode reader device for the purpose of entering sample IDs.



PEO Detection Page 443 of 461

Model 375P-3500 Conveyor Monitor



PEO Detection Page 444 of 461

Model 375P-1000 Outdoor Monitoring System



PEO Detection Page 445 of 461

Model 375P-2000 Outdoor Monitoring System



PEO Detection Page 446 of 461

HLM-22, HLM-3G Laundry Monitor



PEO Detection Page 447 of 461

Partner Helgeson Scientific Services (HSS)





Helgeson Scientific Services (HSS) designs and manufactures advanced radiation monitoring systems focused on personnel safety, facility protection, and waste control. Their portfolio includes whole-body monitors, portal

detection systems, and waste management solutions—each developed to support the safe handling of radiological materials in critical environments.

Product offering

HS-DRUM - Waste characterization system for drums



HS-FRM - Free release monitor for drums, containers and big bags



HS-OTM - Object and tool monitors for objects monitoring



Complete storage and treatment plant for NORM wastes



Descaling system for NORM waste



Soil segregation unit



PEO Detection Page 448 of 461

HS-DRUM - Waste characterization system for drums



PEO Detection Page 449 of 461





PEO Detection Page 450 of 461





PEO Detection Page 451 of 461

Complete storage and treatment plant for NORM wastes



PEO Detection Page 452 of 461

Descaling system for NORM waste



PEO Detection Page 453 of 461

Soil segregation unit



PEO Detection Page 454 of 461

Partner SDEC France





SDEC France is a specialized manufacturer of environmental monitoring and laboratory equipment, offering comprehensive solutions for waste and recycling management, environmental monitoring, and laboratory applications. With over

30 years of experience, the company designs and produces high-quality instruments to support professionals in environmental science, agronomy, and radiological safety.

Product offering













Isokinetic Sampling Probes - SDEC



The Isokinetic Sampling Probes (SDEC) are recognized in the nuclear industry and adapted for all type of sampling in single-point or in multi-points.



Isokinetic Sampling Probes features:

- quality and durability
- high level of finish
- customized manufacture
- the best price

Read more about the Isokinetic Sampling Probes on the <u>SDEC website</u>

PEO Detection Page 456 of 461

Carbon 14 Sampler with 2 Vials - SDEC



The Carbon 14 Sampler with 2 Vials (SDEC) has been designed to capture CARBON gas (CO_2 or CO). It can be equipped with a cooling system that will prevent all sample loss due to evaporation in the feeding bottles.

Carbon 14 Sampler with 2 Vials features:

- in compliance with the nf m60-812-1 norm
- excellent trapping efficiency (close to 99%)
- cooling system to increase sampling length (option)
- good price
- constant evolution of the product
- easy to use
- connectable to all sampling lines

Read more about the Carbon 14 Sampler with 2 Vials on the <u>SDEC website</u>



PEO Detection Page 457 of 461

Carbon 14 Sampler with 4 Vials - SDEC



The Carbon 14 Sampler with 4 Vials (SDEC) brings original solutions in the exploitation of sampling systems for carbon gas and carbon water. This sampler is mainly used for the detection of chimney rejects and carbon wastes degassing.



Carbon 14 Sampler with 4 Vials features:

- excellent trapping efficiency (close to 99%)
- cooling system to increase sampling length (option)
- good price
- constant evolution of the product
- easy to use
- connectable to all sampling lines
- in compliance with the NF M60-812-1 norm

Read more about the Carbon 14 Sampler with 4 Vials on the <u>SDEC website</u>

PEO Detection Page 458 of 461

Tritium Sampler with 2 Vials - SDEC



The Tritium Sampler with 2 Vials (SDEC) offers original solutions for the operation of collection systems for tritium gas and tritiated water. This collection system is mainly used for the detection of stack waste and the degassing of tritium waste.



Tritium sampler with 2 bottles features:

- good pedaling efficiency
- cooling system to increase sampling length (option)
- good price
- constant evolution of the product
- very robust
- easy to use
- can be connected to all sampling lines

Read more about the Tritium Sampler with 2 Vials on the SDEC website

PEO Detection Page 459 of 461

Partner Bertin Instruments





Bertin Instruments is a global provider of advanced radiation detection and environmental monitoring solutions, specializing in handheld monitors, personal electronic dosimeters, environmental monitoring systems, and waste &

recycling management technologies. Their instruments are designed to meet the rigorous demands of nuclear facilities, emergency response teams, and environmental agencies.

Product offering



PEO Detection Page 460 of 461

Coriolis Consumables - Bertin Instruments



Coriolis consumables are part of the cyclonic technology: the separation of the airborne particles from the air flow is due to the air flow rate, the air intake geometry, the design of the cones and the collection liquid (surfactant in low concentration).



Introduction video

Consumables

- cones & caps : The cones and caps are designed specifically for the use with the Coriolis μ
- collection liquid doses
- LTM consumables : collection liquid in bottle and tubing kit
- air intake : depending of your research you can adapt the air intake
- standard air intake : air take compatible with all Coriolis for classical samplin
- LTM air intake : dedicated to long time monitoring collection (only compatible with the LTM platform)
- 25 mm connection LTM : designed to propose a hose attachment (testing chamber, confined space ...)

Advantages Coriolis consumables

- dedicated cones to perform high efficiency collection
- adaptor to connect to any 25 mm diameter connector
- easy set up with calibrated 15 ml collection liquid dose
- liquid collection compatible with any downstream experiment
- cones available sterile and non-sterile

Please contact our product specialist.

PEO Detection Page 461 of 461